

Piper Tomahawk



List of parts:

- | | |
|--------------------------------------|---------------------------------|
| 1. Clear cockpit canopy (2 pcs) | 11. Control wheel (2 pcs) |
| 1a. Spare Master for cockpit canopy | 12. Pitot tube |
| 2. Fuselage with vertical stabiliser | 13. Antenna |
| 3. Horizontal stabiliser (2 pcs) | 14. Propeller |
| 4. Instrument panel (2 pcs) | 15. Nose landing gear and wheel |
| 5. Pilot seat (2 pcs) | 16. Wing |
| 6. Roll-bar | |
| 7. Antenna | |
| 8. Main wheel (2 pcs) | |
| 9. Main landing gear leg (2 pcs) | |
| 10. Footstep (2 pcs) | |

General instructions:


Resin parts should be cleaned of flash, thoroughly cleaned using solvent and washed in detergent.

For attaching resin parts use solely cyano-acrylate glue.

Transparent parts should be glued using epoxy, white or crystal clear glue.

Notes:

- all gear legs are enforced with wire
- model is already nose-balanced, so there is no need to add weight to avoid tail-sitting.
- small parts (additional antennas, position lights) should be scratchbuilt.

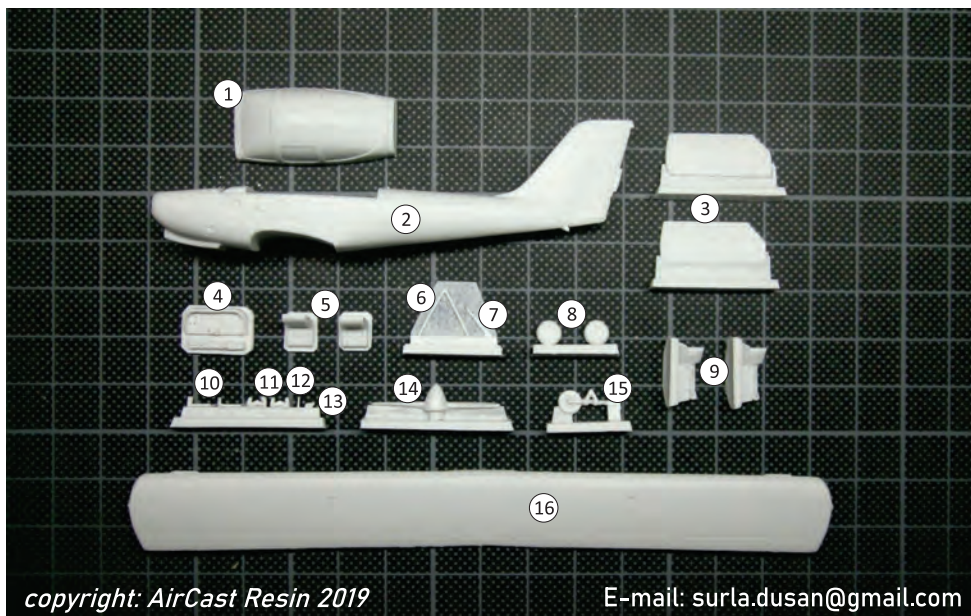

copyright: AirCast Resin 2019

E-mail: surla.dusan@gmail.com

Decal placement and painting tips


1. Fuselage stripe (left)
2. Fuselage stripe (right)
3. Tail
4. Wing stripe (left)
5. Wing stripe (right)

propeller:
front light gray, with double white tip stripe
backside painted black



Notes:

- decals are home-made, so they require a bit of attention when cutting and applying.
- For painting and detailing please use references available on internet

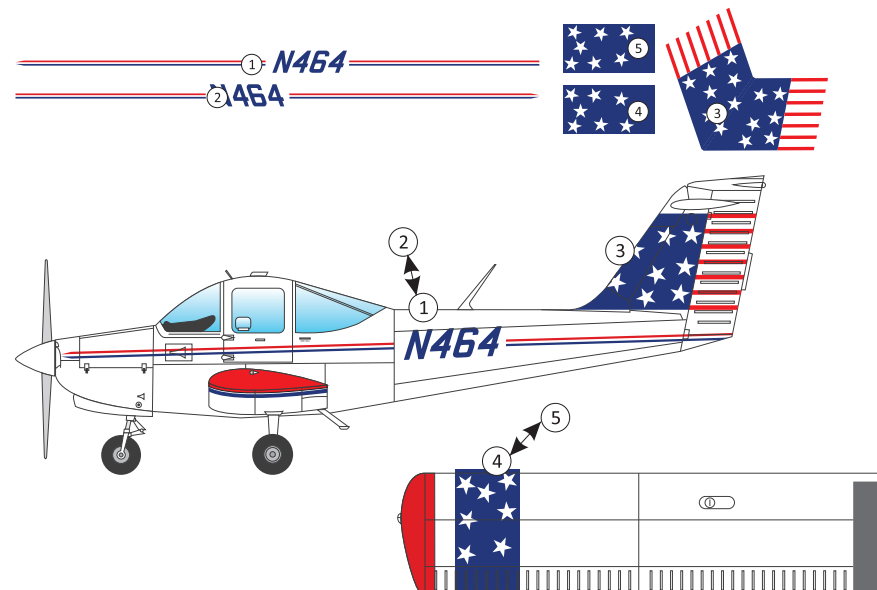

*drawings are not to scale



✉ surla.dusan@gmail.com

 <https://www.facebook.com/AirCastResin/>