

EAGLE STRIKE




48197

Eyes in the Sky

RF-4B/C Phantoms Part I

Suggested Kit: Hasegawa RF-4 Family.

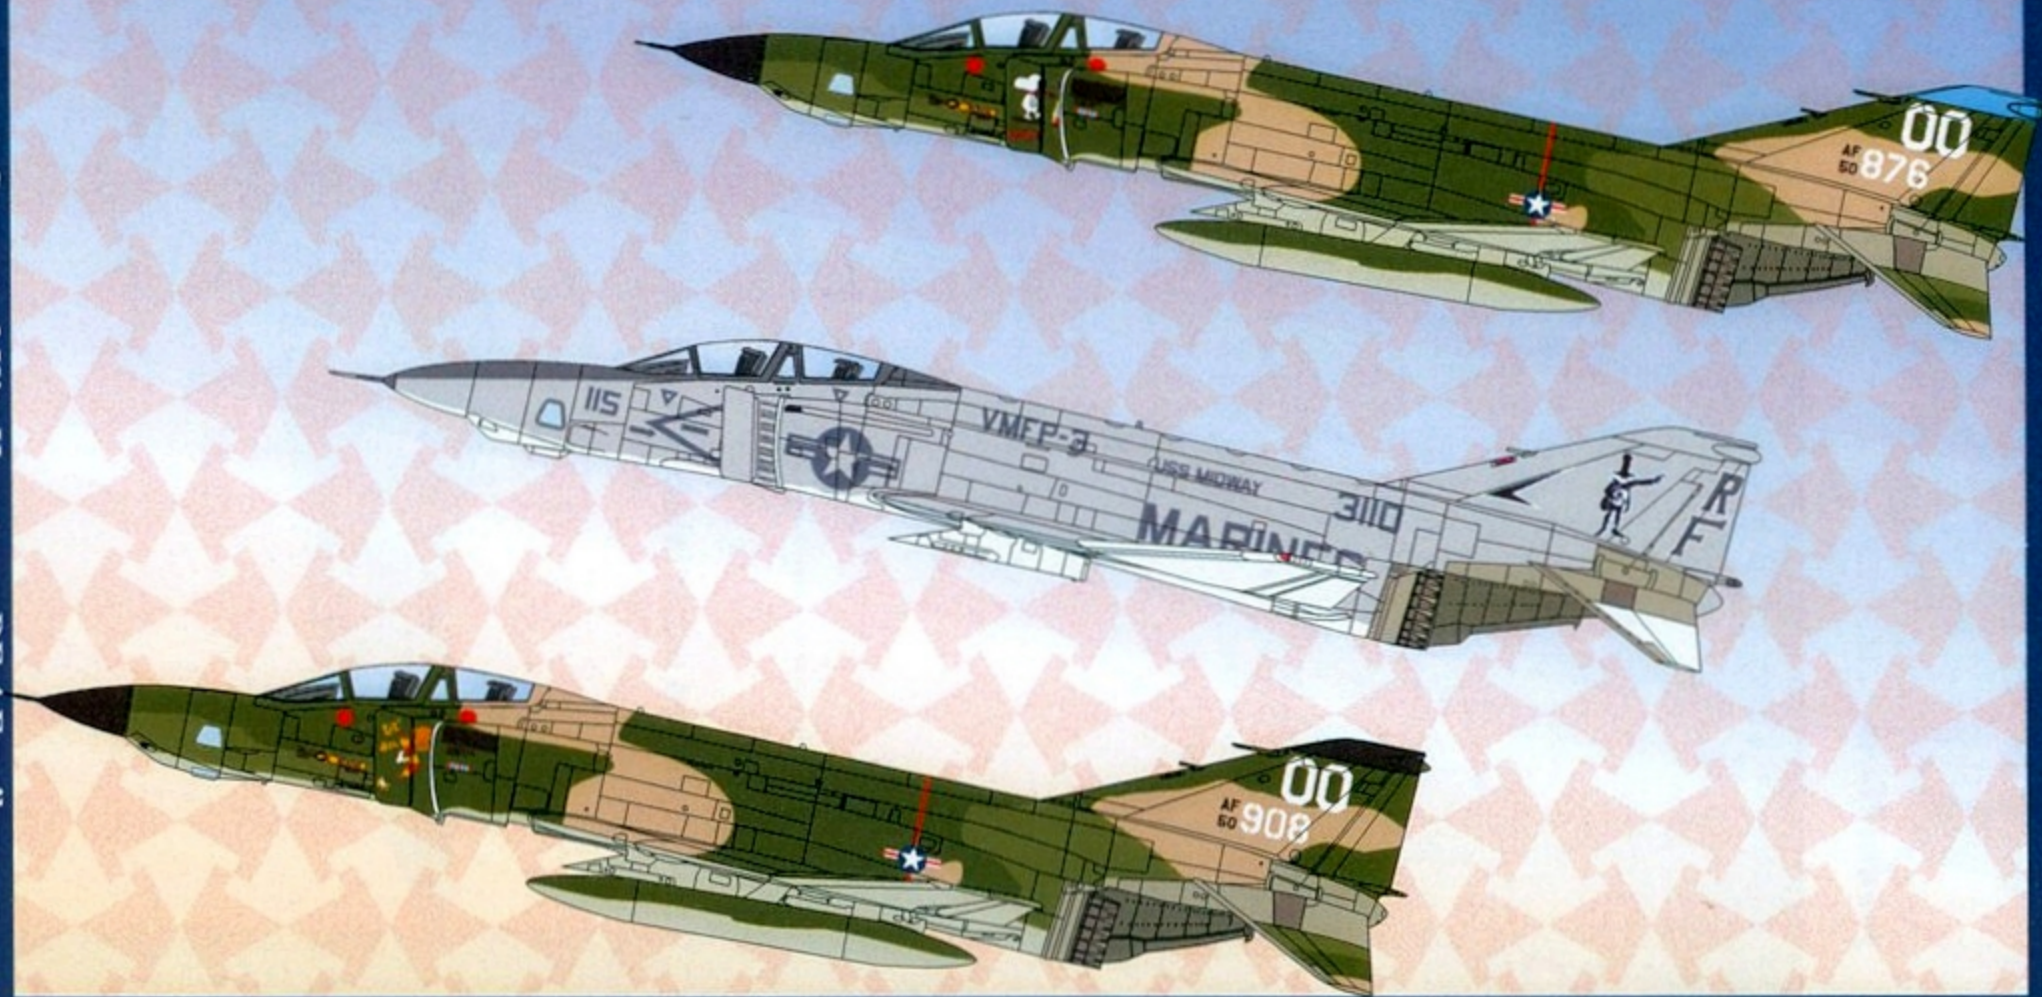

Eyes in the Sky




Part I



Fin caps are provided for some A/C on these sheets. However, we believe it is so much easier to paint these solid color caps and the result is 300% better. Try it!!



Aircraft 2 - RF-4B BuNo 153110, VMFP-3, USMC, Kadena AB, Okinawa, February 1982. Standard Gull Gray over White finish, Flat Black antiglare panel.

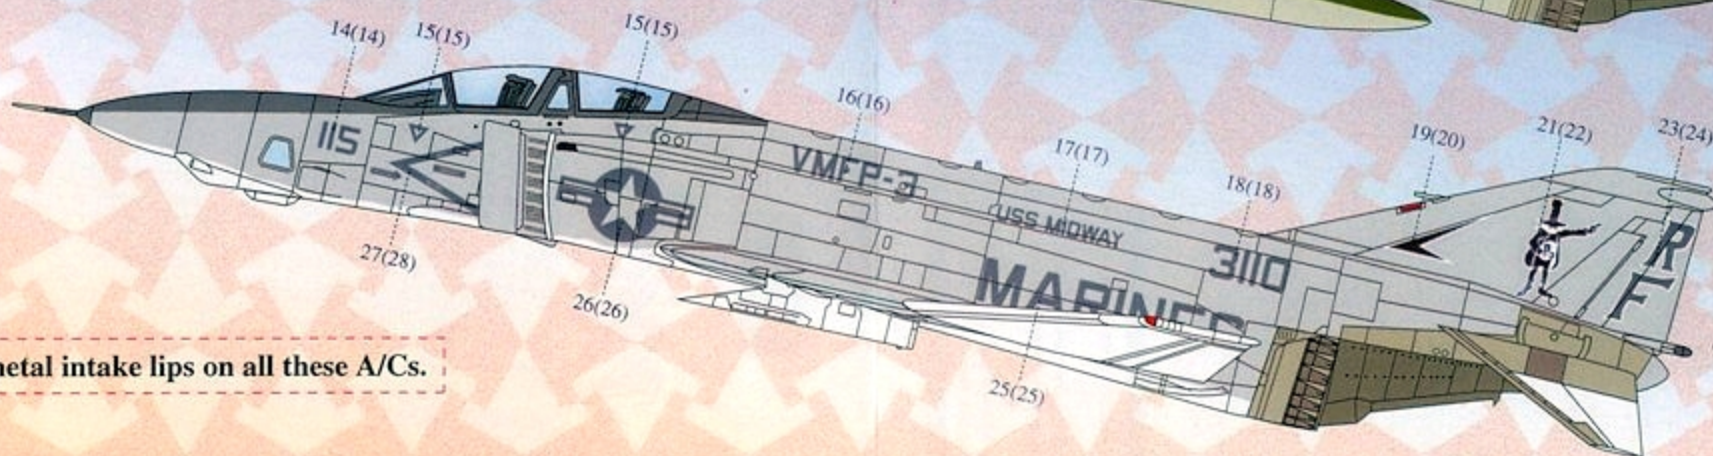

Aircraft 1 - RF-4C 65-876 "SNOOPY-WAR'S HELL", 11thTRS, 432nd TRW, Udorn RTAB, 1969. Standard SEA camouflage with a Blue fin cap.

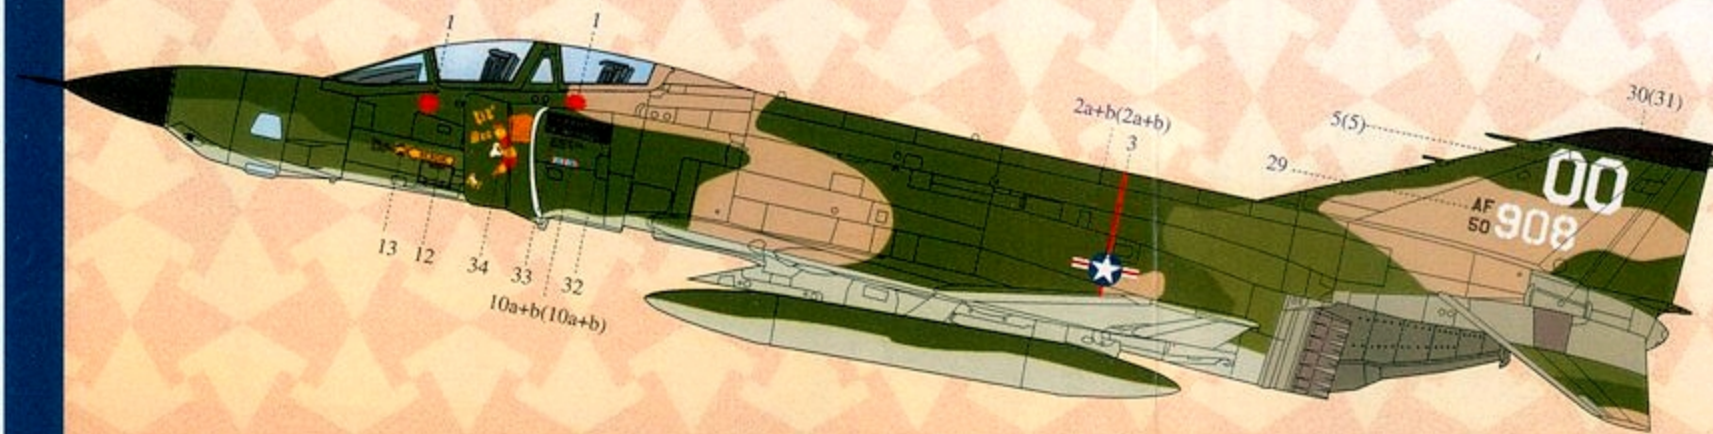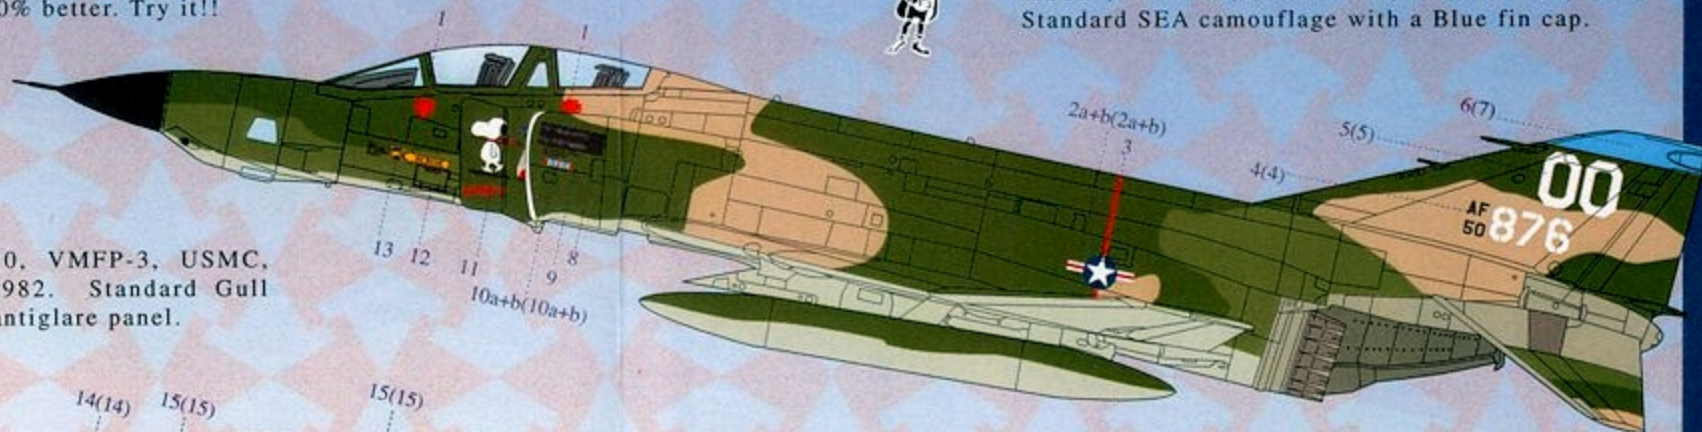


Aircraft 3 - RF-4C 65-908 "LIL' BEE", 11thTRS, 432nd TRW, Udorn RTAB, Oct. 1969. Standard SEA camouflage with Black tank tips and fin cap.

These A/Cs do not have slated wings.

Suggested Kit:

- Hasegawa RF-4 Family.

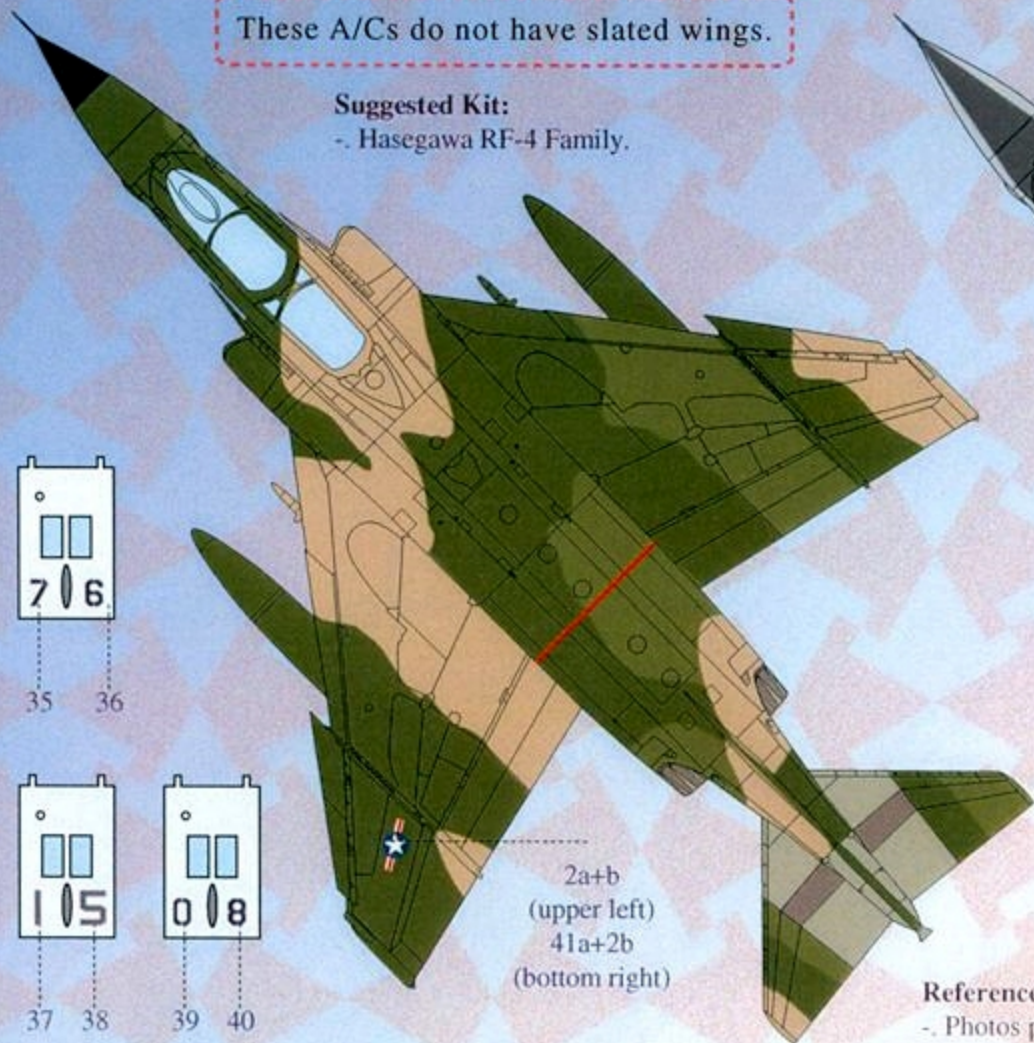

F.B. 33531
SAND



INT. GREEN




MED. GREEN



F.B. 36632
LT. GRAY



LT. BULL GRAY

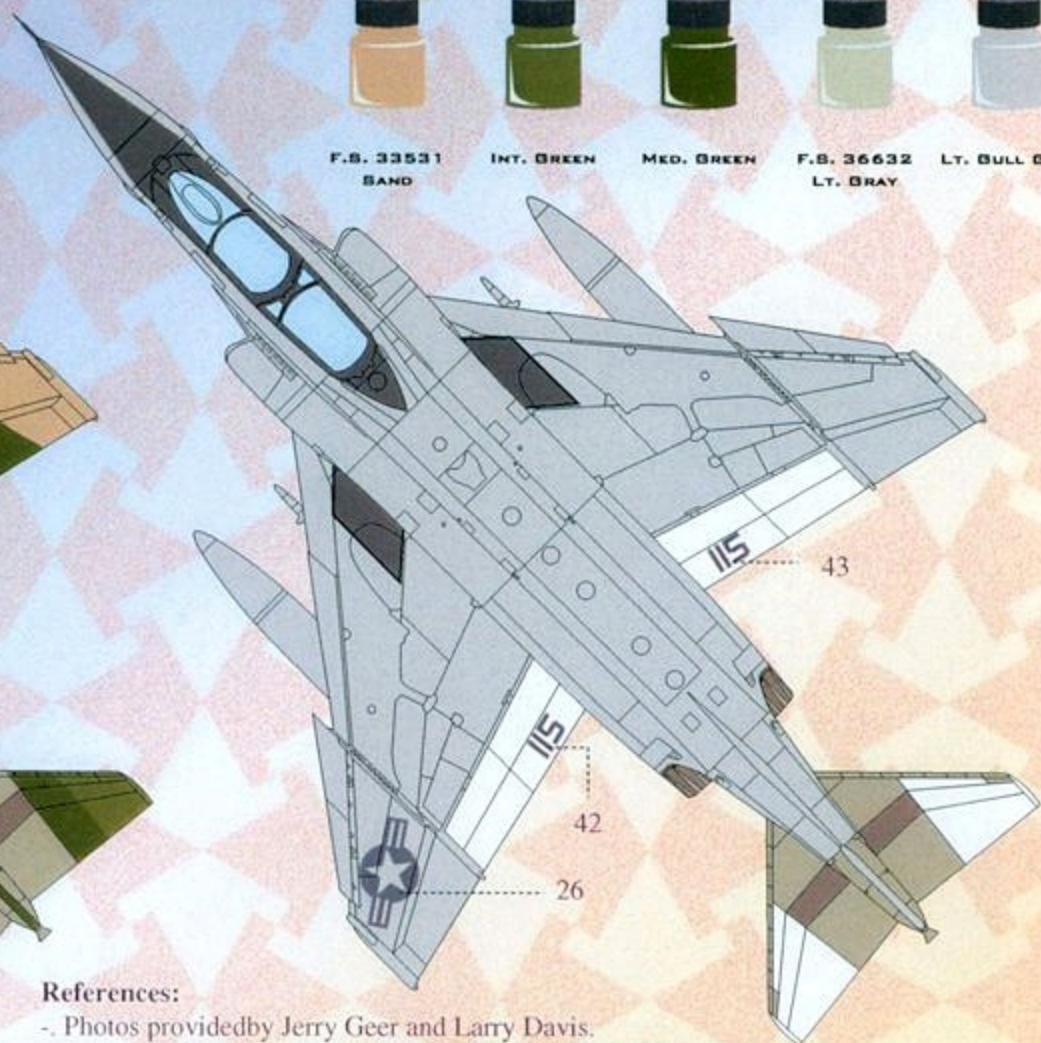

References:

- Photos provided by Jerry Geer and Larry Davis.

OUR THANKS TO THEM!!

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow

the setting solution to dry for about 3-5 minutes.

4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).



12902 SW 132nd ct. Miami, FL. 33186
U.S.A.
Ph: (786) 293-0411, Fax: (786) 293-5822.

**EAGLE STRIKE
Productions**

Detail for
A/Cs 1 and 3

**PLT. LARRY KROTZ
NAV. DICK BOWER**

12200 SW 132nd Ct. Miami, FL 33186
A.F. SERIAL NO. 87-554

