


LIMITED EDITION!

CEB48207  
CED72207

# EA-6B

## Prowlers Part 3

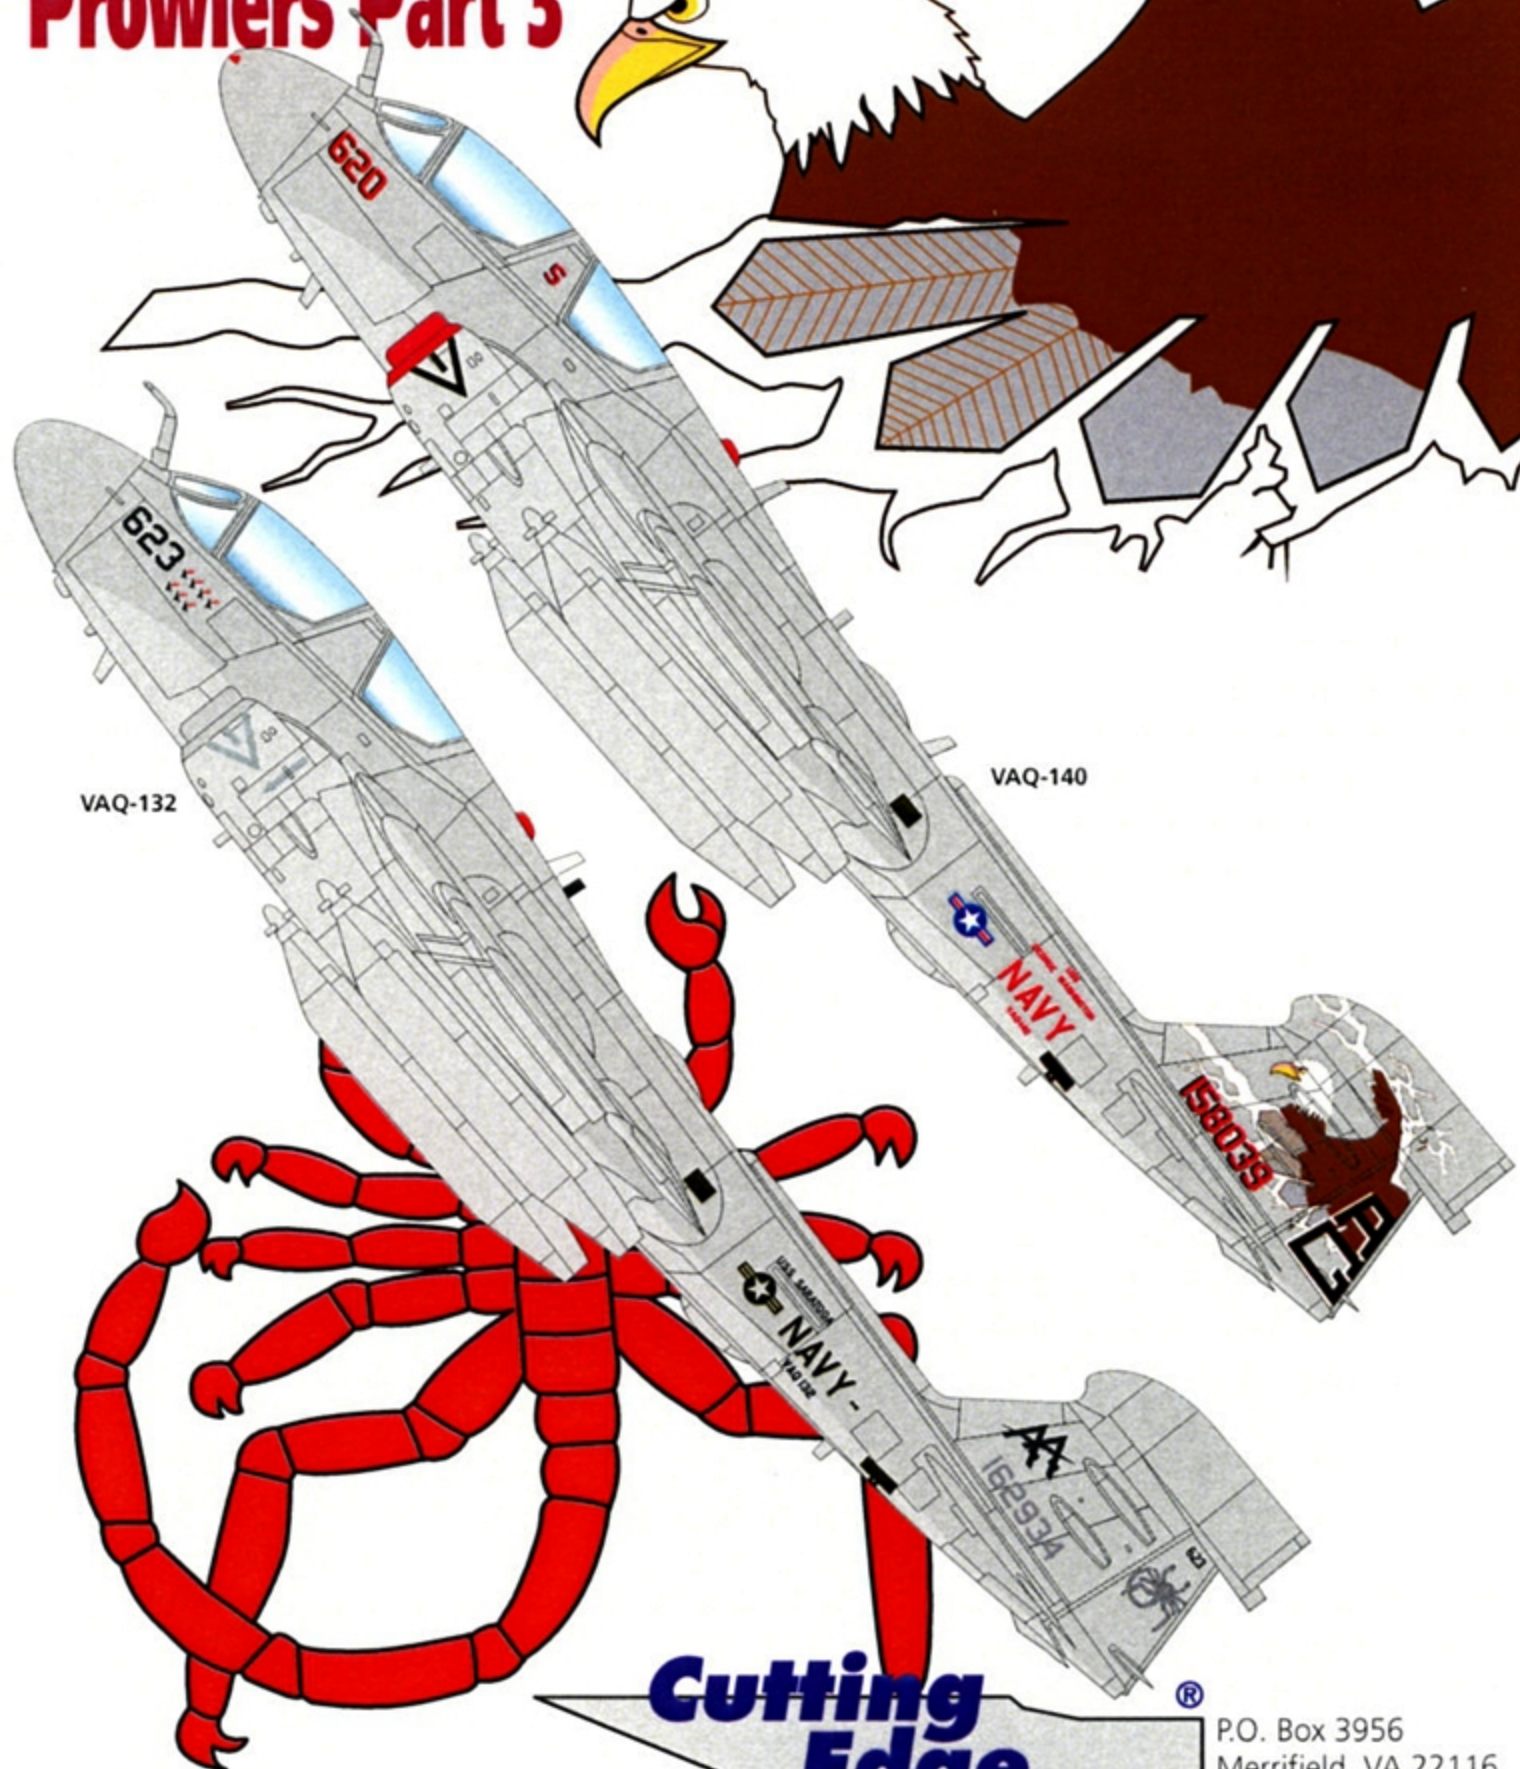

Recommended kit:  
Monogram EA-6B




**Cutting  
Edge**

®  
P.O. Box 3956  
Merrifield, VA 22116  
USA  
**MODELWORKS** [www.meteorprod.com](http://www.meteorprod.com)

CED48207  
CED72207

# Prowlers Part 3

(same jet)  
Bu No 158039  
VAQ-140  
USS John C Stennis

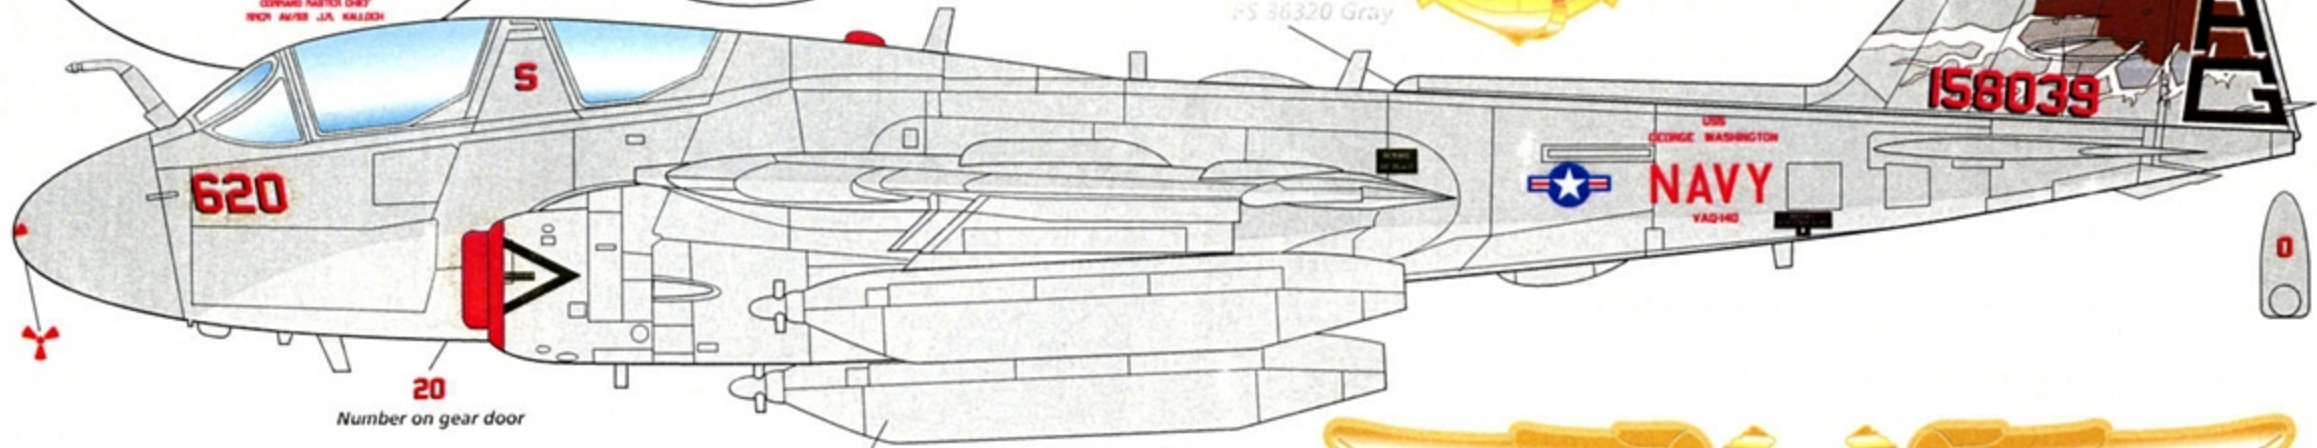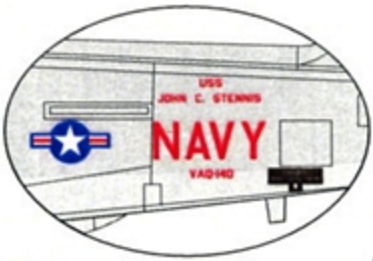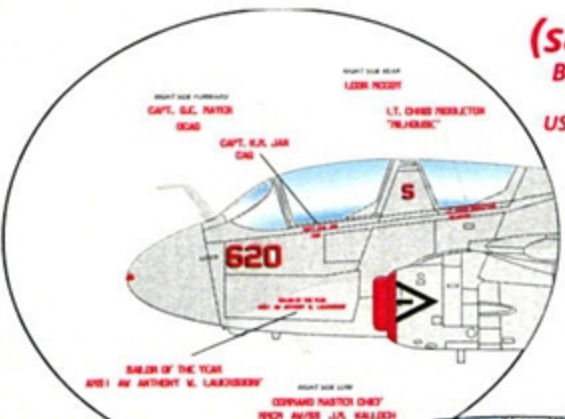


Note that drop shadows are NOT handed (they face forward on left side and rearward on right side)

**EA-6B**  
Bu No 158039  
VAQ-140  
USS GEORGE WASHINGTON




**EA-6B**  
Bu No 162934  
VAQ-132  
USS SARATOGA

Note antenna arrangement and colors

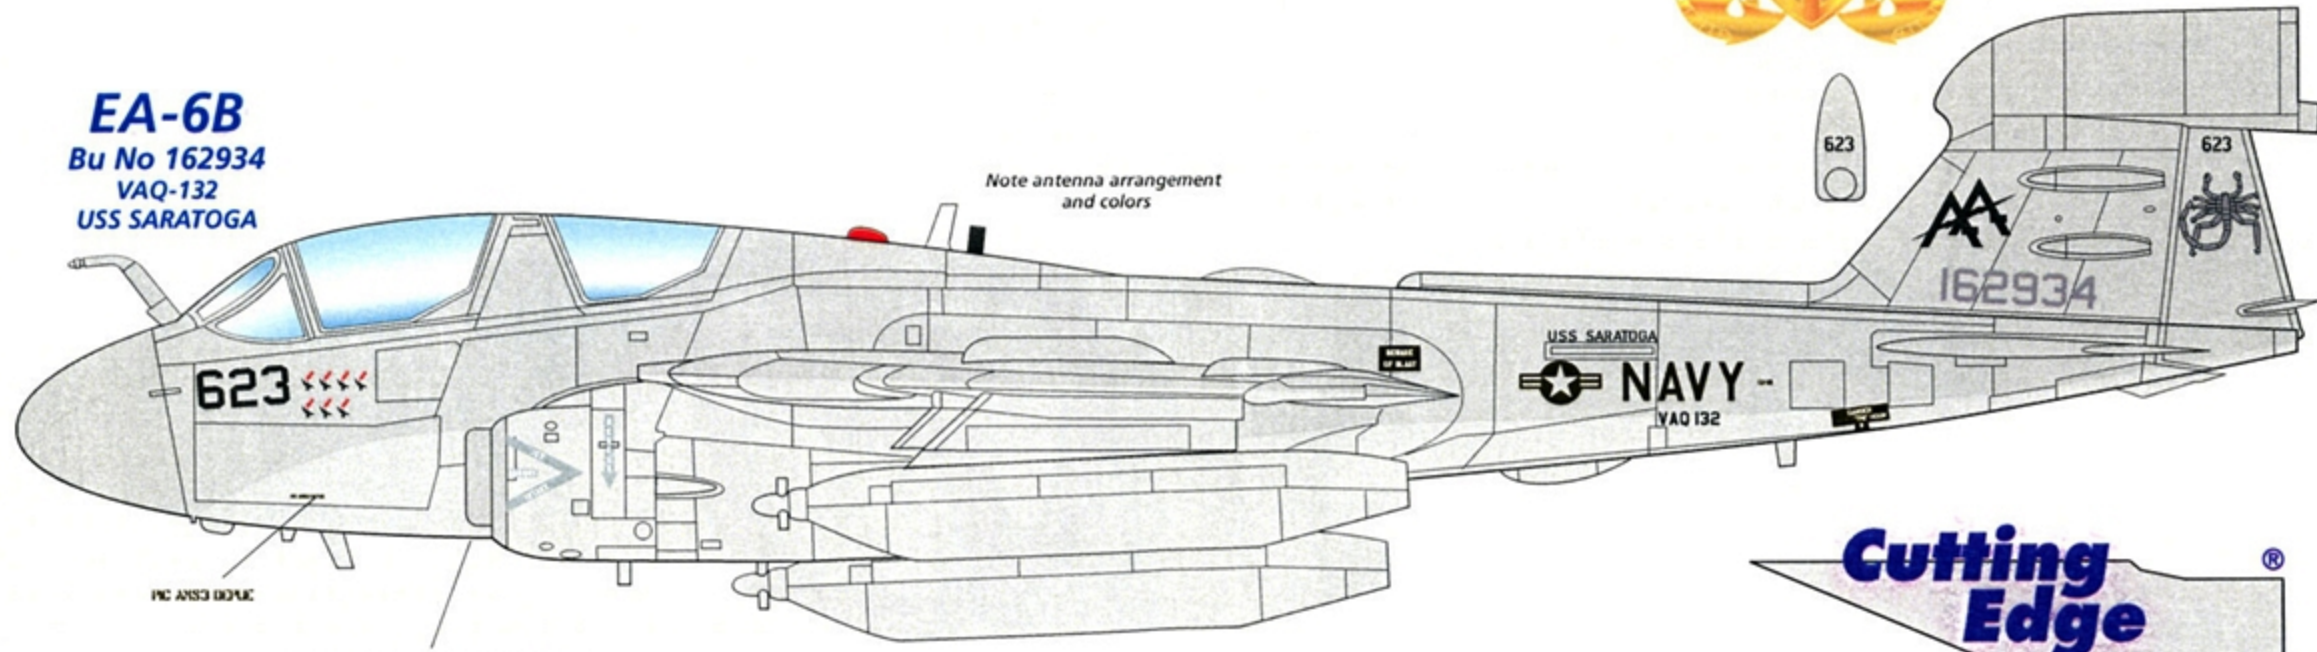

No number was visible on the nose gear door, but we've provided one for the likely case it was applied



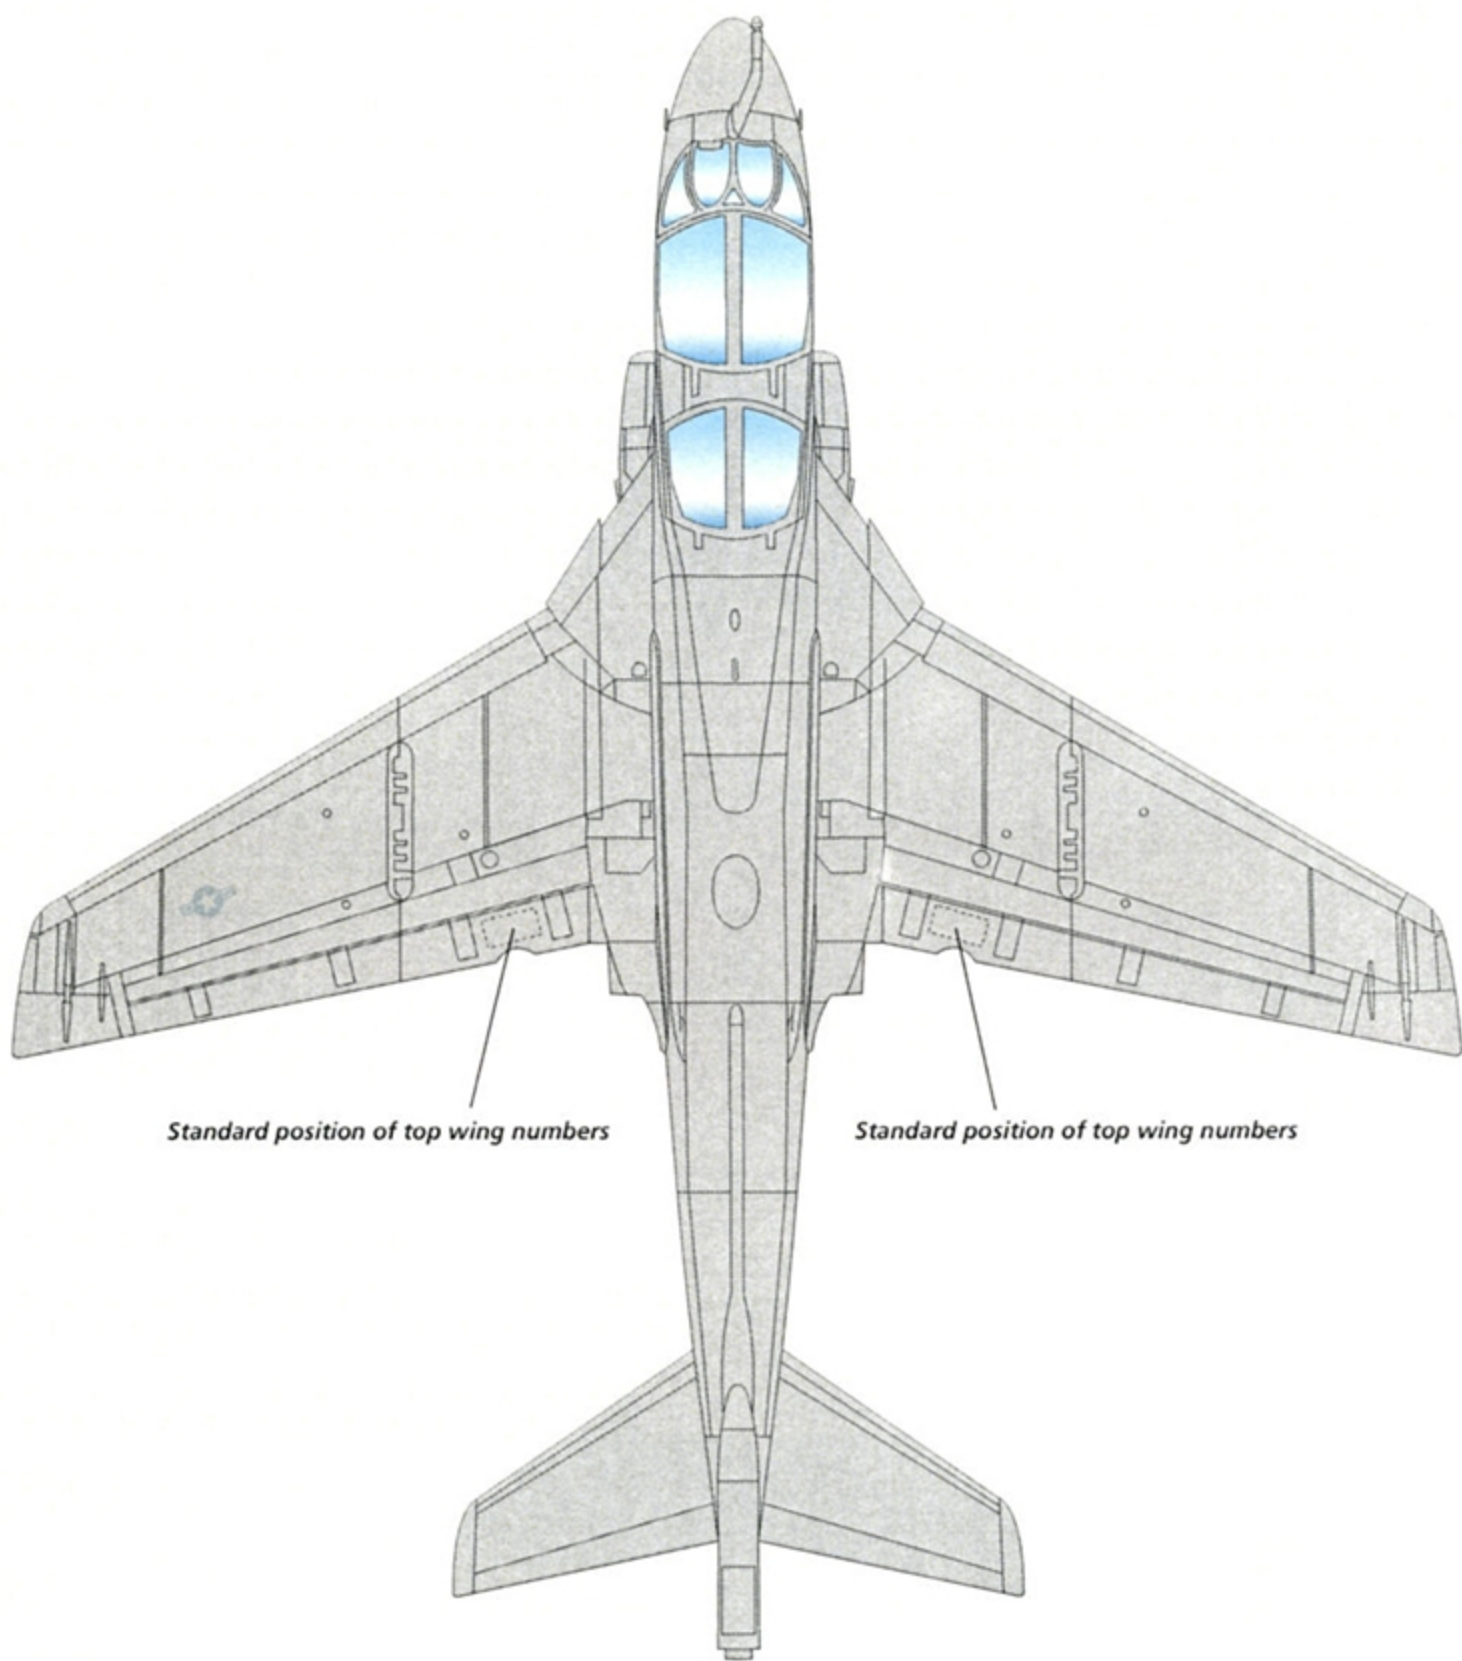

*Standard position of top wing numbers*

*Standard position of top wing numbers*

*...available from*



P.O. Box 3956, Merrifield, VA 22116 USA

☎ 703/971-0500 FAX 703/971-8111

[www.meteorprod.com](http://www.meteorprod.com)

*Write, call, or visit our home page to order our 120+ page catalog of decals, kits, conversions, tools, books, magazines, etc., and we'll send it to you right away!*

© Cutting Edge Modelworks, 2002

## 158039

- Note that the drop shadows are NOT handed on this aircraft.

## 162934

- We do not have photos of this aircraft from the right side. We do not know the orientation of the mission marks (or if they were even applied).

## Applying the Decals

You probably already know all this stuff, so feel free to use your regular process; however, if you're new to aftermarket decals, here goes:

- Generally, use the Microscale Finishing System. We don't recommend extremely strong decal solvents such as Solvaset.
- Your model must have a smooth, glossy surface, as decals won't adhere well to matte surfaces. Use gloss paints or your favorite clear gloss overspray over matte or semigloss paint.
- Cut each subject out without trimming off the slight excess film (this helps the decal film disappear when dry).
- Put the decal in warm water that has a drop or two of liquid dishwashing soap or photo-flo for 10 seconds.
- When the decal will slide off the backing paper without forcing it, apply it to the proper position on your model. Slide the backing paper out from underneath.
- Gently blot off excess water and smooth out bubbles under the decal surface. If you wish, carefully brush on a mild decal softener such as Micro-Sol.
- When all decals are completely dry, gently wash off all excess decal adhesive.
- Finally, overcoat your model with a good quality gloss coat, followed by your choice of matte or eggshell clear topcoat.

## FS 595 Color Cross Reference

- FS 6320 Xtracolor X135, ModelMaster 1741, Gunze Sangyo H307, Mr Color 307, Polly-S 837, Pro Modeler 88-0036, Floquil 303133  
FS 6375 Pro Modeler 88-0034, Polly Scale 505304

## Bibliography

Original photos.

*Special thanks to Capt Dana "Smudge" Potts and Bryan Wilburn!!*