


EAGLE STRIKE




48067

# VNAF SKYRAIDERS

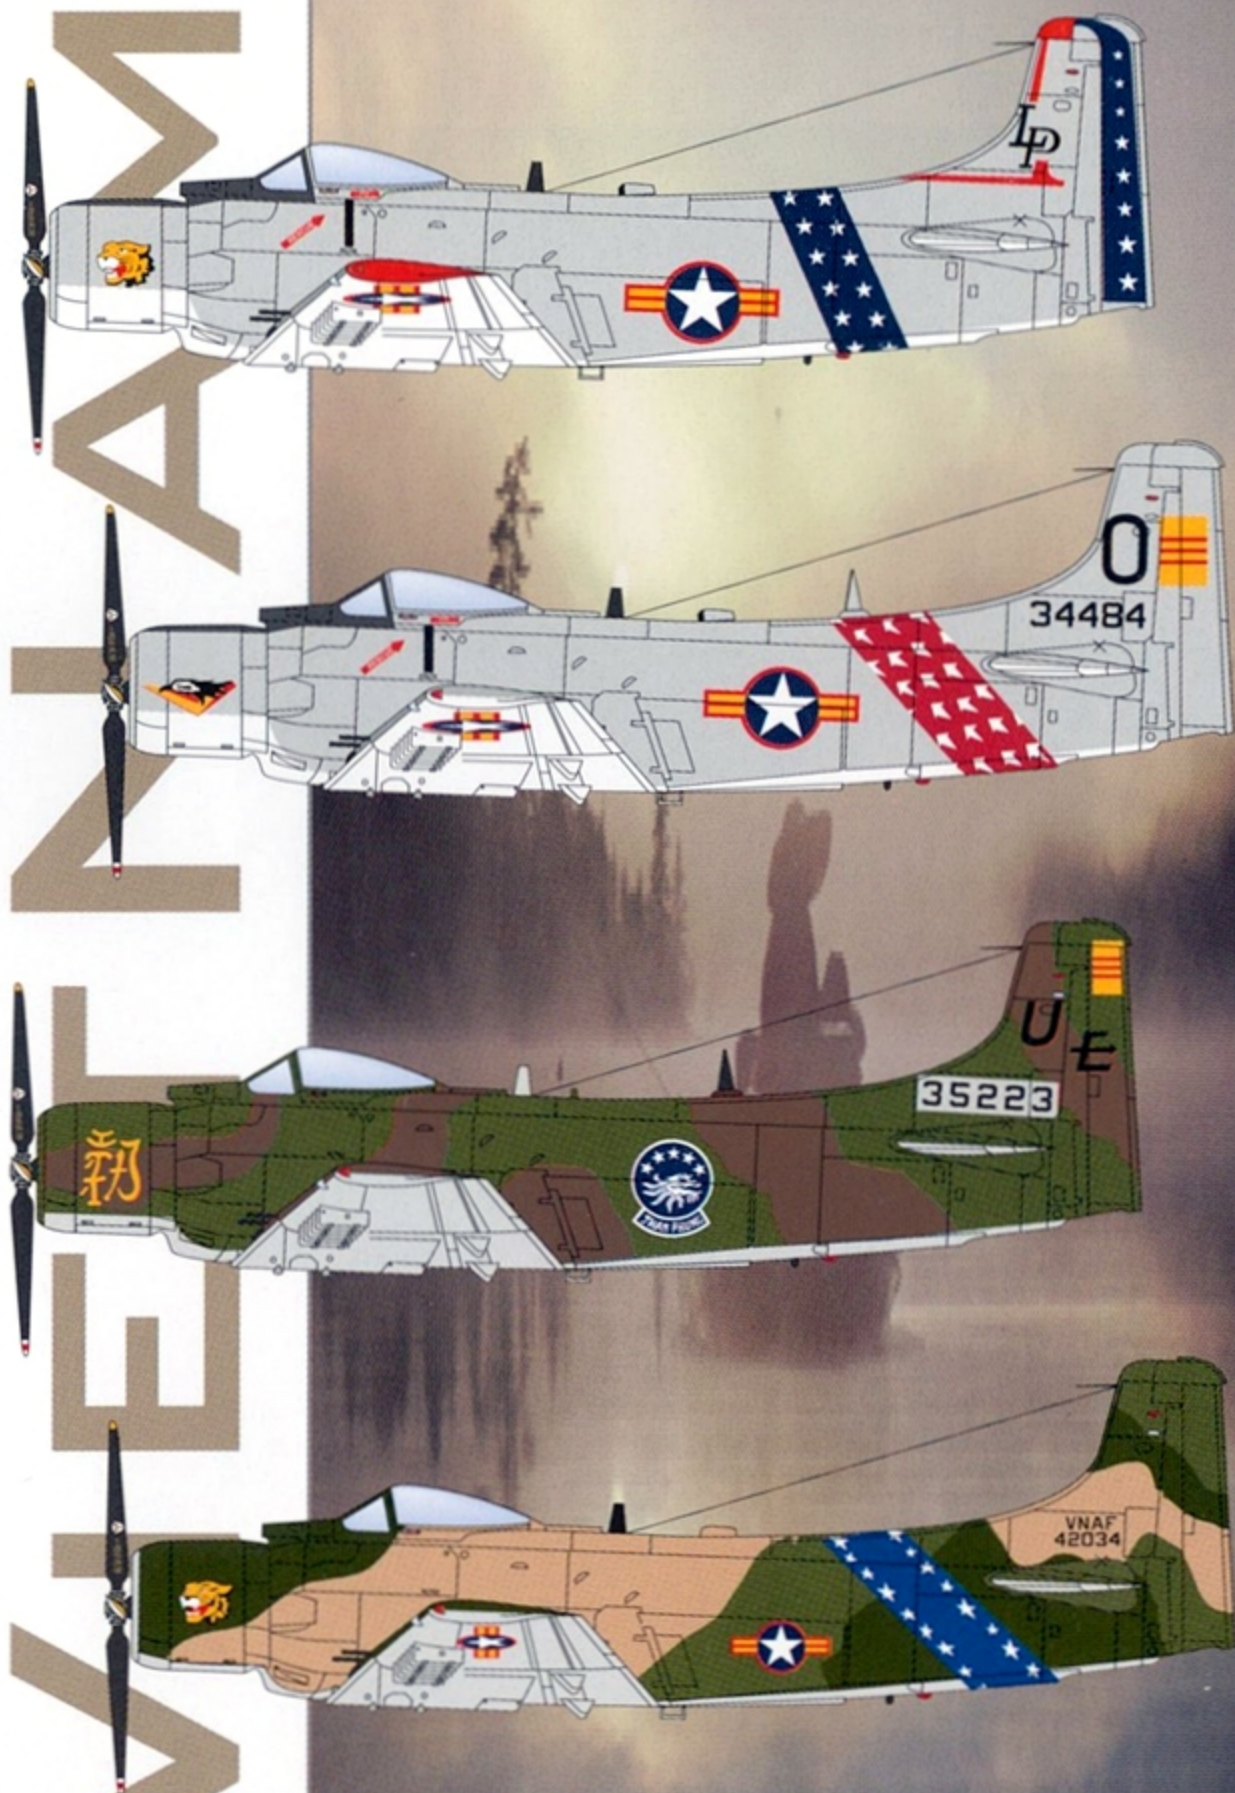


Recommended Kit: Tamiya A-1 Skyraider 1/48th

A/C Type A-1J Skyraider.  
 Pilot & Unit 516th F.S.  
 Locale & Date Da Nang, Vietnam, October 1966.  
 Camouflage & Markings Lt. Gull Gray over white was the typical US Navy Scheme of the time.  
 Remarks This being the source of the A/C, they kept their original color.

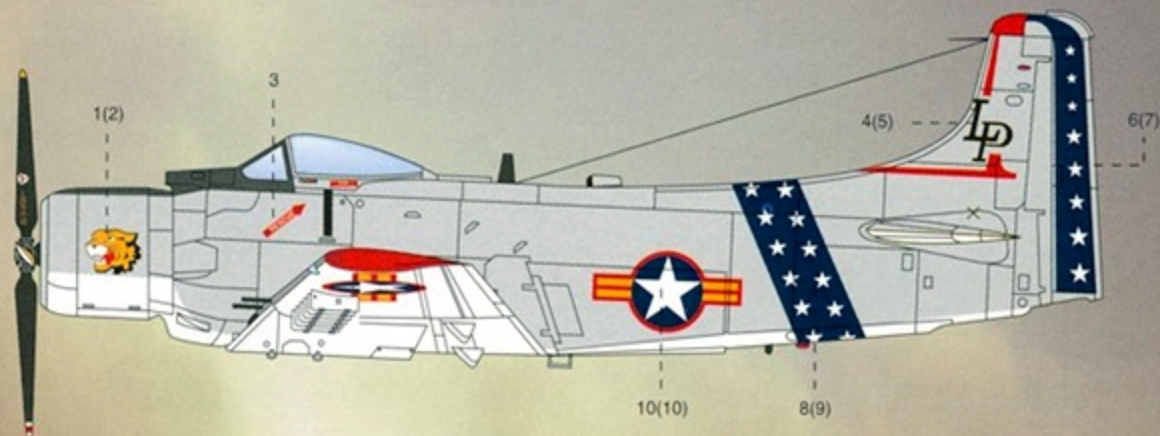


A/C Type A-1H.  
 Pilot & Unit 1st F.S.  
 Locale & Date Bien Hoa, Vietnam, 1962.  
 Camouflage & Markings As A/C 1.

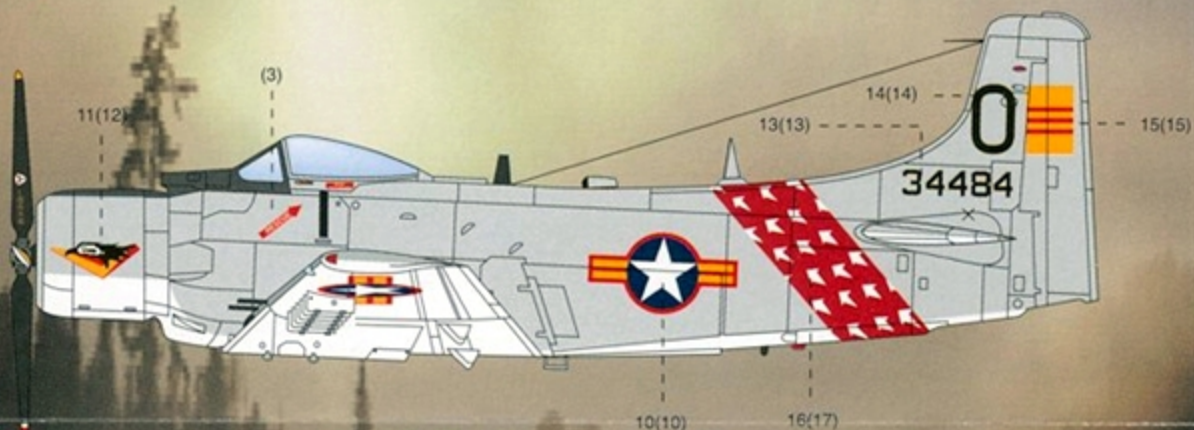

A/C Type A-1H.  
 Pilot & Unit 83rd Special Operations Group commanded by General Nguyen Cao Ky.  
 Locale & Date Tan Son Nhut, Vietnam 1965.  
 Camouflage & Markings Camouflaged in an unknown Brown/ Green/ Gray camouflage scheme.



A/C Type A-1H.  
 Pilot & Unit 516 F.S., 41st Tactical wing.  
 Locale & Date Da Nang, Vietnam, October 1967.  
 Camouflage & Markings S.E.A. Camouflage of F.S. 34079/34102/30219/36622.

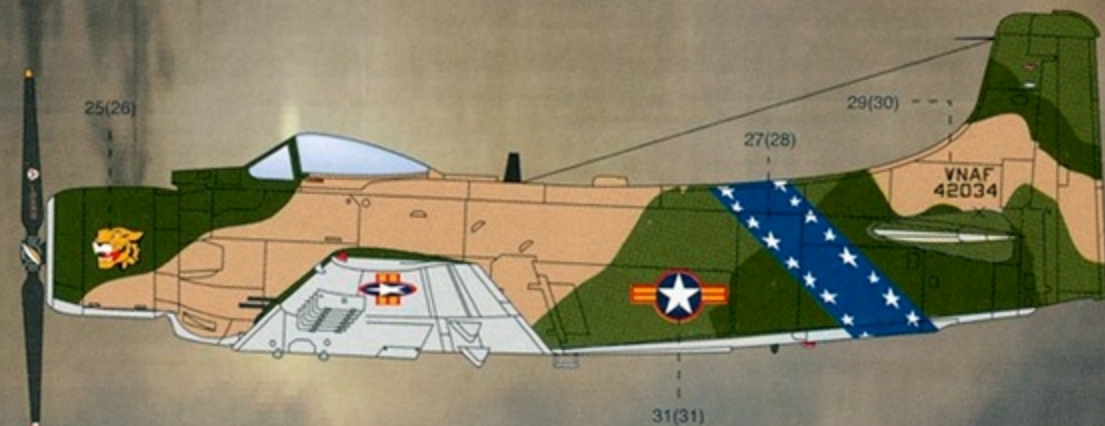

# WING INSIGNIA PLACEMENT

COLOR SCHEMES



WHITE



F.S. 34102



F.S. 36440



F.S. 34079




F.S. 36622



F.S. 30118



F.S. 30219

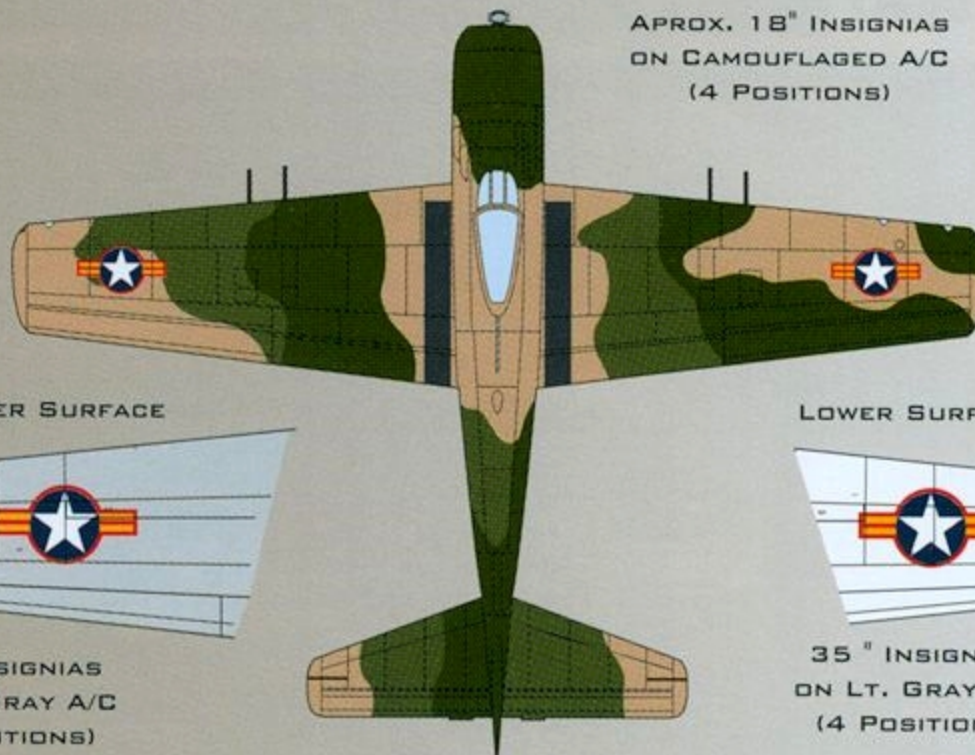

APROX. 18" INSIGNIAS  
ON CAMOUFLAGED A/C  
(4 POSITIONS)

UPPER SURFACE

LOWER SURFACE

35" INSIGNIAS  
ON LT. GRAY A/C  
(4 POSITIONS)

35" INSIGNIAS  
ON LT. GRAY A/C  
(4 POSITIONS)

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.
4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).



**EAGLE STRIKE**  
Productions  
12982 SW 132nd Ave. Miami, FL. 33186  
U.S.A.  
Ph: (786) 293-6859, Fax: (786) 293-9286.

**Recommended Kit:**  
-Tamiya A-1H Skyraider  
**Reference:**  
-VNAF South Vietnamese  
Air Force 1945 - 1975,  
Squadron Signal Publications.