

DETAILS AFTER REMOVAL FROM SPRUES

 USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R4 X2




R7 X2



R8 X2

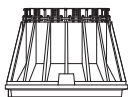

R9 X2

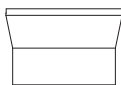

R3 X2




R5 X2




R6 X2


1 X2

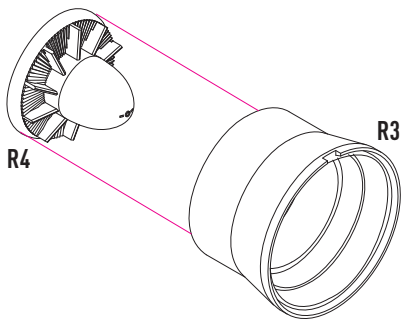


2 X2

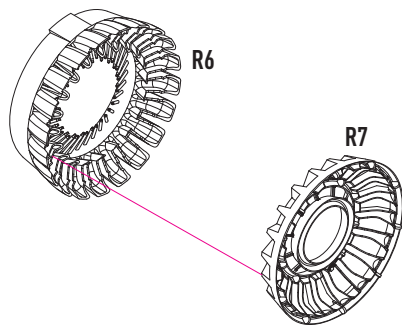


3 X2

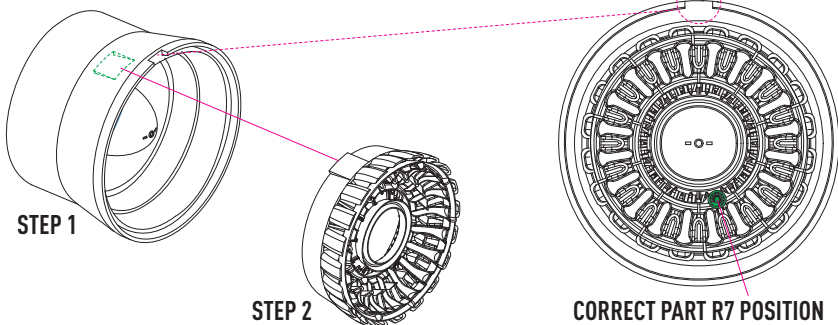

4 X2

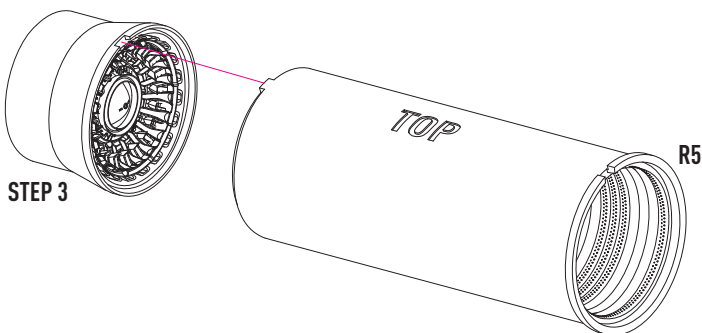

5 X2

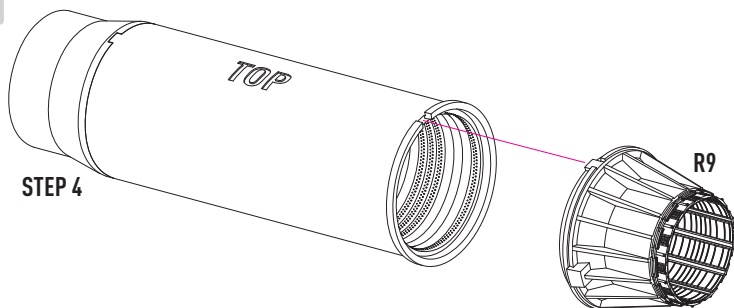

6 X2

