


Suggested Kit: Grand Phoenix F3H-2/F-3B Demon




## DEADLY DEMONS

PART 1

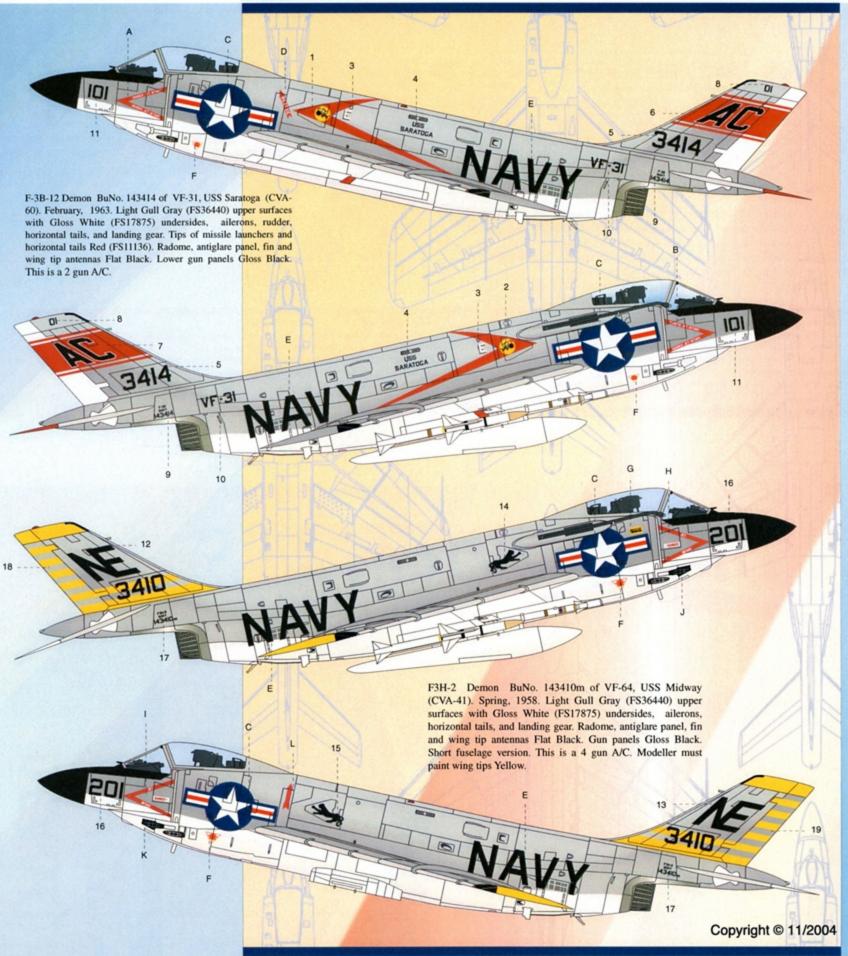

Some or all the a/c featured on these sheets have the short "Beaver" tail. You must cut down to size the rear fuselage section. Squadron/Signal In Action and Steve Ginther's book are the ideal references. Another solution is to obtain Aires item # 4232 Short Beaver Tail specifically designed for this kit. Also notice that some a/c had 2 guns removed and faired over with sheet metal. In some instances the 4 guns were removed with the purpose of saving some weigh, one of the Demon's Achilles heels.

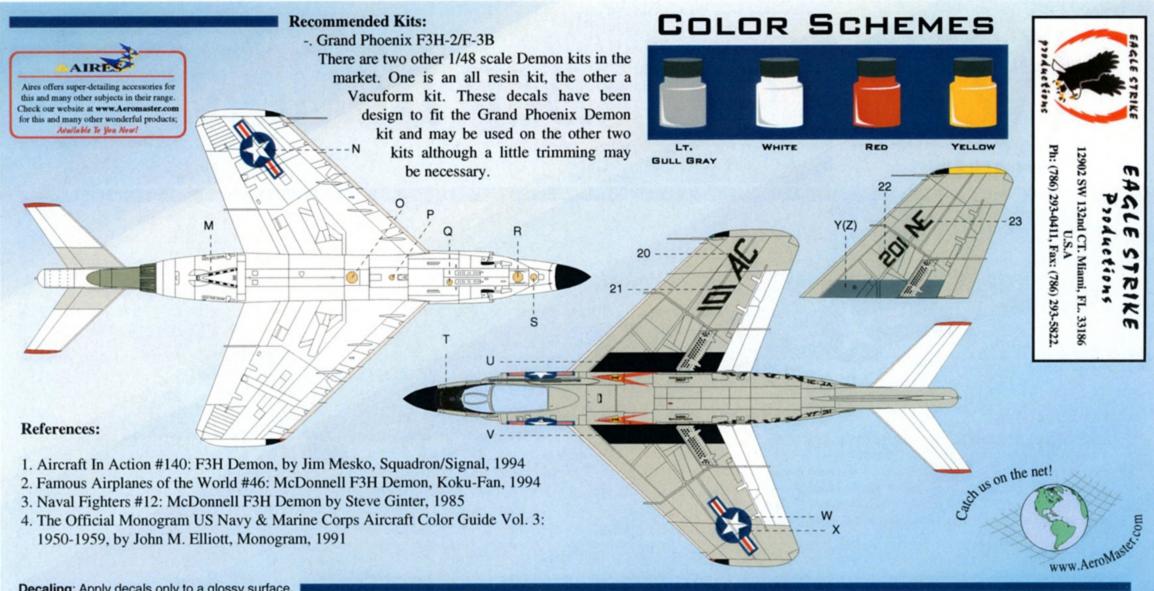

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.

2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.

3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow

the setting solution to dry for about 3-5 minutes.

4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.

5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.

6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).