




MODEL ALLIANCE

DECALS

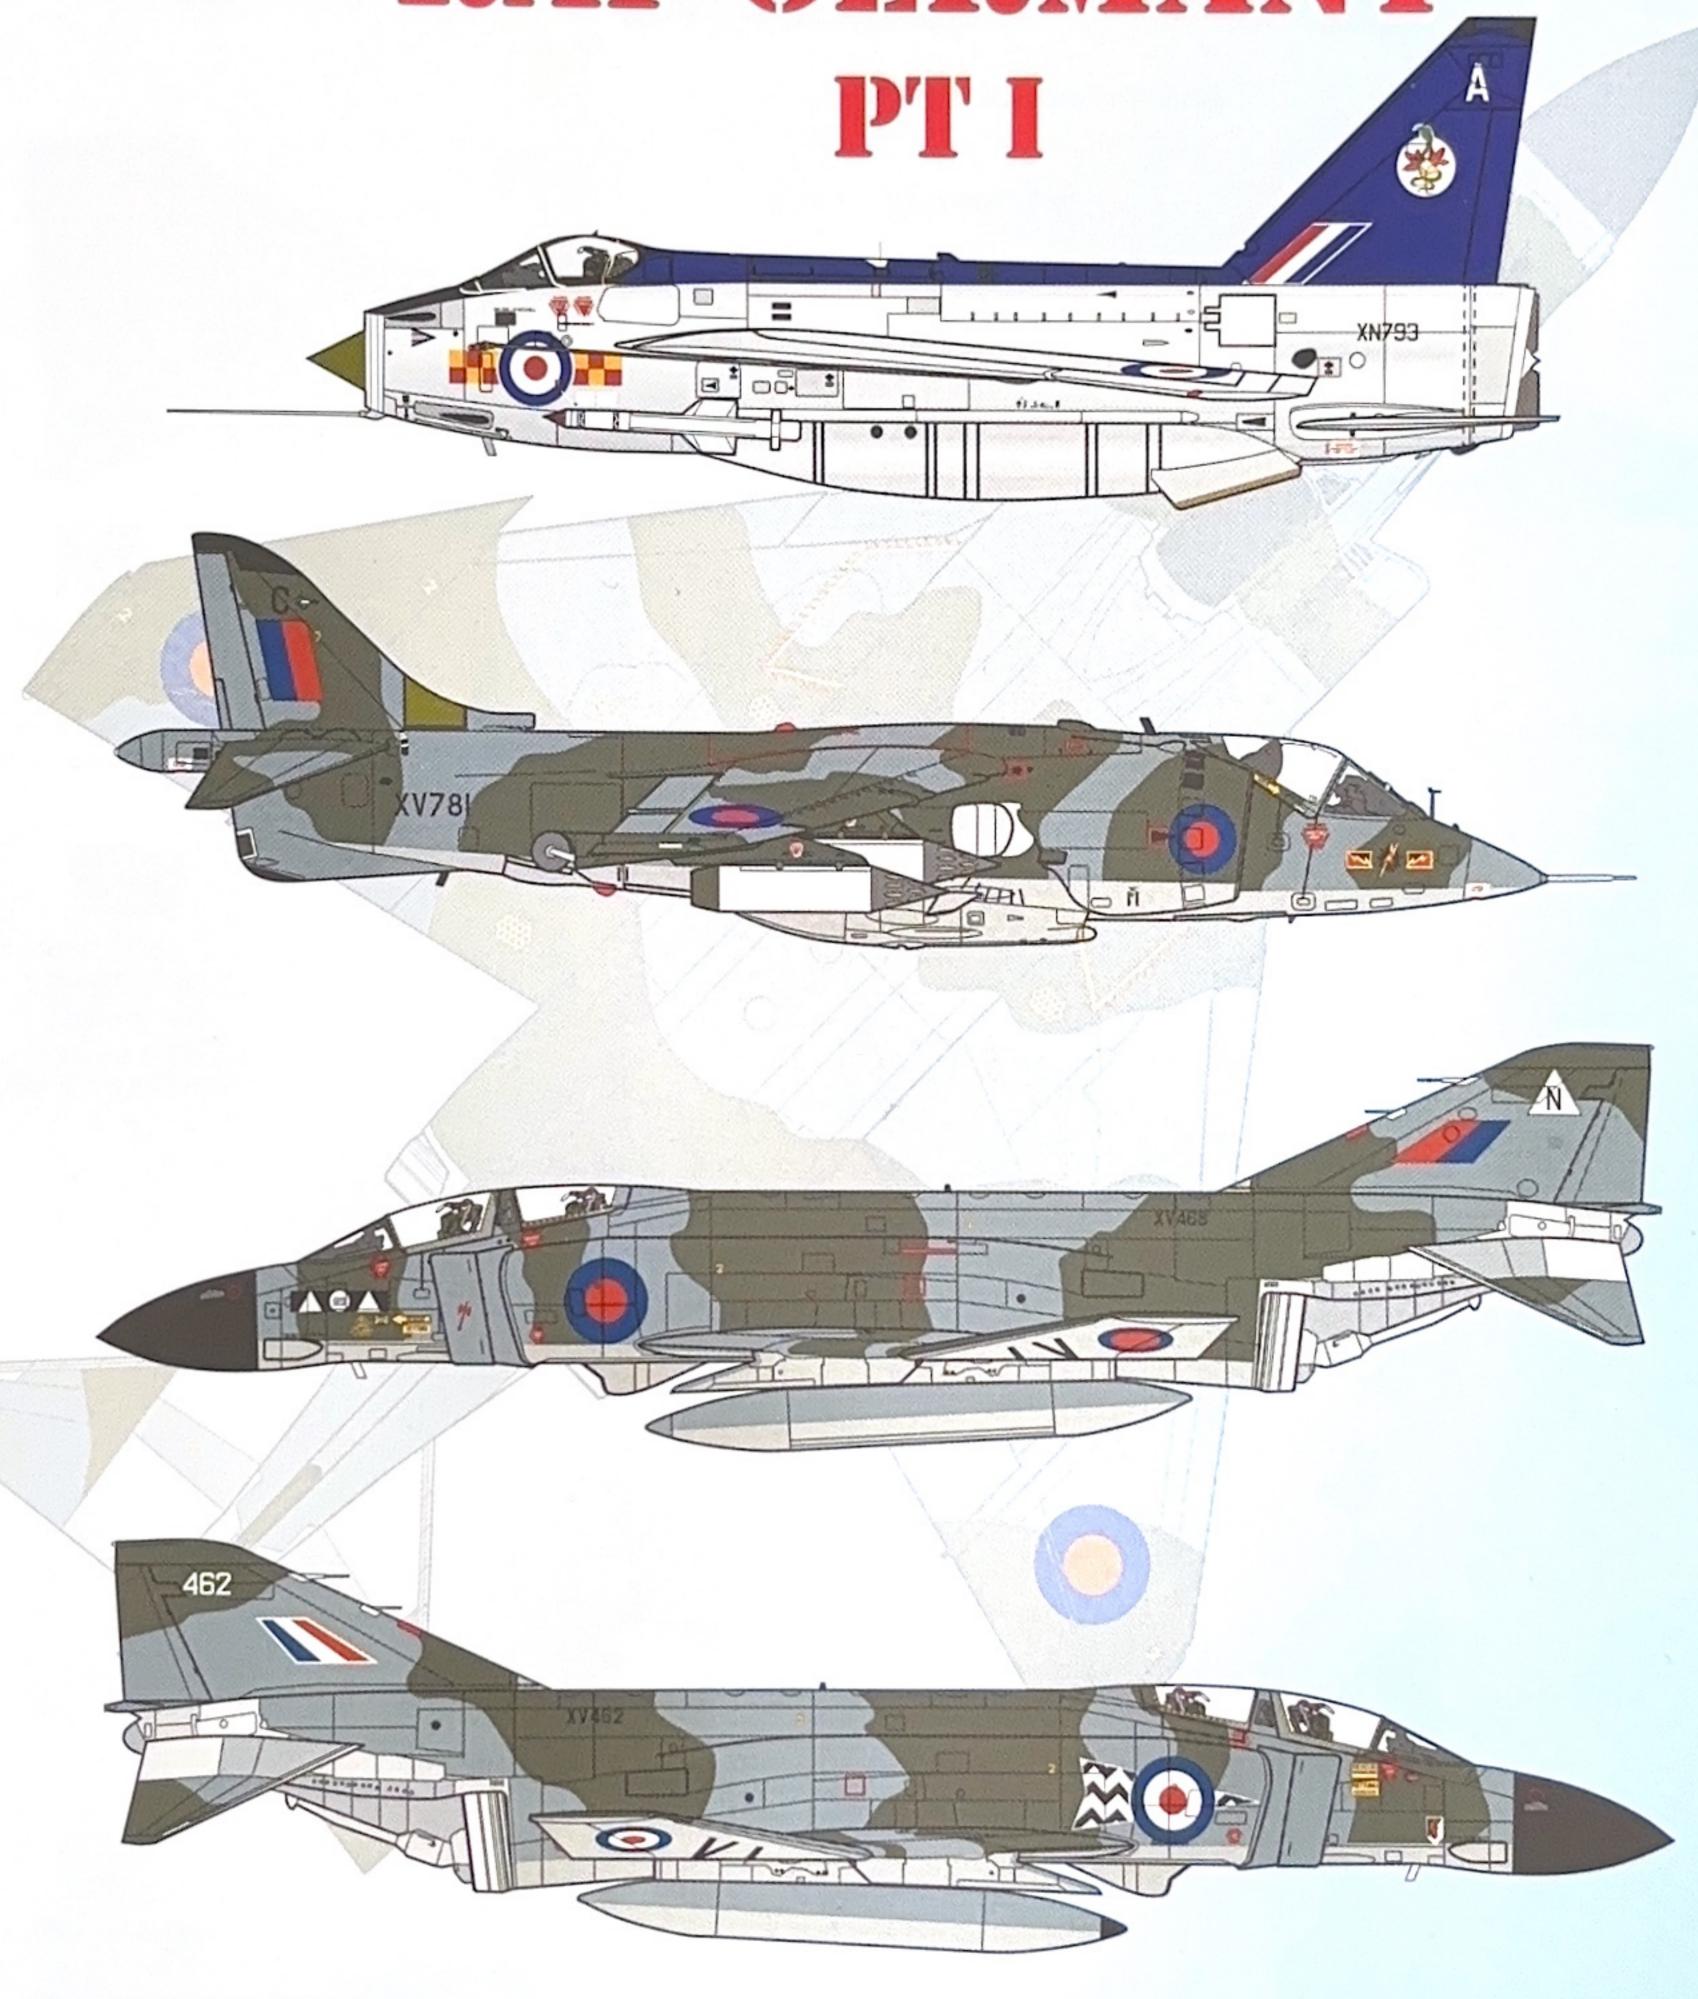





High Quality
Limited Edition Decals
Covering four different
aircraft types from the period


1970 - 1975


McDonnell Douglas Phantom FGR.2 XT901 of 2(AC) Squadron, based at RAF Laarbruch, West Germany, in 1974. 43 Recommended F.4M Phantom FGR.2 Kits: 1/72 Scale: Fujimi 1/48 Scale: Hasegawa/Revell Dark Sea Grey BS381C:638 Humbrol 164 **Light Aircraft Grey** Xtracolour X004 BS361C:627 White Ensign AC RN 03 Humbrol 166 Xtracolour X015 White Ensign AC RN.20 Dark Green BS361C:641 Humbrol 163 Xtracolour X001 White Ensign AC RN.15 0 Matt Black 53 Natural Metal Humbrol 33 Humbrol 56 Xtracolour X012 Xtracolour X819 White Ensign C.02a All standard stencils please use Airdoc stencil set or kit decals Page 1

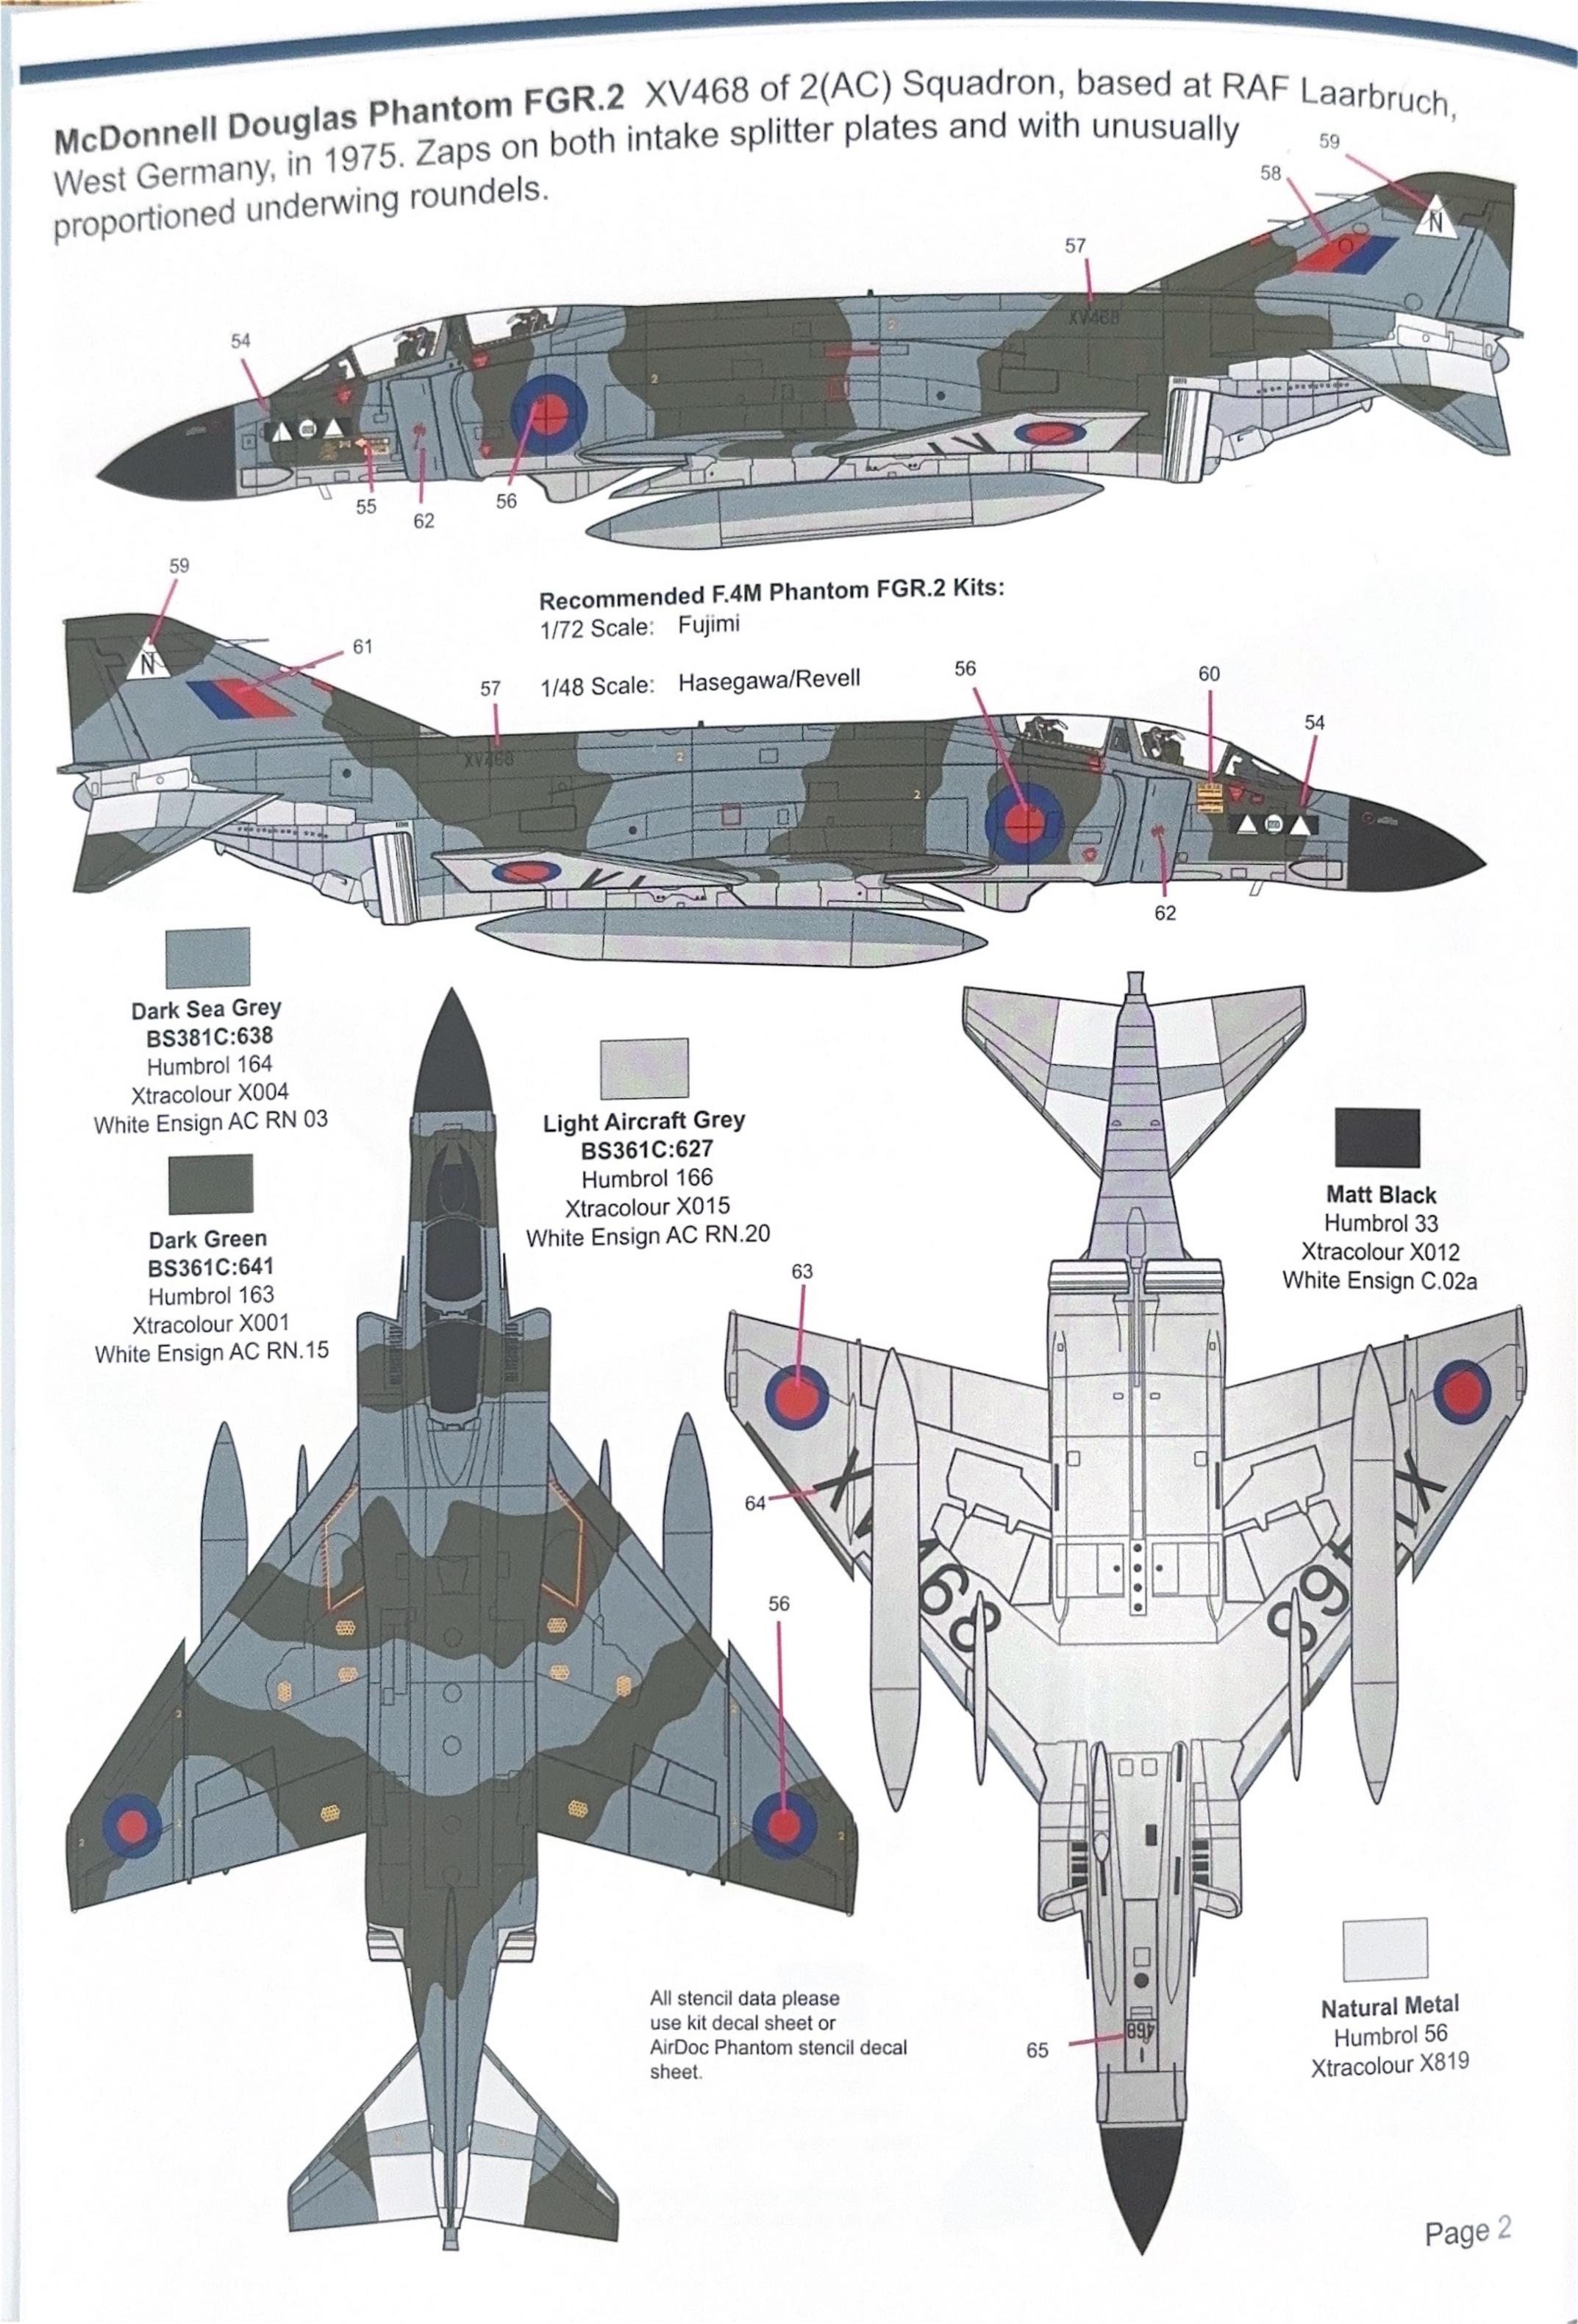


McDonnell Douglas Phantom FGR.2 XV462 of 17 Squadron, based at RAF Bruggen, West Germany, in 1972. 462 69 66 67 Recommended F.4M Phantom FGR.2 Kits: 1/72 Scale: Fujimi 462 1/48 Scale: Hasegawa/Revell 69 73 66 Dark Sea Grey BS381C:638 Humbrol 164 Xtracolour X004 **Light Aircraft Grey** White Ensign AC RN 03 BS361C:627 Humbrol 166 Xtracolour X015 White Ensign AC RN.20 Dark Green BS361C:641 Humbrol 163 Xtracolour X001 White Ensign AC RN.15 0 0 75 Matt Black Natural Metal Humbrol 33 Humbrol 56 Xtracolour X012 Xtracolour X819 White Ensign C.02a All standard stencils please use Page 3 Airdoc stencil set or kit decals

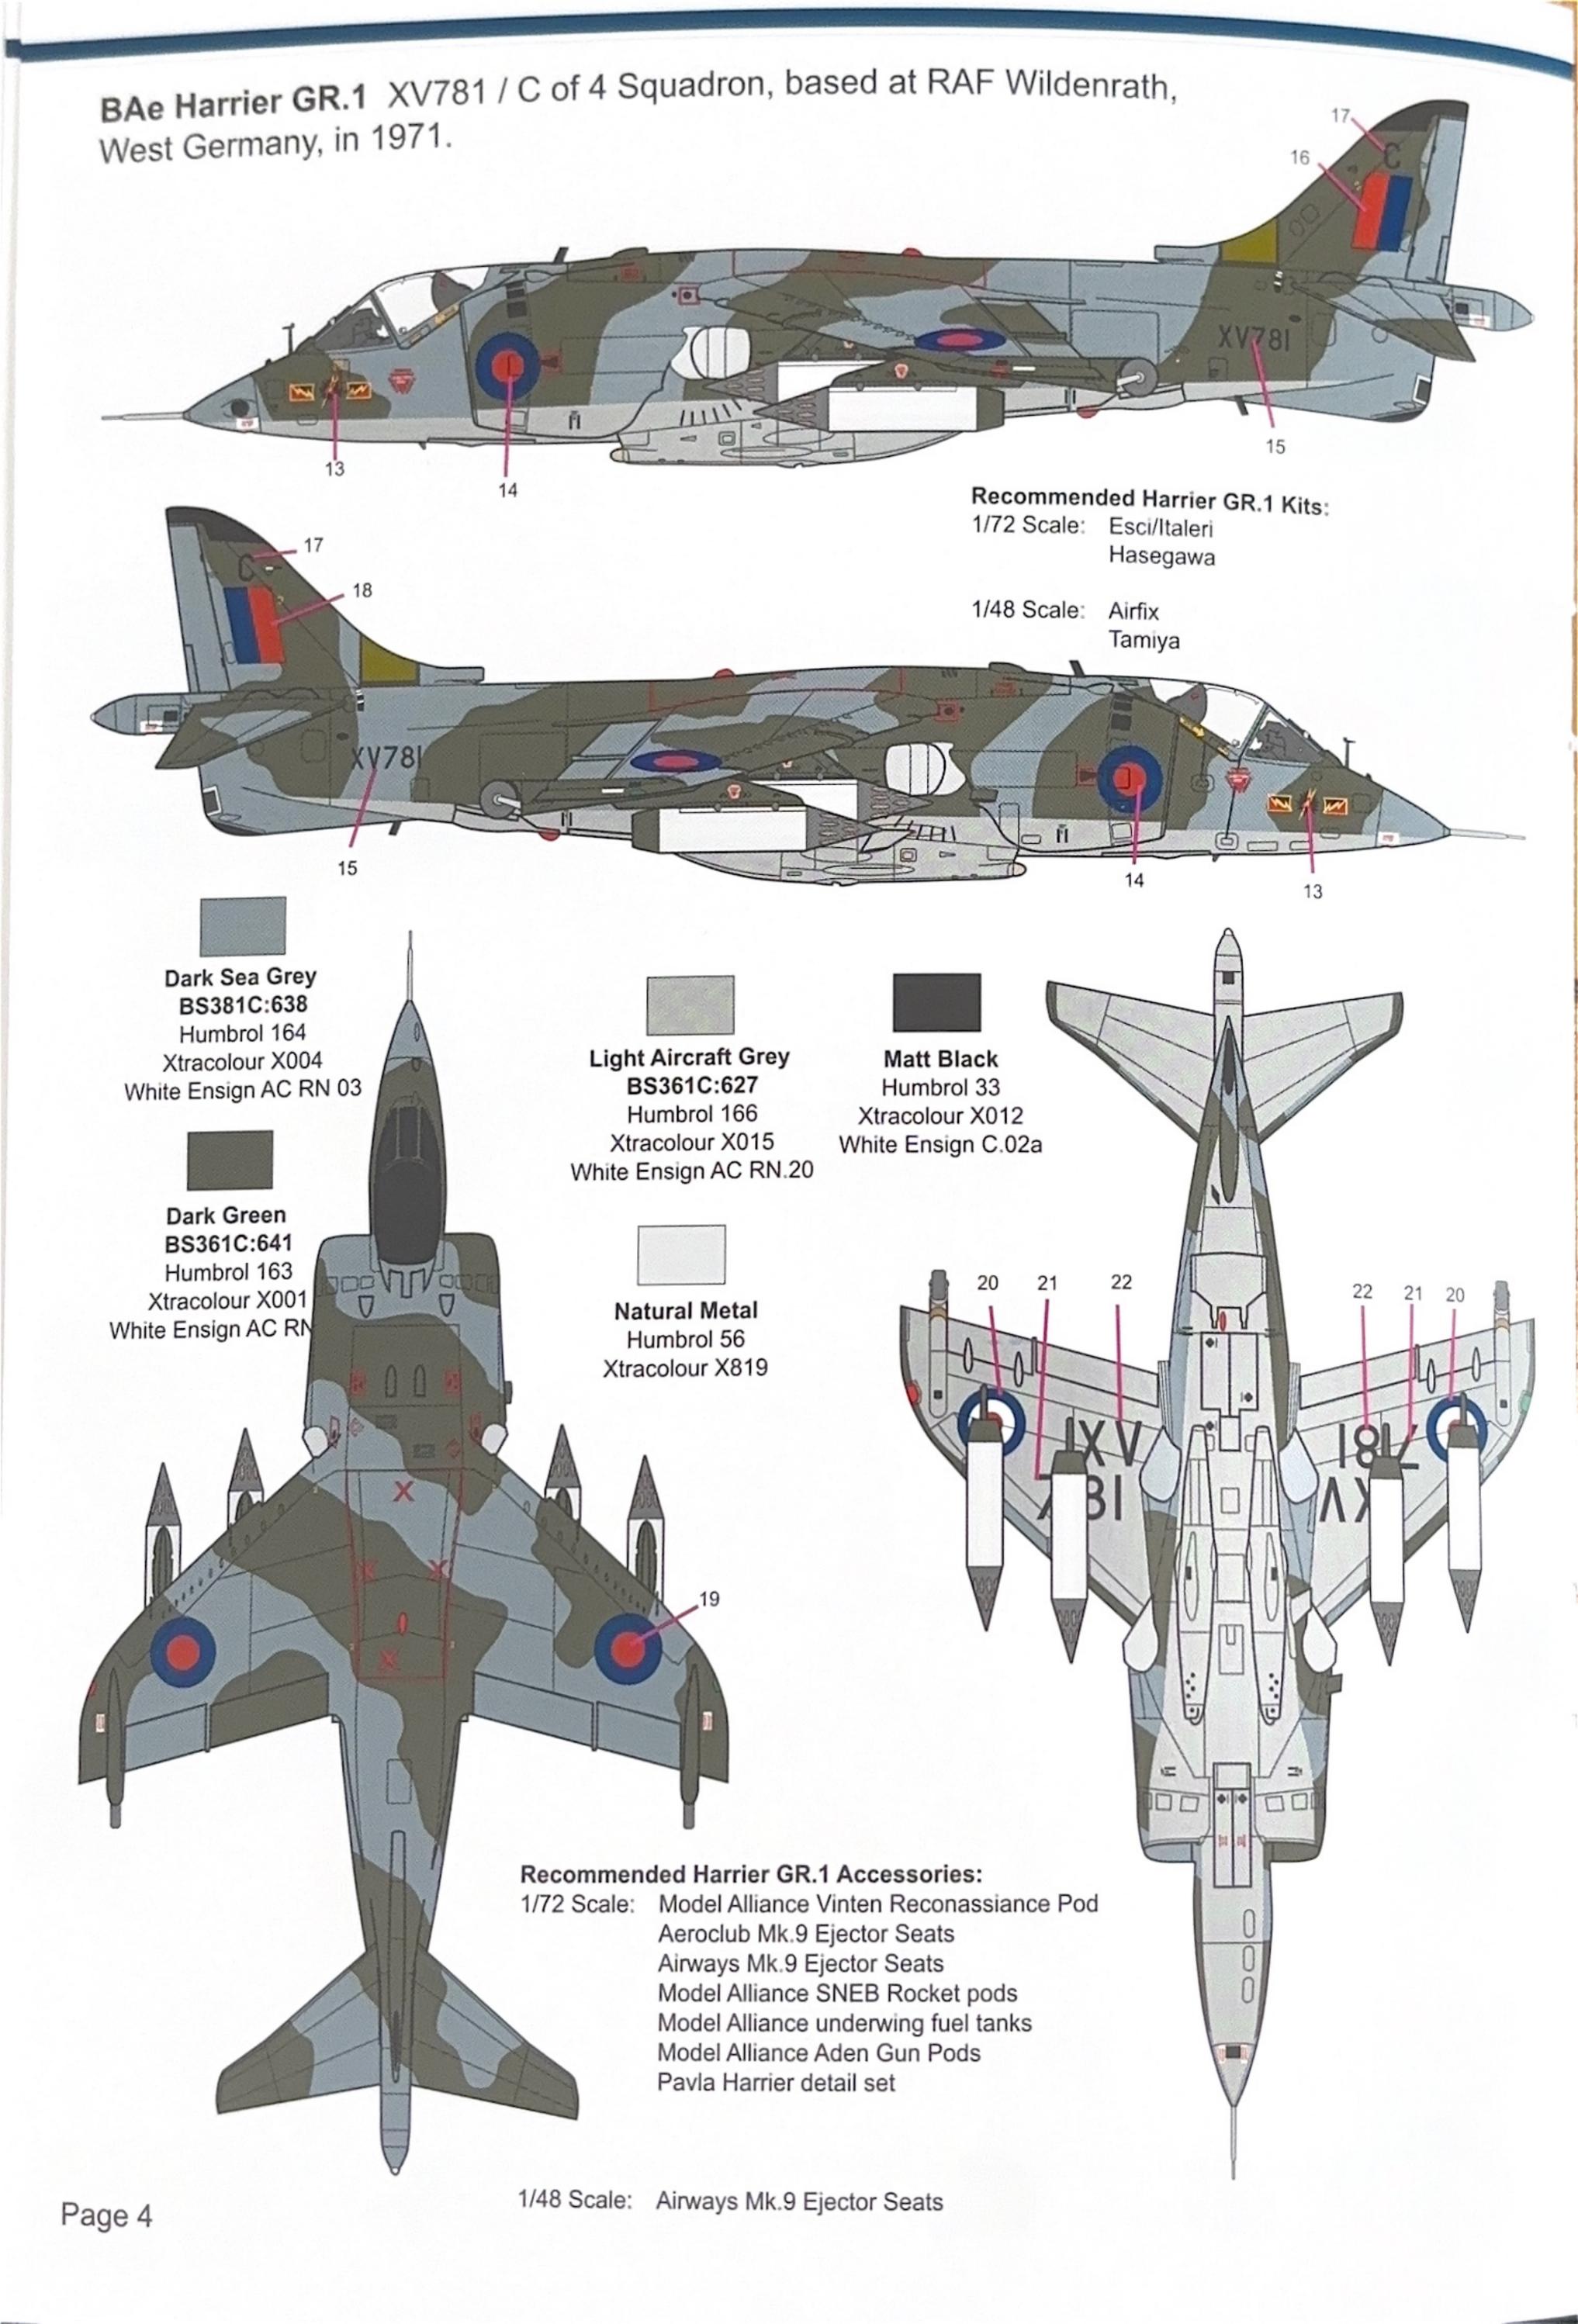

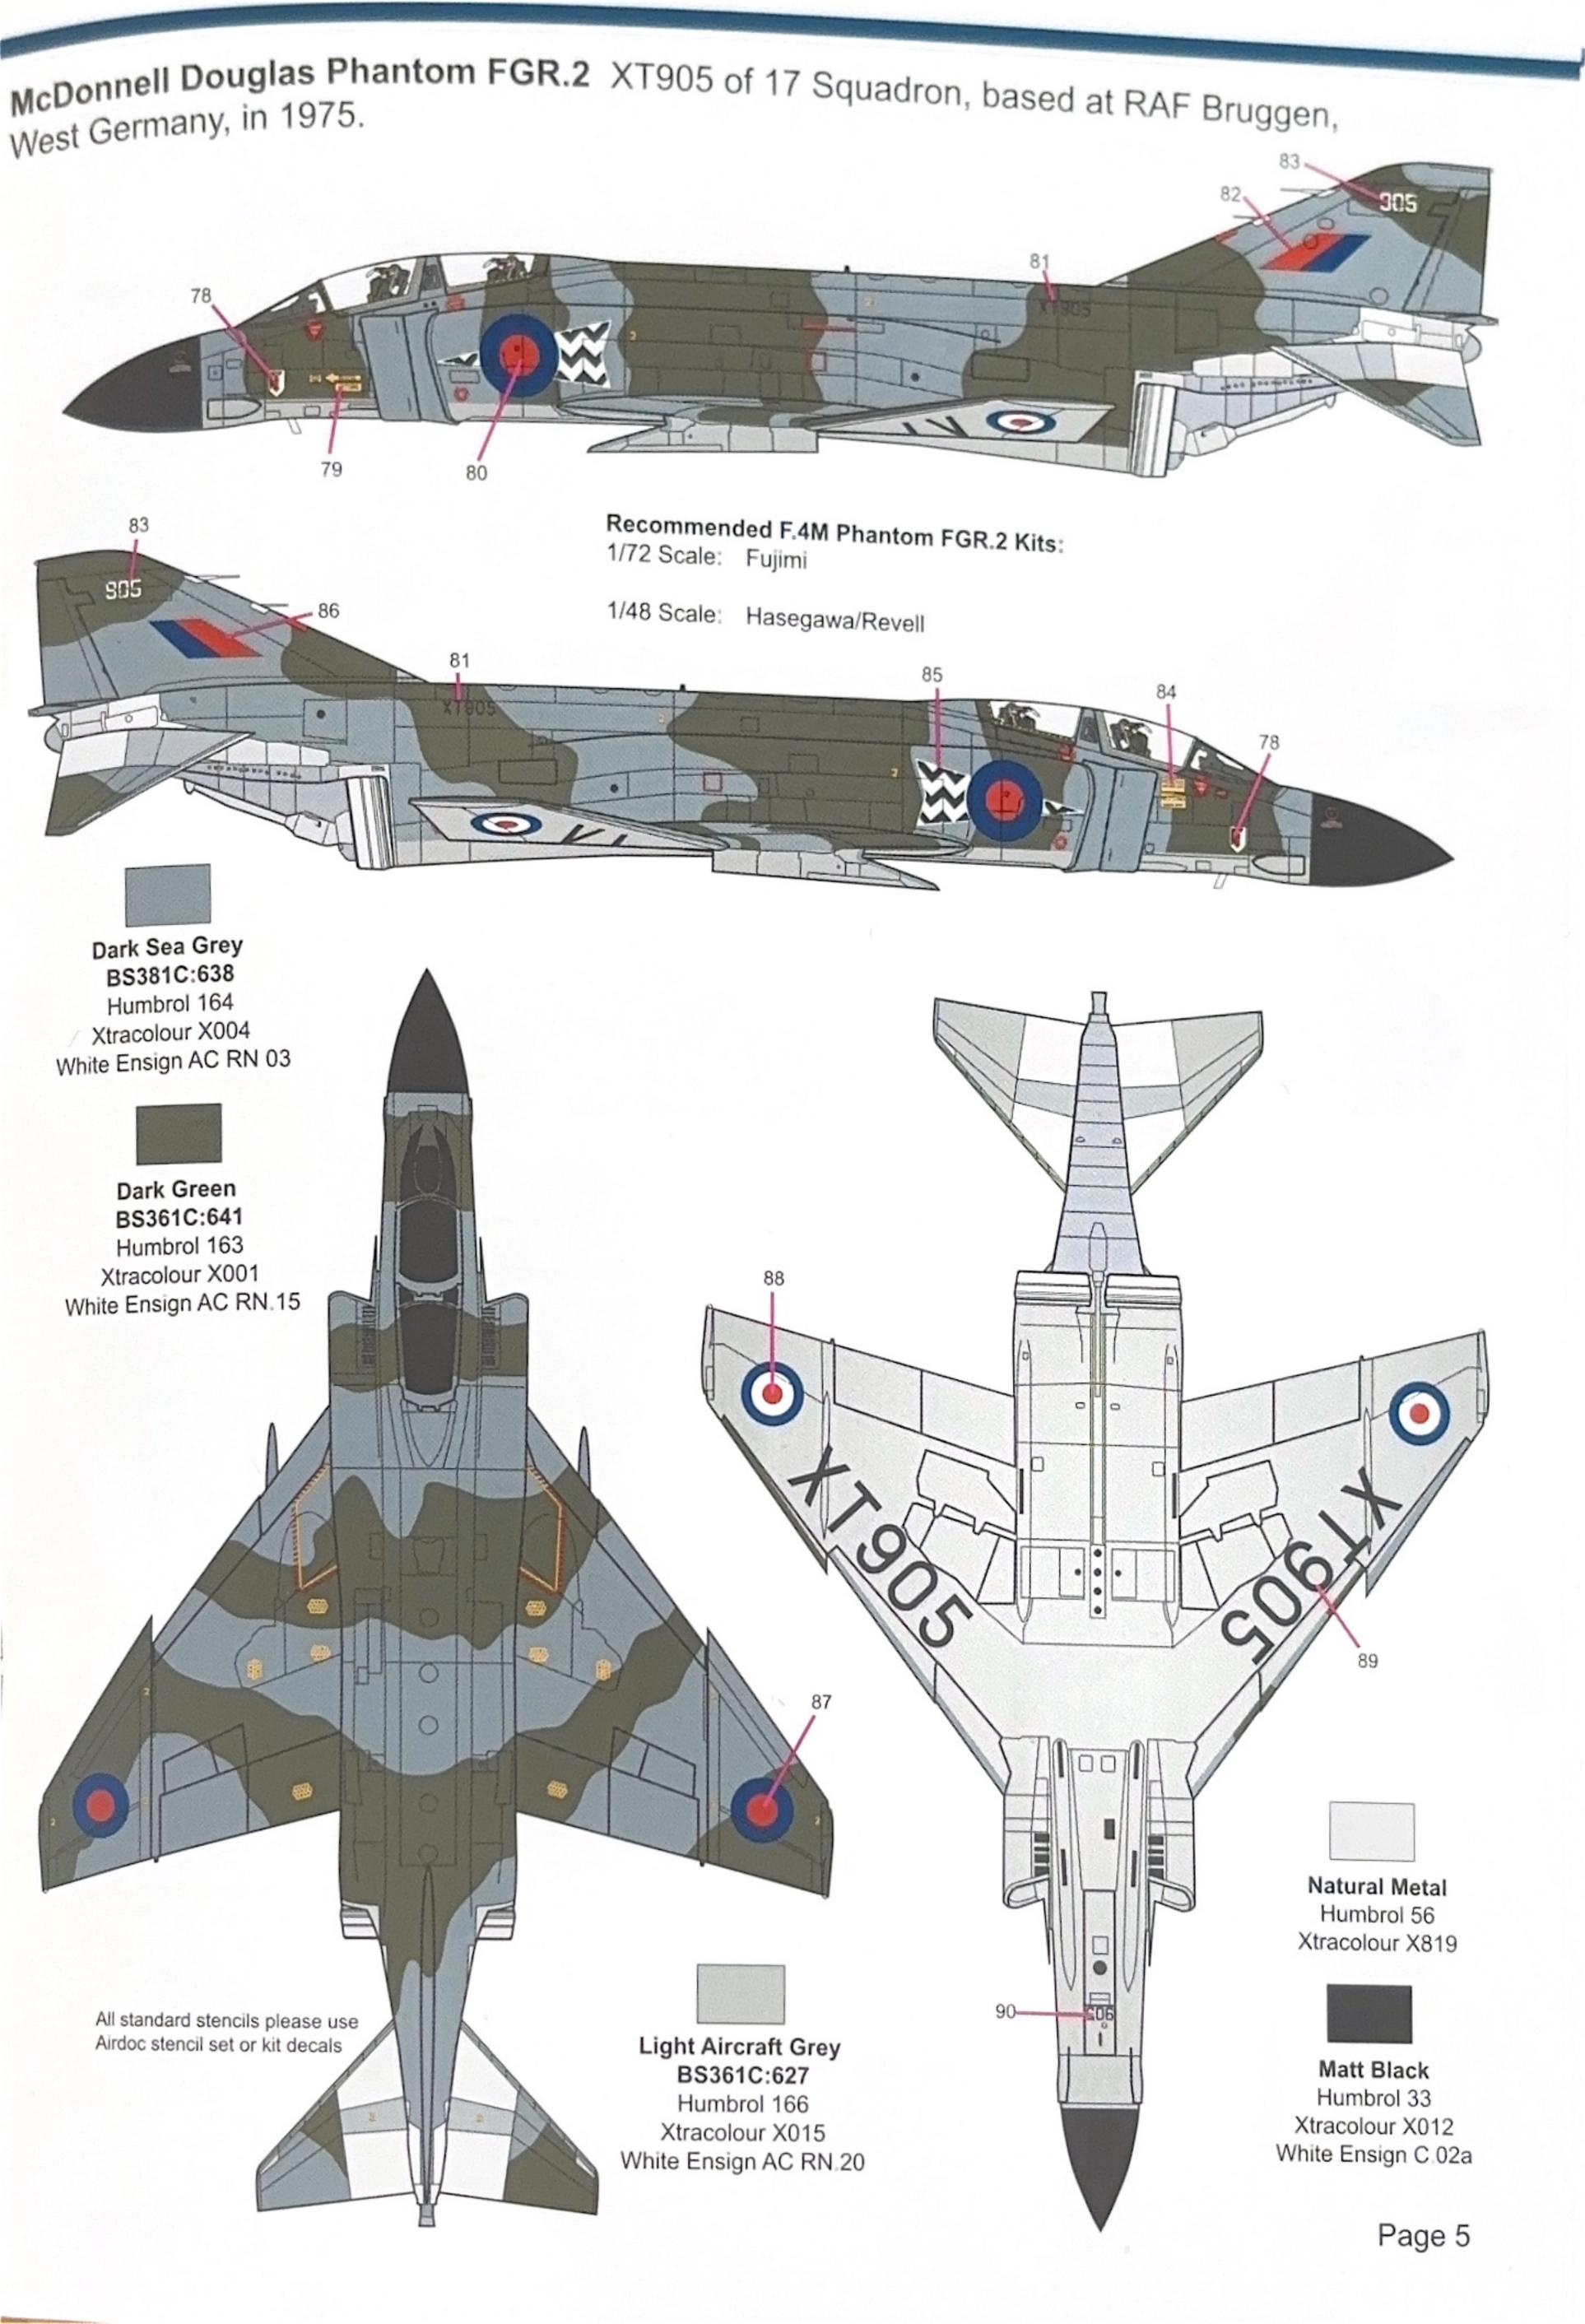

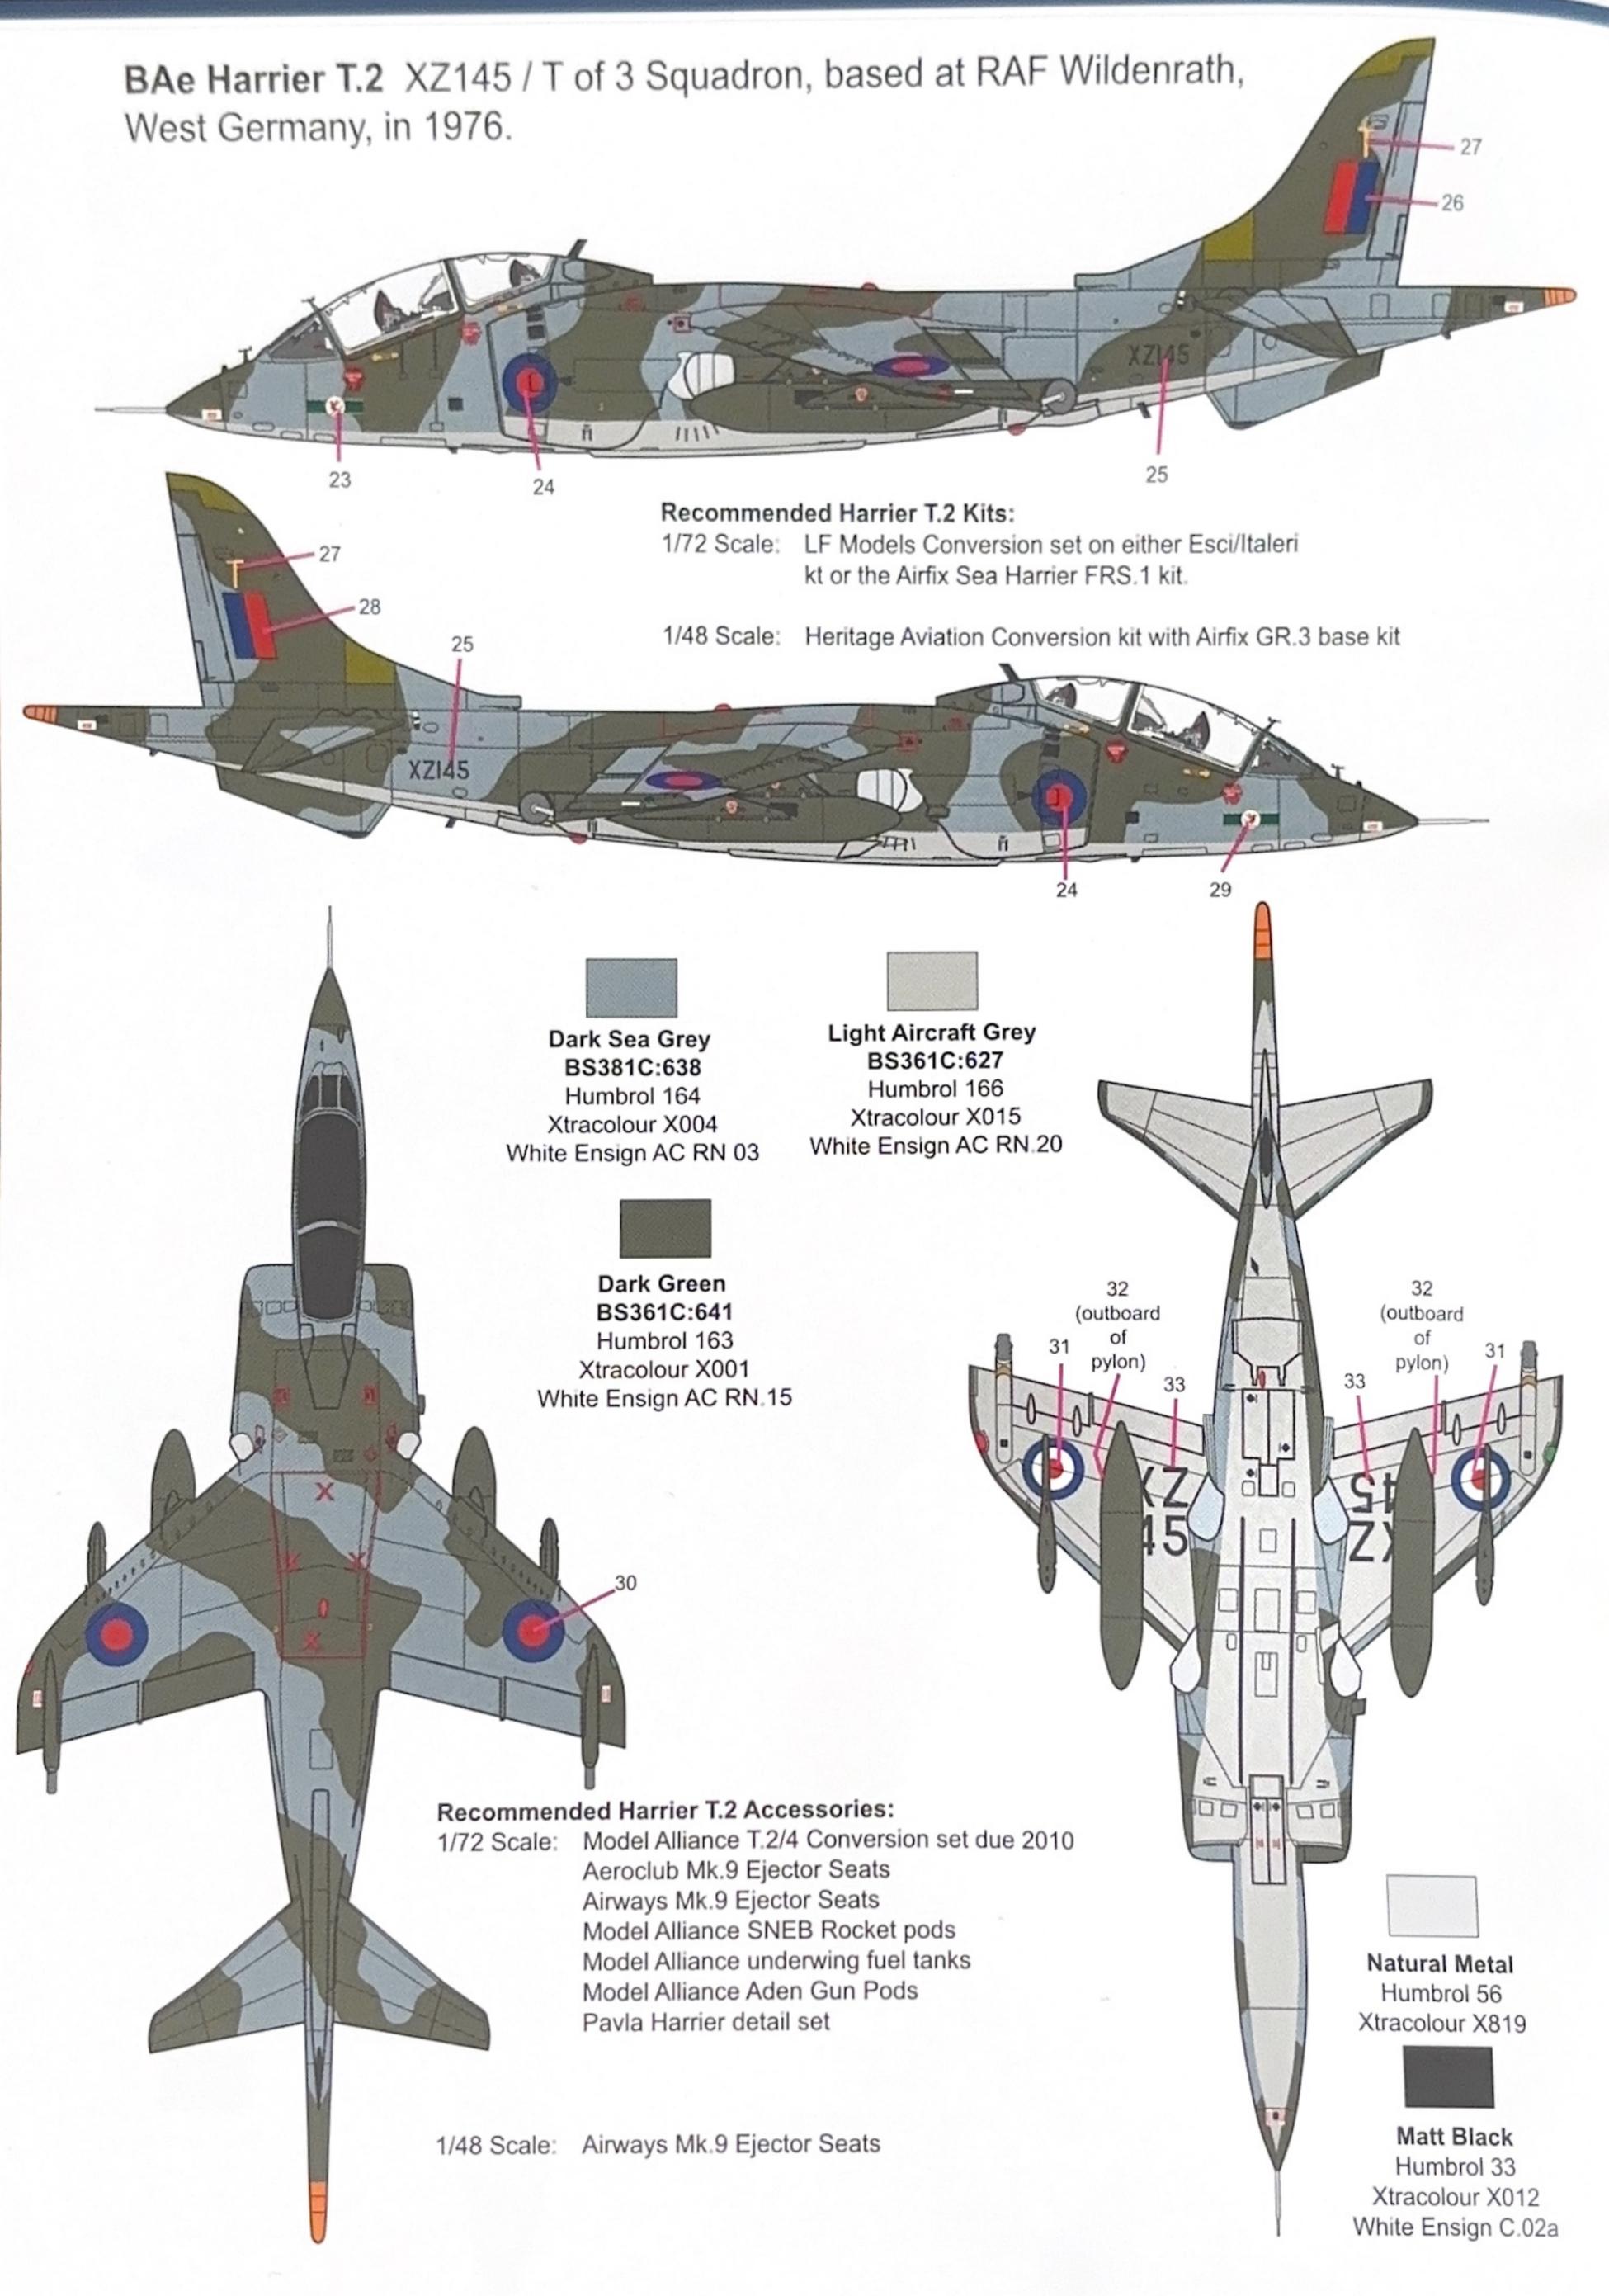

Westland Wessex HC.2 XR499 / BX of 18 Squadron, based at RAF Gutersloh, West Germany, in 1971.

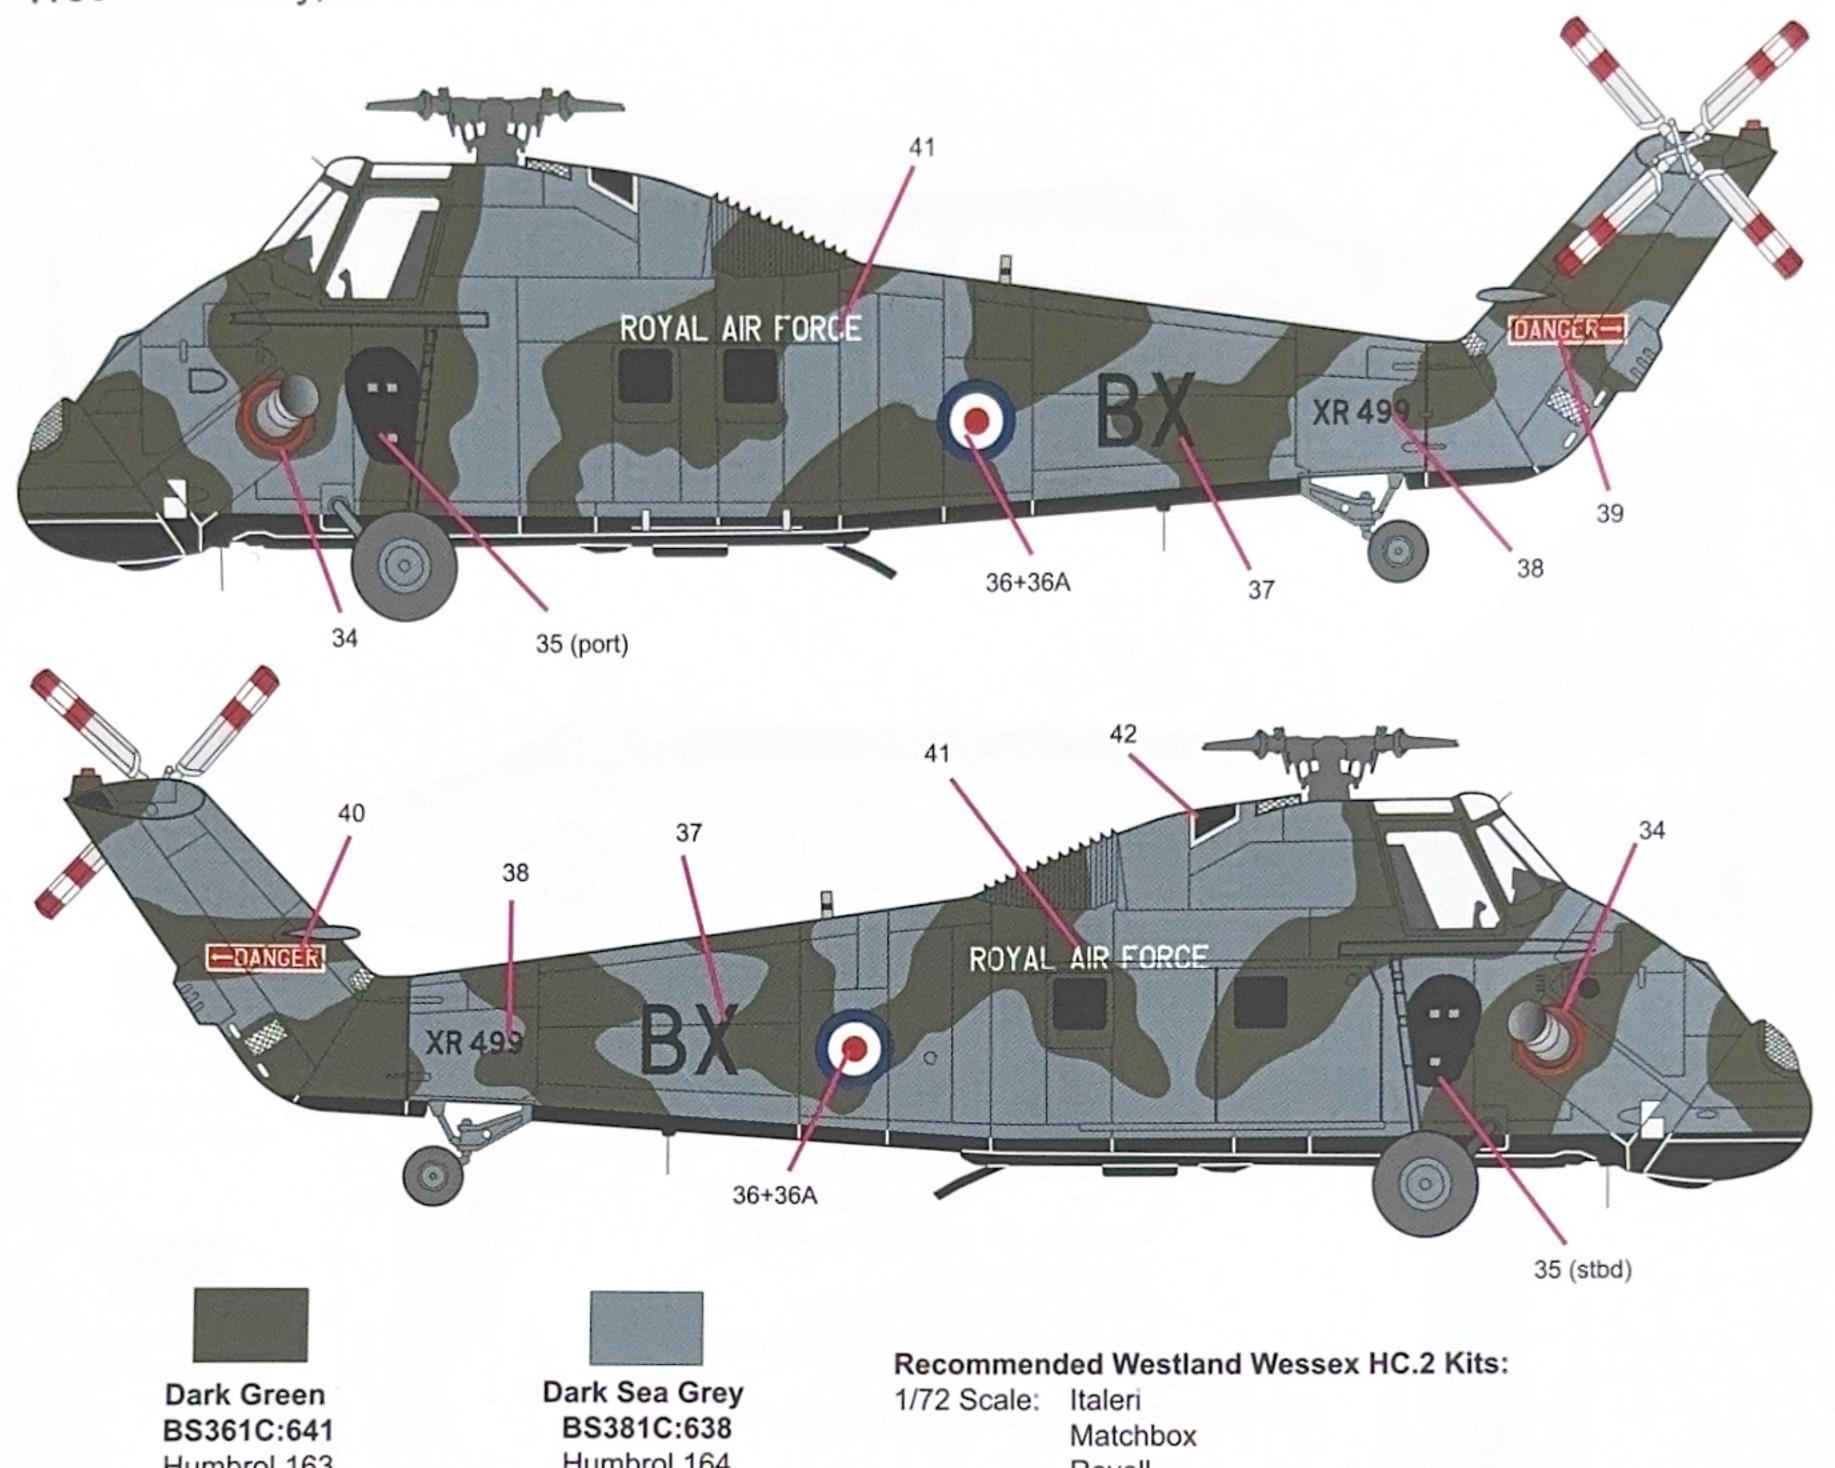

Humbrol 163 Xtracolour X001 White Ensign AC RN.15

> Natural Metal Humbrol 56


Xtracolour X819

Humbrol 164 Xtracolour X004 White Ensign AC RN 03



Matt Black Humbrol 33 Xtracolour X012 White Ensign C.02a Revell

Italeri/Revell 1/48 Scale:

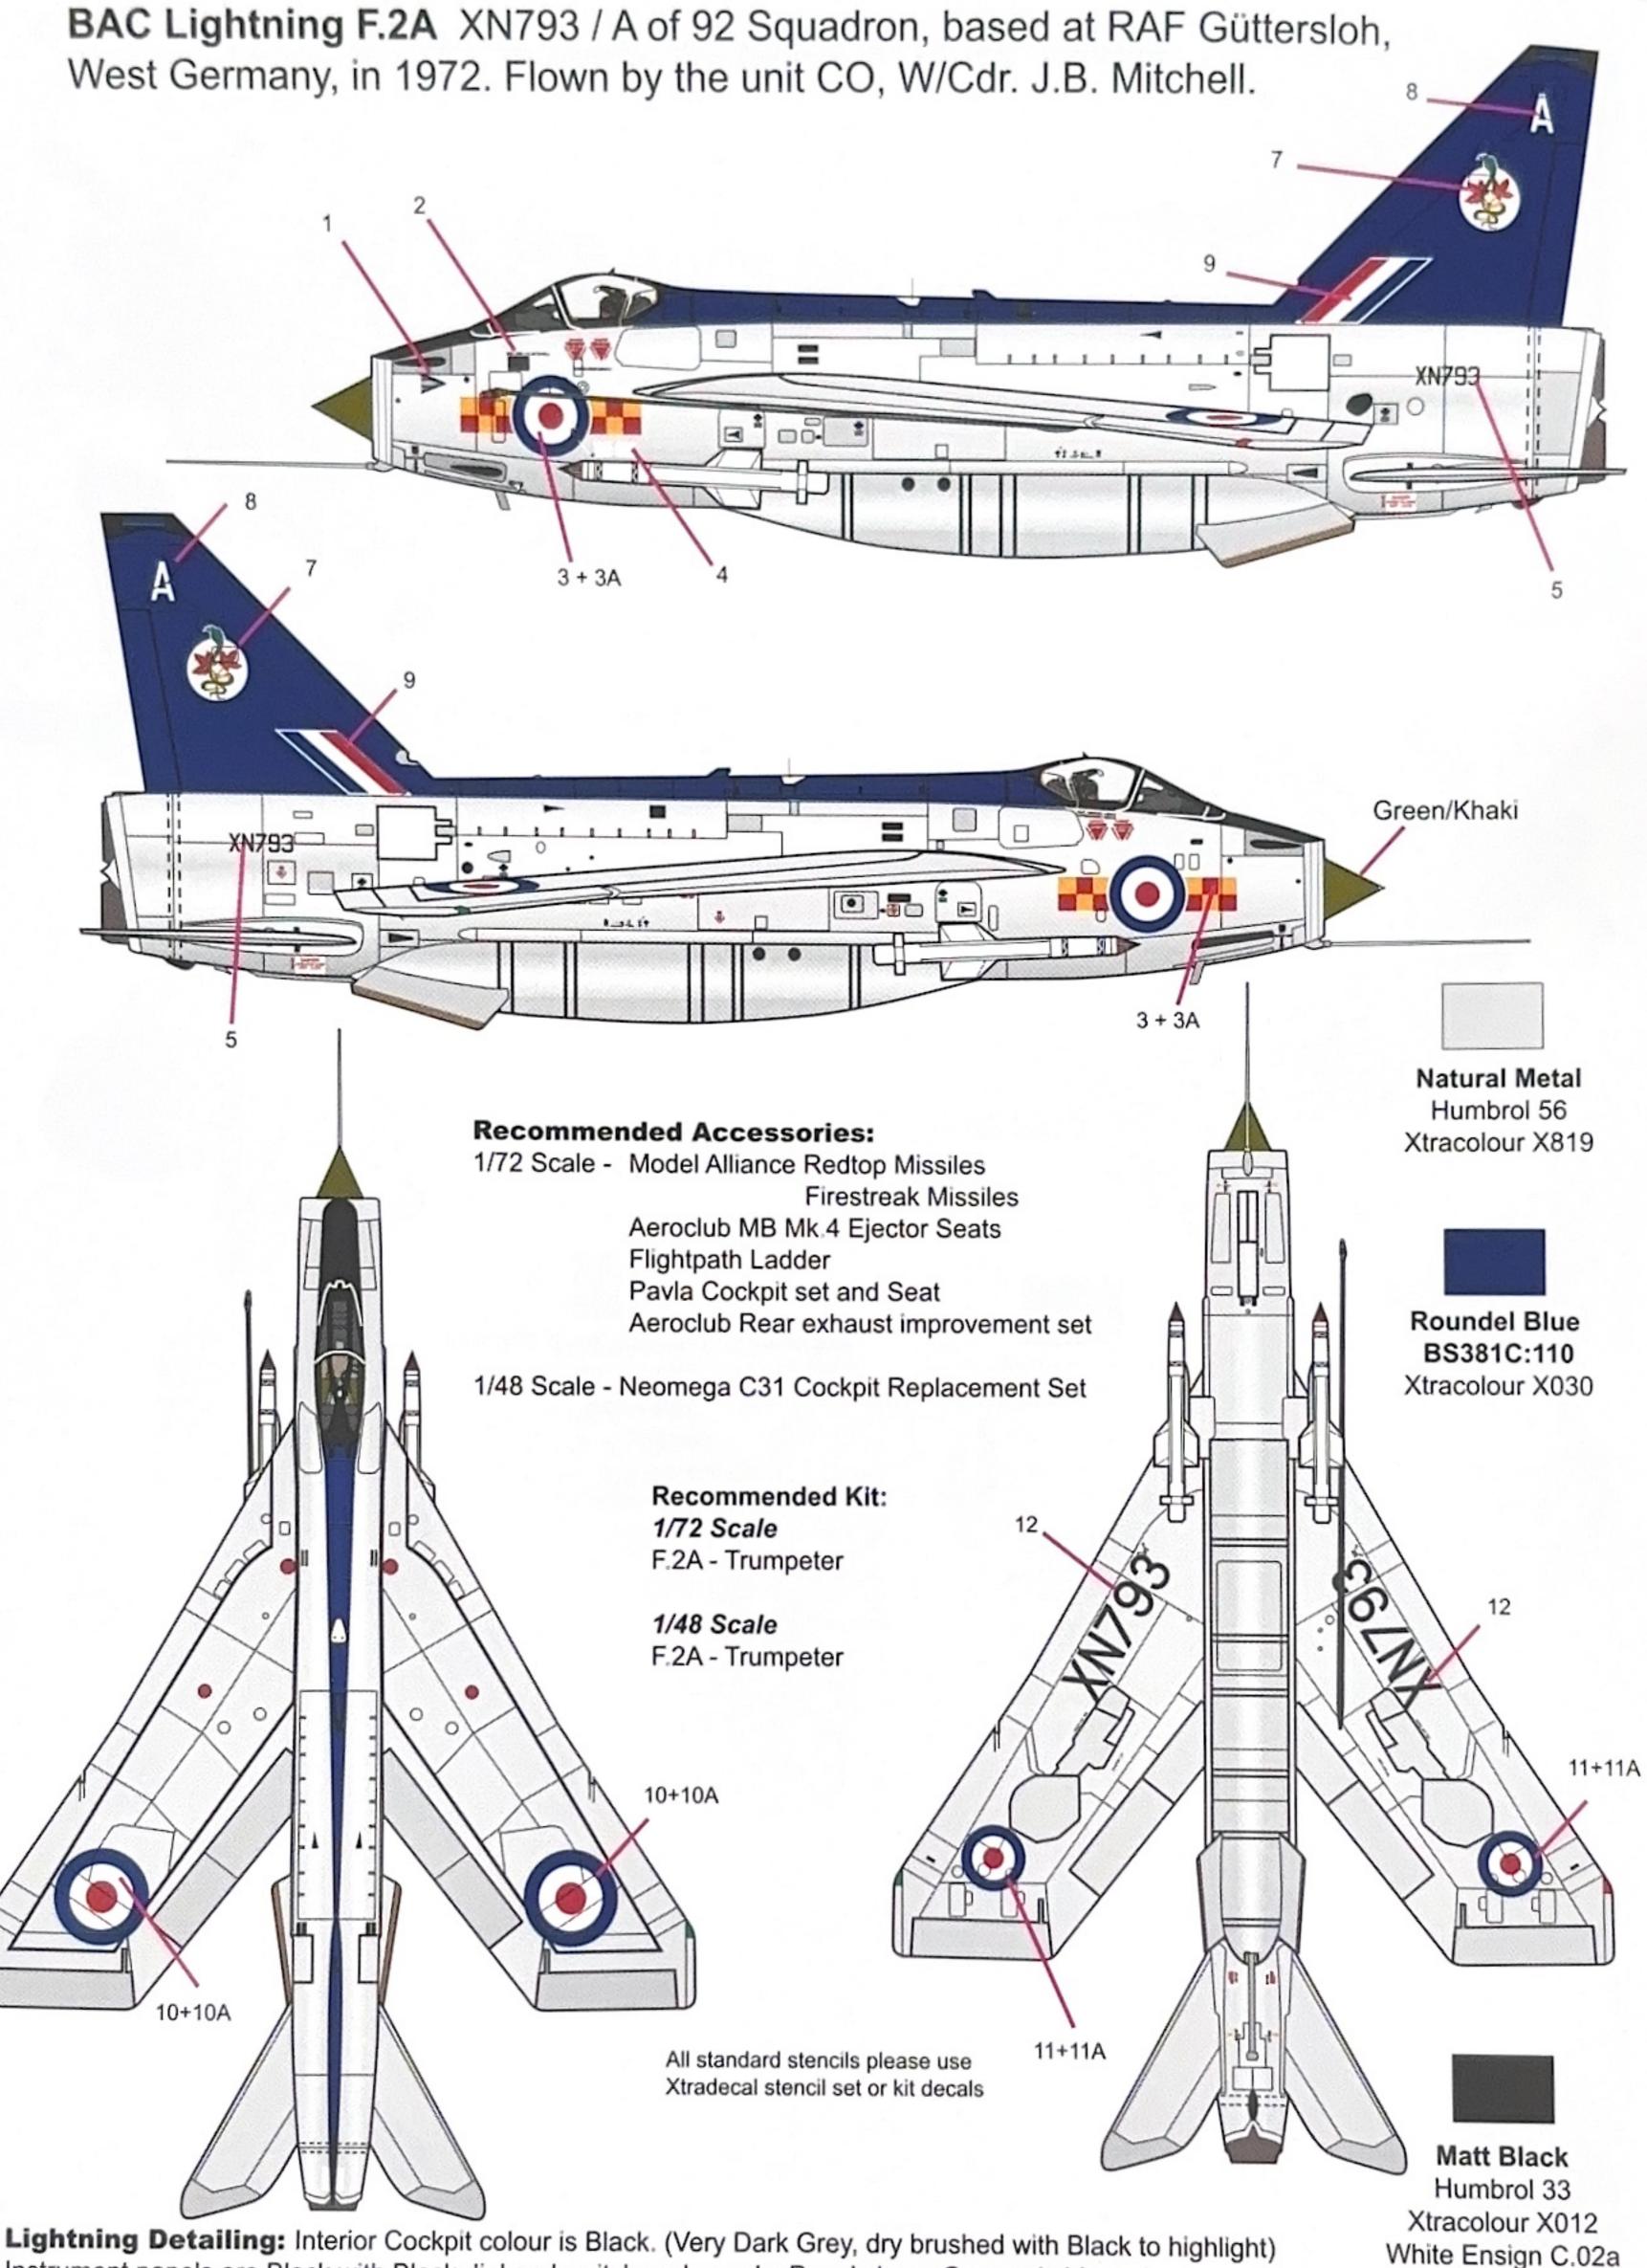

Lightning Detailing: Interior Cockpit colour is Black. (Very Dark Grey, dry brushed with Black to highlight)


White Electronic Instrument panels are Black with Black dial and switch and panels. Panels have Grey switch's and reference to SAM Publications Lightning book is highly recommended. The Martin Baker Mk 4 Ejector seats have Black frames, with Yellow/Black ejector handles above the head box. Cushion seats are generally Dark Green with the head box cushion Dark Green, belts are Tan and Blue. Lower belts are either Olive Green or Blue, upper straps in Dark Green with head box restraining straps in Dark Green. Some seats have sheepskin covers. Undercarriage legs are Silver. Wheel bay interiors are Silver but get very dirty. Air brakes/ speed brakes are Silver internally. Undercarriage doors internally are Silver. Nose outer ring is polished steel and the nose cones are either Light Green or Light Tan.

Model Alliance Decals - UK & The Aviation Workshop are trading names of The Aviation Workshop Publications Ltd & Gary Madgwick.

The On-Target Publications, AIRframe Journal, Spot-Lights & Conflict /AirWars are all names registered to The Aviation Workshop

Publications Ltd and may not be used without the permission in writing of the The Aviation Workshop Publications Ltd.

These decals and all artwork are copyright The Aviation Workshop Publications Ltd 2009

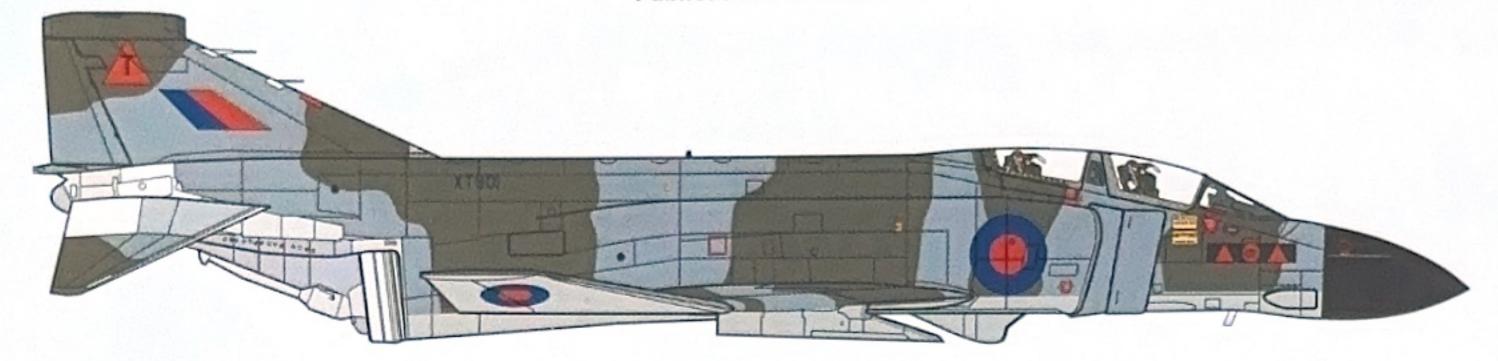

Decals Instructions:

These decals are a high quality product produced for Model Alliance Decals - UK by Cartograf Italy. The decals are very thin but very strong and flexible.

- Before painting the model, clean with 'Model Wipes'. This cleans the grease and any dust from the surface.
- 2. We recommend that you wear 'Model Gloves' to handle the model whilst preparing it for painting.
- 3. For best results, spray the model with a Light Grey primer, any defects can then be made good.
- 4. For demarcation and camouflage lines, we recommend that you use Masking Film.
- If you wish to use a decal fixing and finishing system, we recommend you use the Microscale System, do not use strong decals solvents such as Solvaset.
- Once you are happy with the painting of the model, coat it in a clear gloss finish, this can either be over the entire model if the model is finished glossy or spot gloss finish in the area's that have a decal. A good surface finish are clear floor shine's such as Johnson wax - Klear. This is sold under different names around the world. Klear can be either brushed on or sprayed.
- 7. Cut each decal from the sheet as needed. Do not trim the clear varnish finish to close to the decal. Submerge the decal in warm water for about 10 seconds and remove to a flat surface and wait for the decal to release from the backing sheet. A small amount of washing up liquid in the warm water helps the decal release from the sheet.
- 8. These decals do not require a decal setting solution to lay flat or to conform to the model contours.
- 9. With a pair of tweezers to hold the backing sheet, slide the decal in position on the model using a small soft brush. Do not use an old painting brush as bits can get under the decal.
- 10. Carefully remove any excess water with a soft cloth or tissue once you are happy with the position of the decal. Should you make a mistake, dip a brush in the warm water and ease under the edge of the decal. The decal will then easily move to the correct position and again remove the excess water.
- 11. When the decals are completely dry, gently wipe off all excess decal adhesive.
- 12. Leave the model to dry completely, spray or paint over the decals with a further coat of Klear or gloss.
- 13. Should the decal silver for any reason, this is because small air bubbles are under the decal. If found, prick with a pin and apply a small drop of Micro Sol to the decal and allow to dry for up to 12 hours.
- 14. Finally, coat the model with the required finish, either gloss, semi gloss or matt.
- 15. Decals are best stored flat and in a cool, dry place and should not be stored in direct sunlight, hot or humid conditions.
- 16. Should you have any problems with these decals please contact us at the address below.

