

Leopard Workshop

LW009

1.35 scale


Leopard 1 Cast Exhaust Grilles

*Can be used with any
Meng/Takom/Revell/Italeri Leopard 1*

None of the plastic Leopard 1 grilles are very satisfactory and these grilles attempt to more accurately replicate the real thing. The slats are correctly spaced and the internal angles are correct giving the grilles more apparent depth.

Parts list:

Left side and right side grilles
(right side has skirt mounts attached)

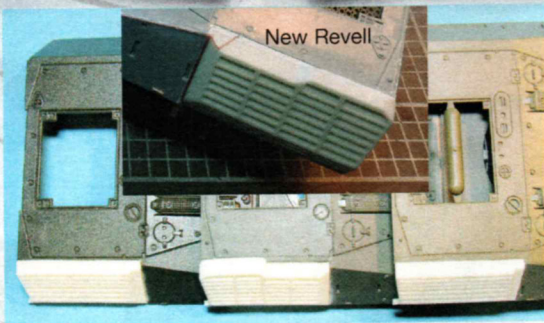

Italeri/Revell
(welded grille fitted)

Meng




Takom
(welded grille fitted)




Leopard Workshop

Fitting is different for each manufacturer.

- 1 Measure 40 mm forward from the rear edge of the hull and cut vertically down the hull side.
- 2 Score or cut outside of the top deck hatch using the measurements below.

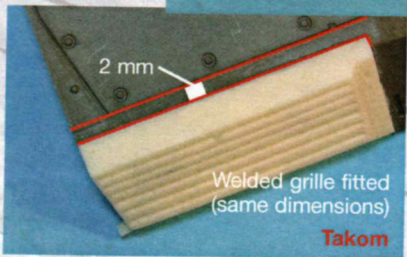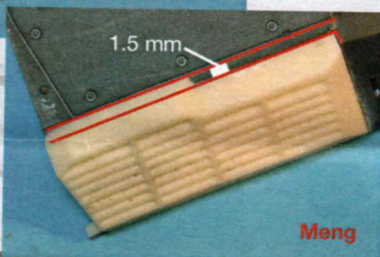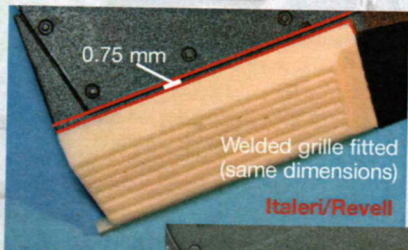


- 3 Cut the two side skirt C-brackets from the right-side grille.
- 4 After fitting side skirts, cut at correct angle and length as per drawing.

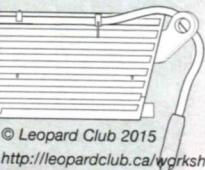


Leopard Workshop

Revell (new tooling kit no: 03240)

- 1 Measure 40 mm forward from the rear edge of the hull and cut vertically down the hull side panels.
- 2 Score or cut outside of the top deck hatch using the measurement below.

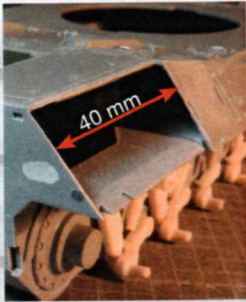

- 3 Chamfer all of the edges to reduce the width of the mating edges to about 1 mm (not critical).
- 4 Remove 2 mm from the angled outer edge of the rear hull sides and remove (or carefully trim off) the rear lights. The kit grille is too narrow so the light positions are incorrect. Replacements are available in LW033. Add weld lines.

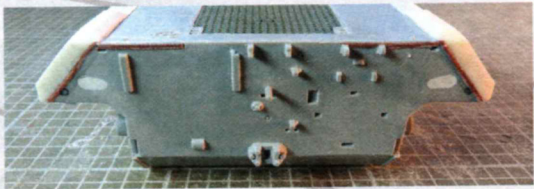

- 5 Cut the two side skirt C-brackets from the right-side grille.
- 6 If fitting side skirts, cut at correct angle and length as per drawing.

