


EAGLE STRIKE



48043

SKYTRAINS


At WAR

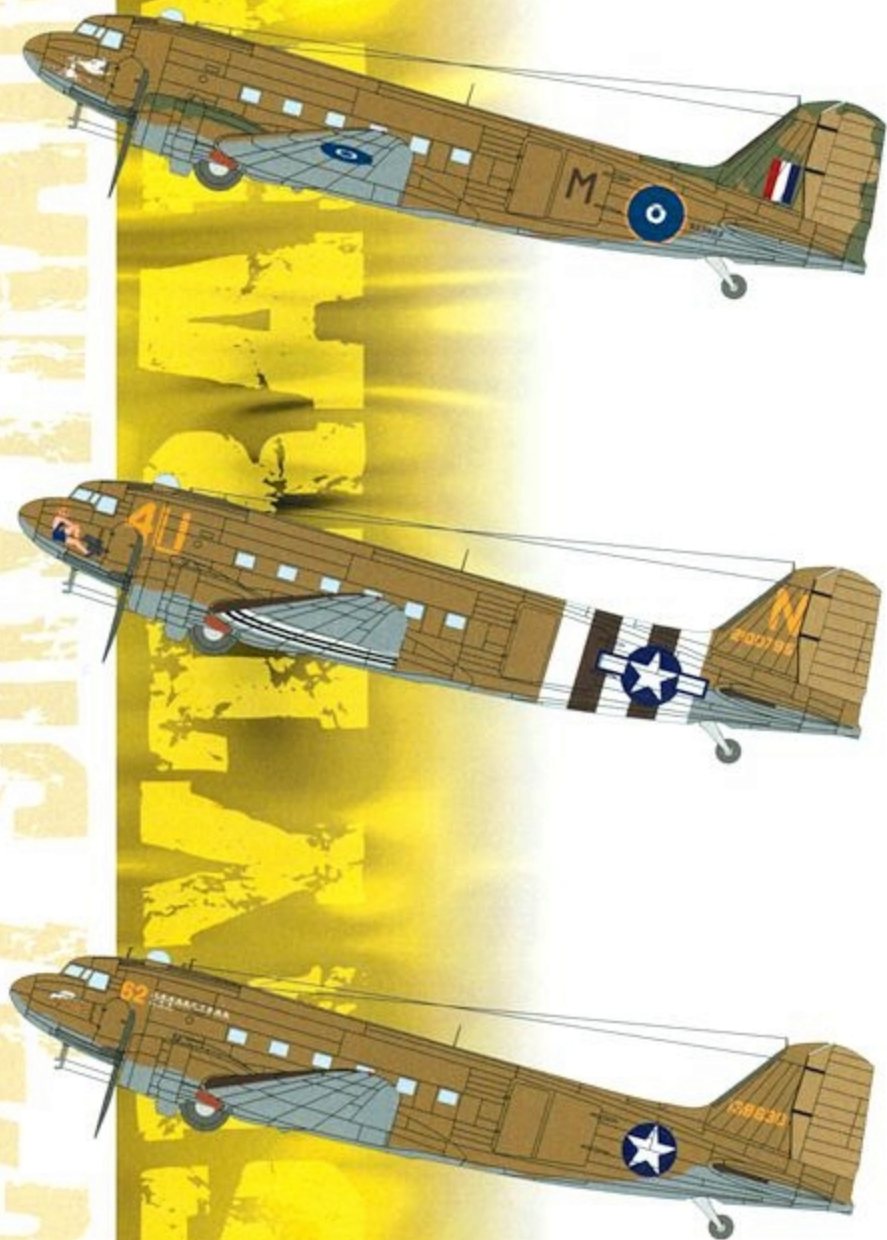

Recommended Kit: Revell/ Monogram C-47


A/C 1

A/C Type	Douglas C-47
Unit	No. 40 Transp. Sqdn. RNZAF.
Locale & Date	Auckland, N.Z., 1944.
Camouflage & Markings	Olive Drab shaded in Jungle Green 46 over Neutral Grey. No de-icer boots. Black prop hubs.

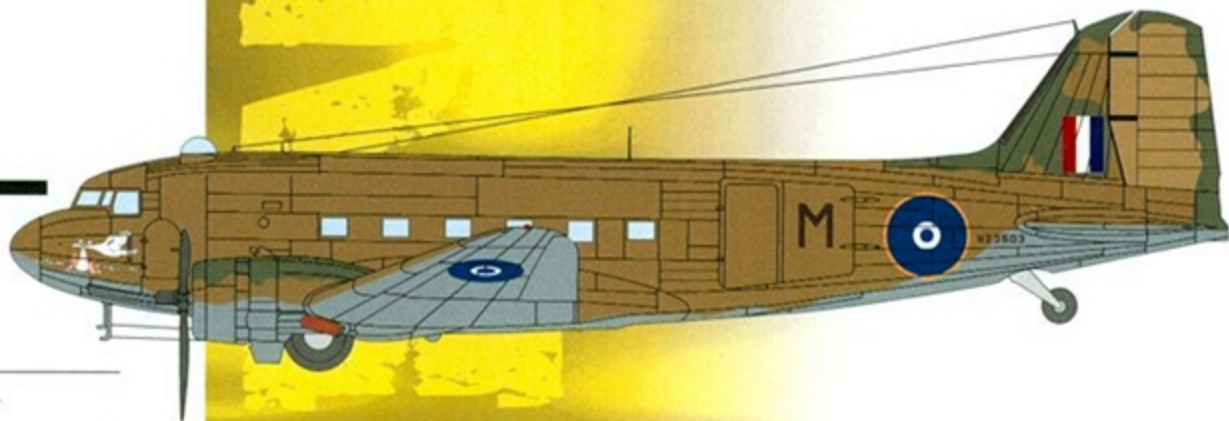


A/C 2

A/C Type	Douglas C-47
Unit	89 TCS, 438 TCG
Locale & Date	June 5/6, 1944. D-Day, France.
Camouflage & Markings	Olive Drab over Neutral Grey. Notice de-icer boots on all flying surfaces. Full D-Day Markings. Black prop hubs.

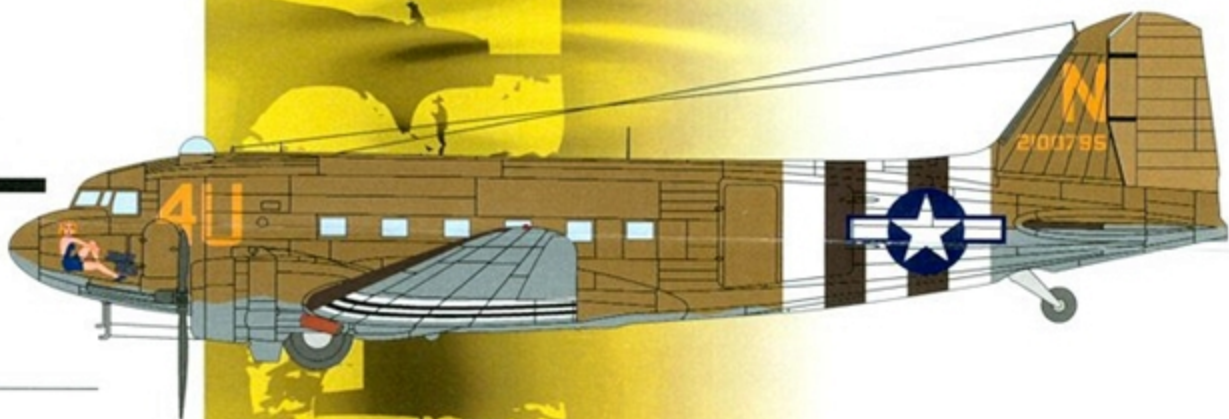

A/C 3

A/C Type	Douglas C-47.
Unit	6 TCS Unit
Locale & Date	Townsville, Australia, 1942.
Camouflage & Markings	As A/C 2, but without D-Day markings.

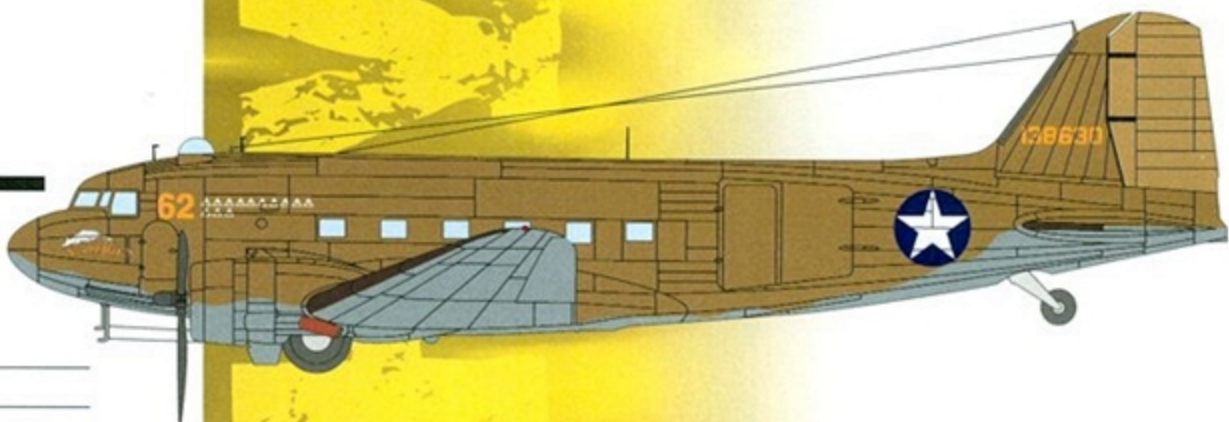

COLOR SCHEMES



FADED OLIVE DRAB GREEN 42 OLIVE DRAB NEUTRAL GRAY


48043

A/C # 1
(INSIGNIA
ON SIX POSITIONS)



A/C # 3

RECOMMENDED KIT:
-REVELL/ MONOGRAM C-47
REFERENCE:
-S/S #1149 C-47 SKYTRAIN
IN ACTION

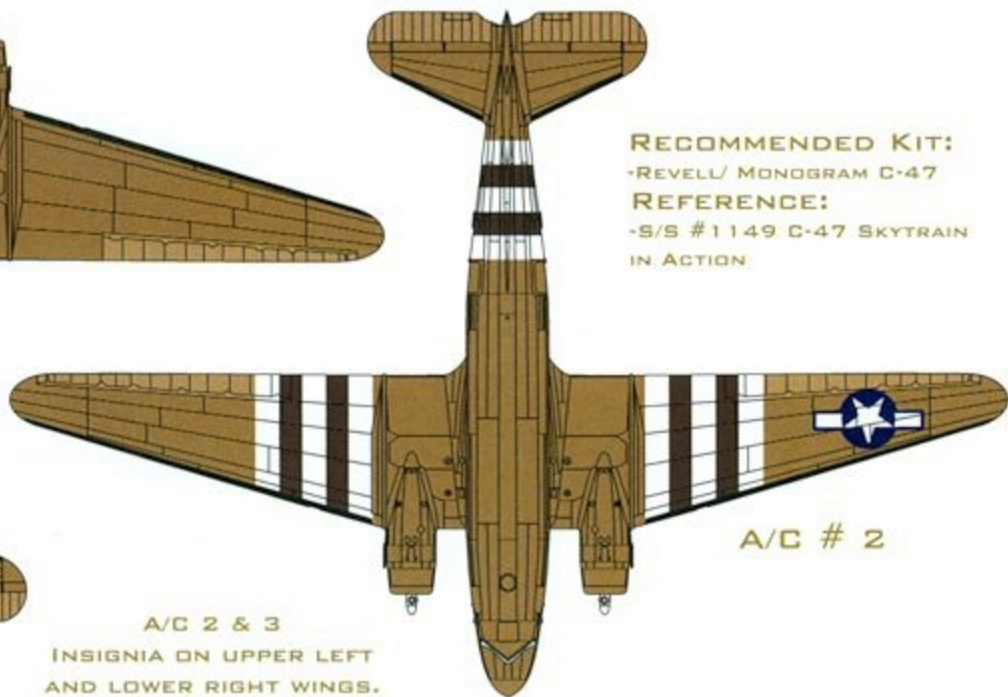

A/C # 2

A/C 2 & 3
INSIGNIA ON UPPER LEFT
AND LOWER RIGHT WINGS.

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal in water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.
4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).



EAGLE STRIKE
Productions
2025 S.W. 22 Terrace
Miami, FL 33145 U.S.A.
fax (305) 285-7219