

FS36320

F 18 HORNET
 US NAVY VFA-82
 USMC VMFA-251

Repil
 caite


P.O. BOX 818
 SANTA ANA, CALIF. 92708

5013 48TH SCALE

FS36375

DIRECTIONS FOR APPLICATION


1. MAKE SURE THAT MODEL IS FREE FROM DUST AND OIL.
2. CUT OUT DECALS FROM SHEET.
3. DIP DECALS IN WATER AS NEEDED. (DO NOT WET ENTIRE SHEET)
4. WHEN DECAL SLIDES ON BACKING EASILY IT IS READY TO APPLY.
5. USING A WET BRUSH SLIDE DECAL FROM BACKING ONTO MODEL INTO PROPER POSITION. BLOT EXCESS WATER GENTLY WITH BRUSH. LET DRY COMPLETELY.
6. AFTER DECALS ARE DRY GENTLY WIPE EXCESS ADHESIVE FROM MODEL WITH A DAMP CLOTH.

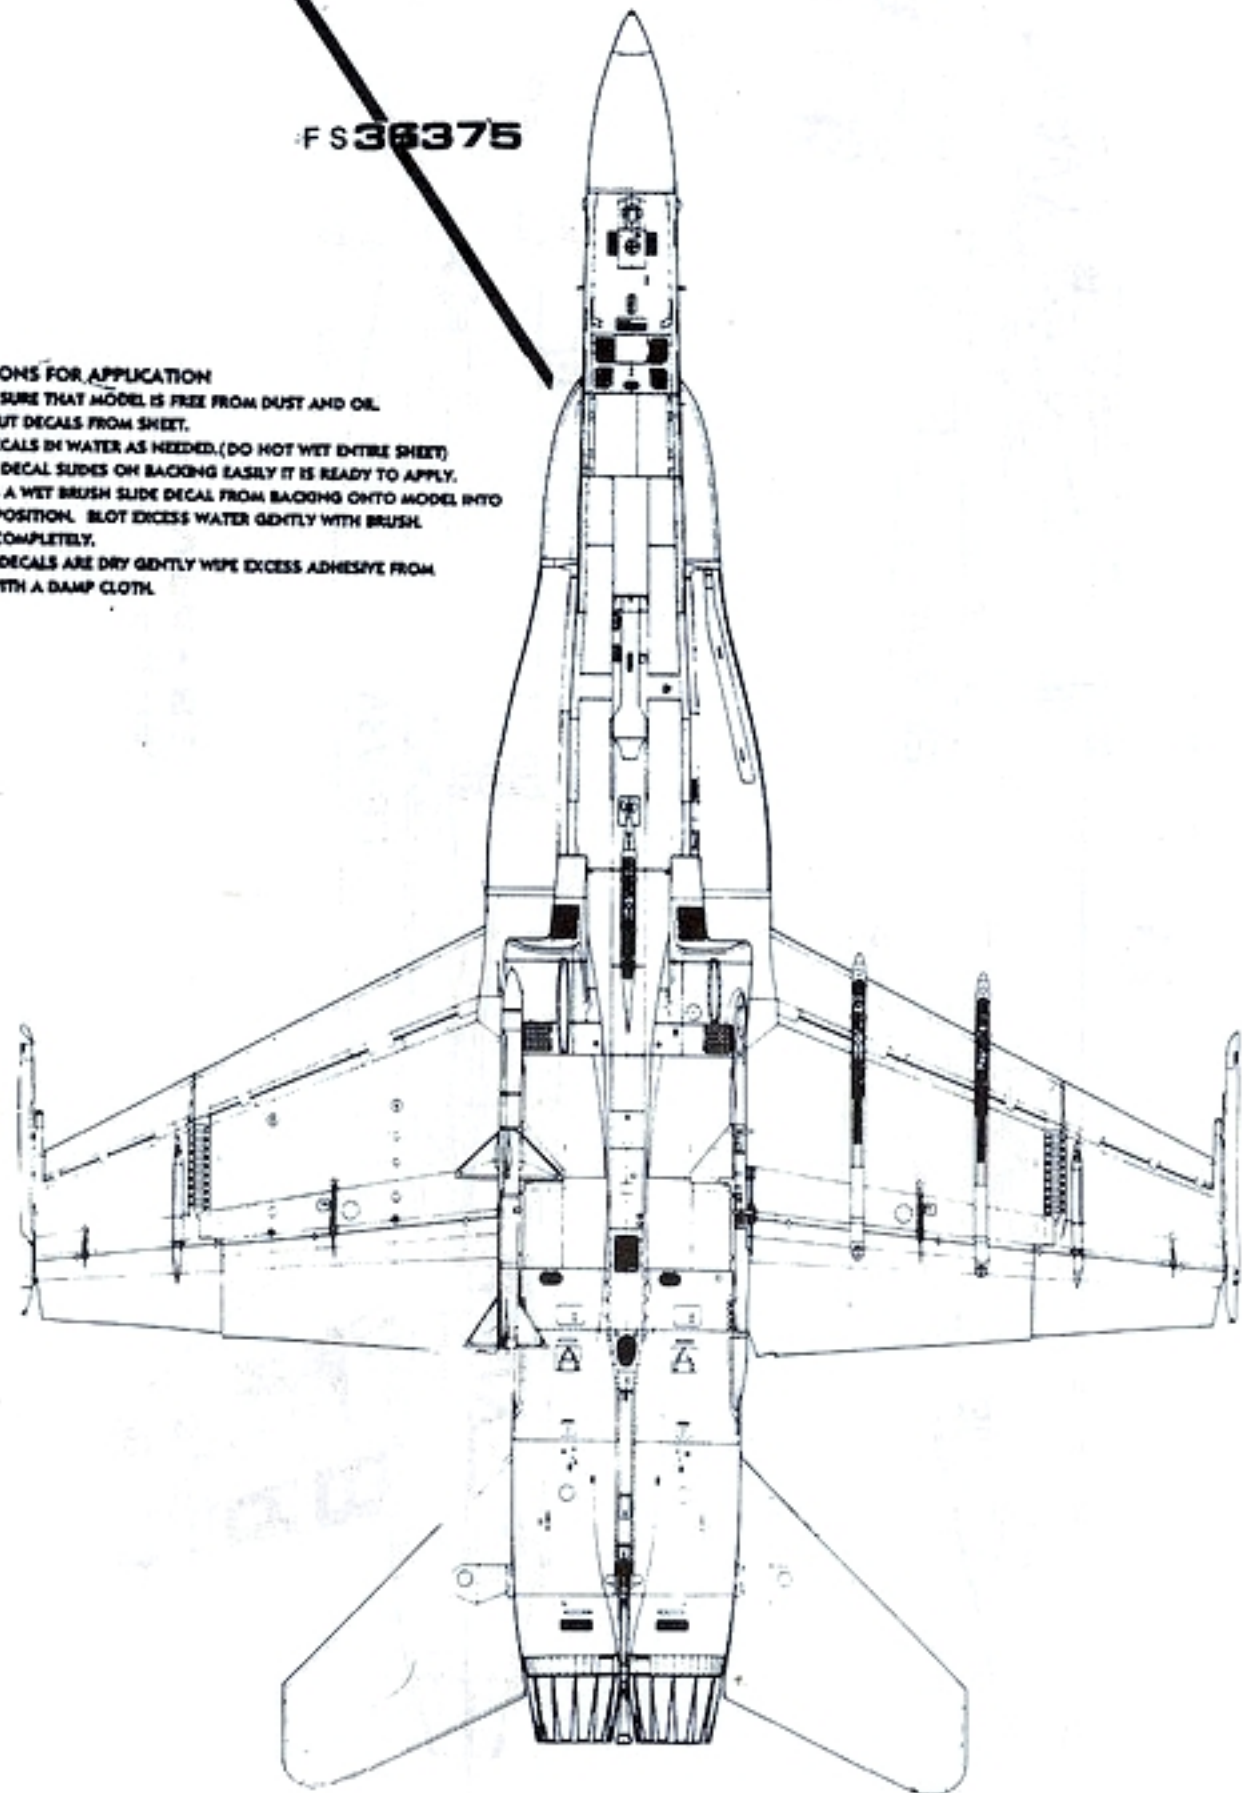

FS36375



FS35237

FS 36320


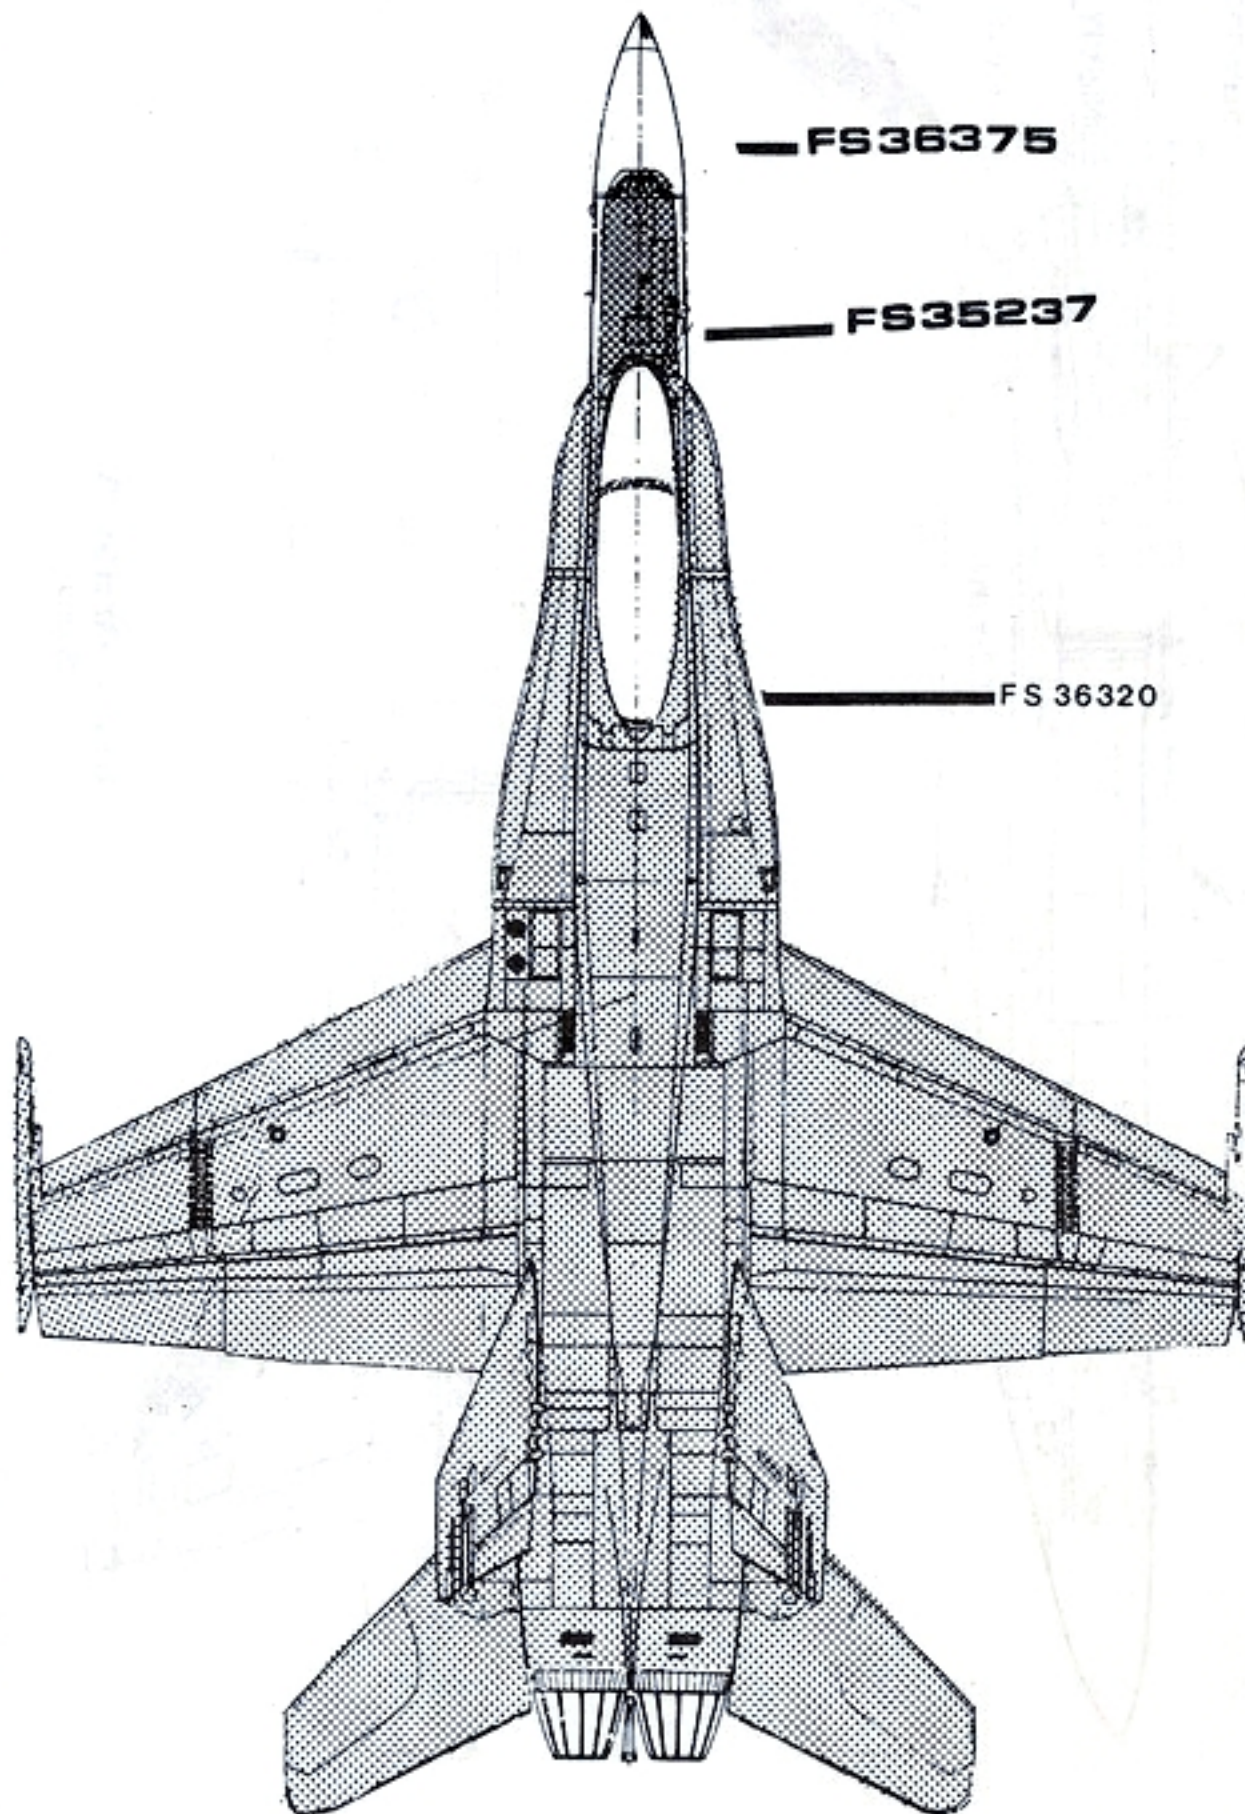


10-48
 20000000
 20000000
 20000000

F/A-18C
VFA-82

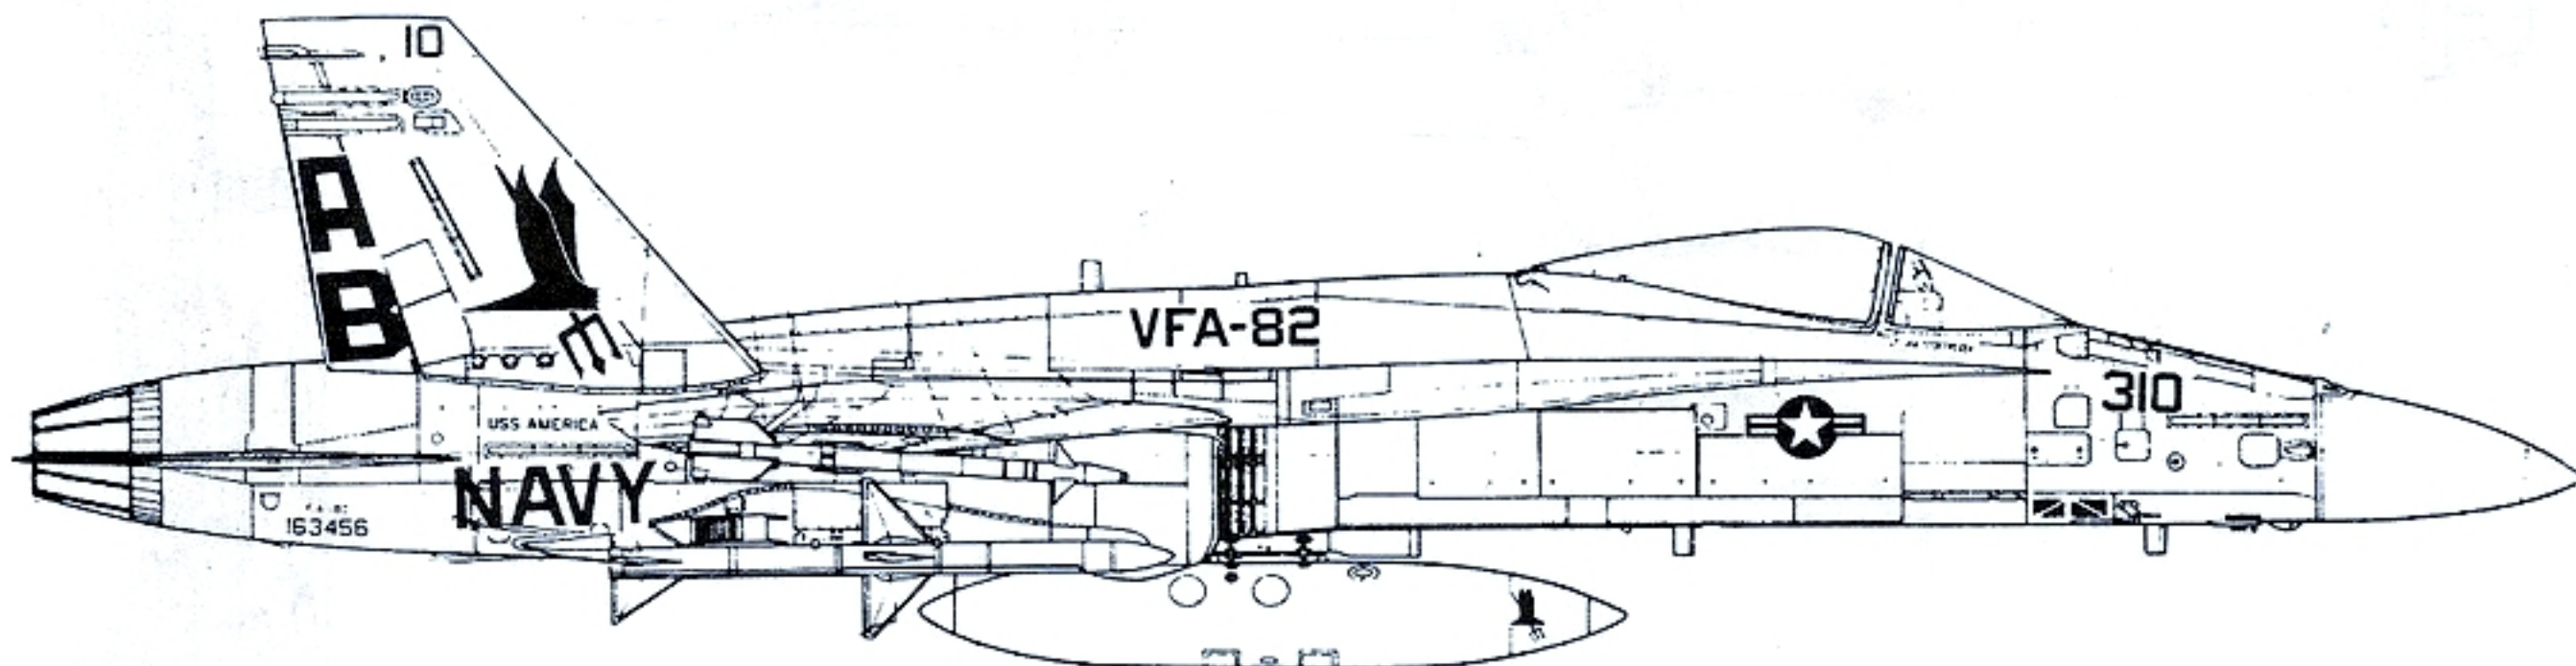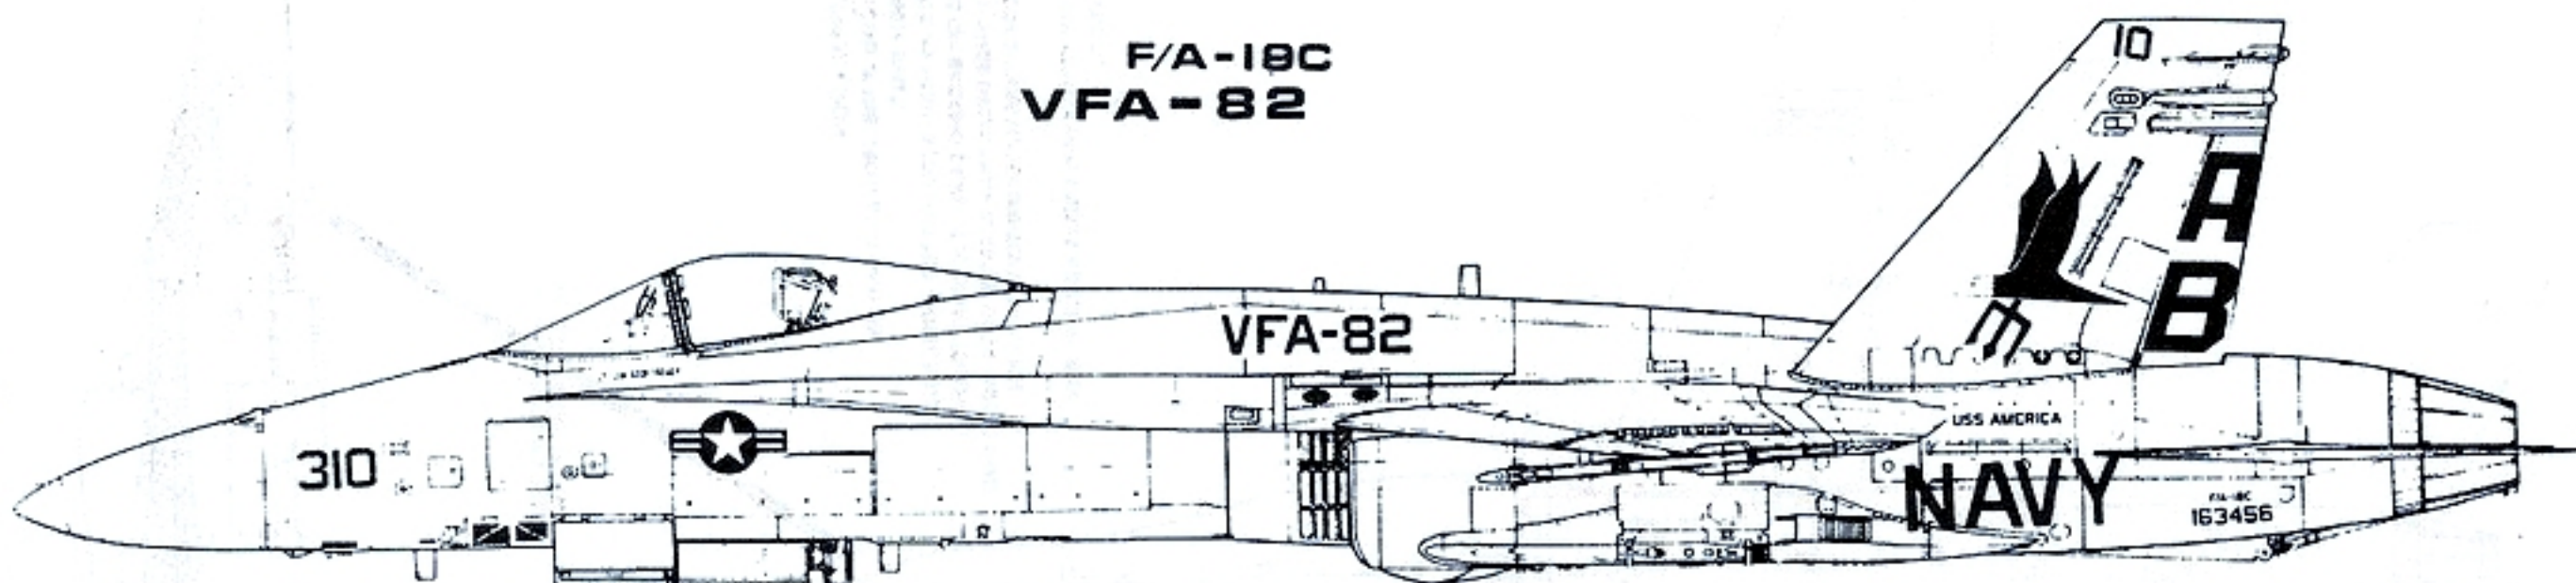

F-18A
VMFA-251

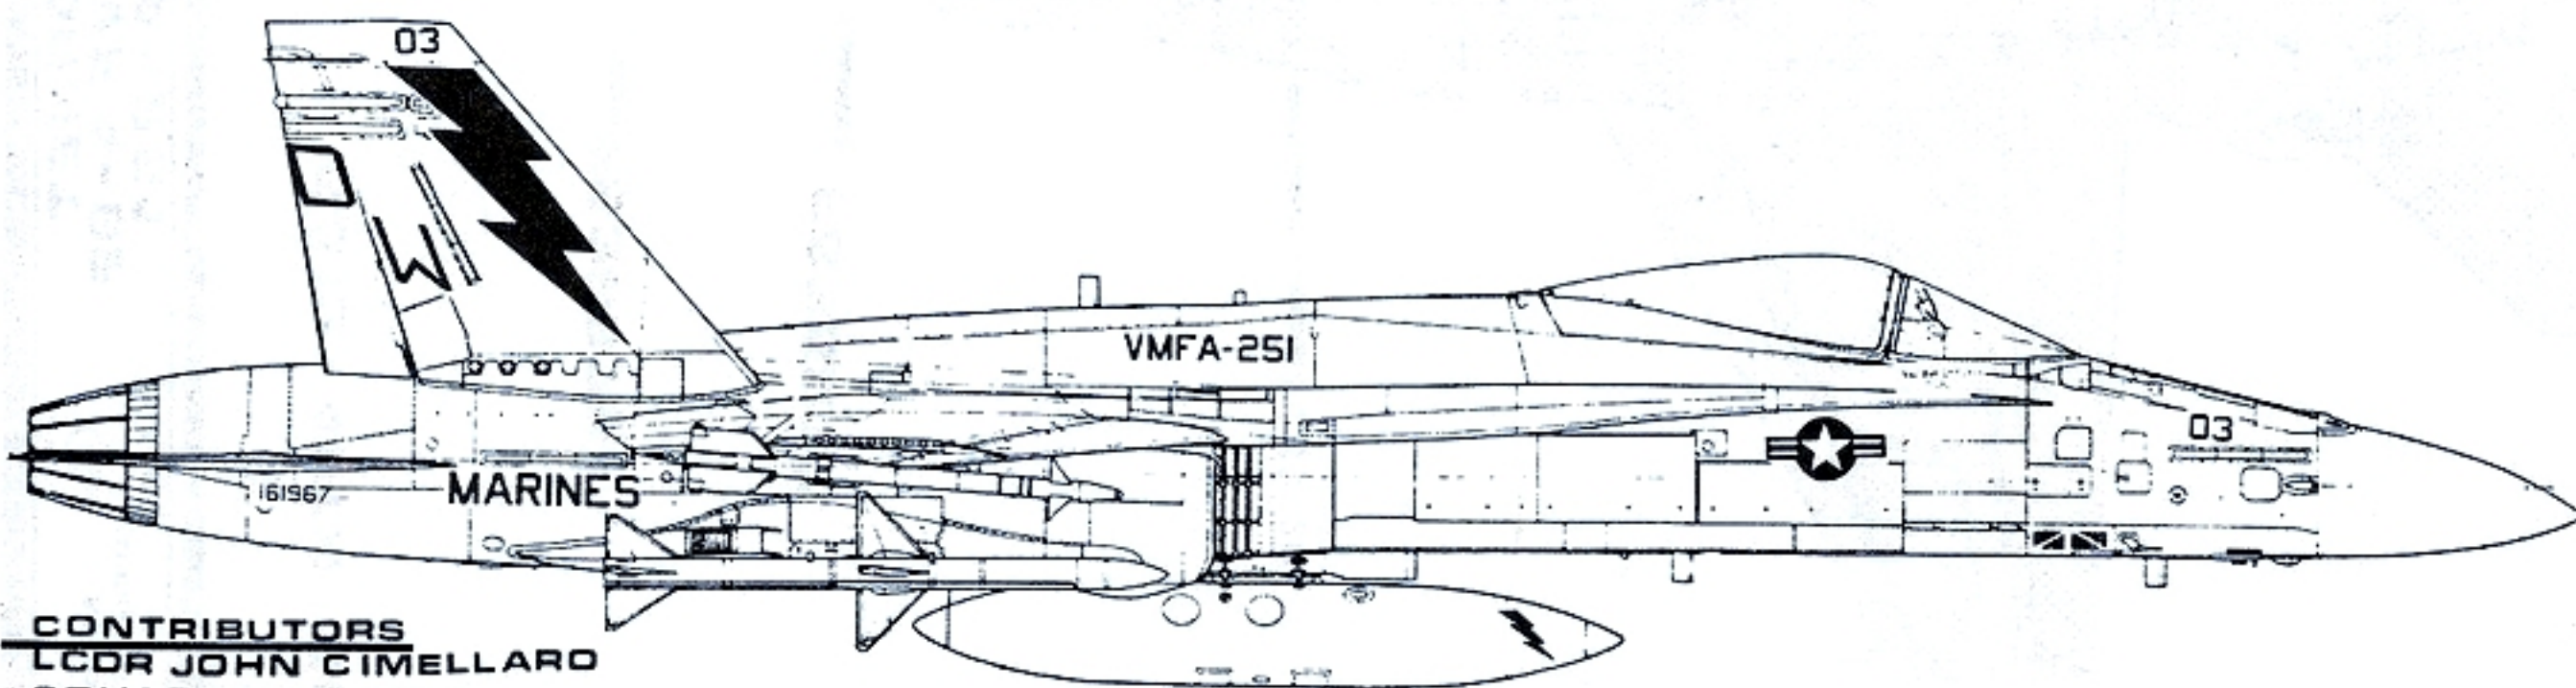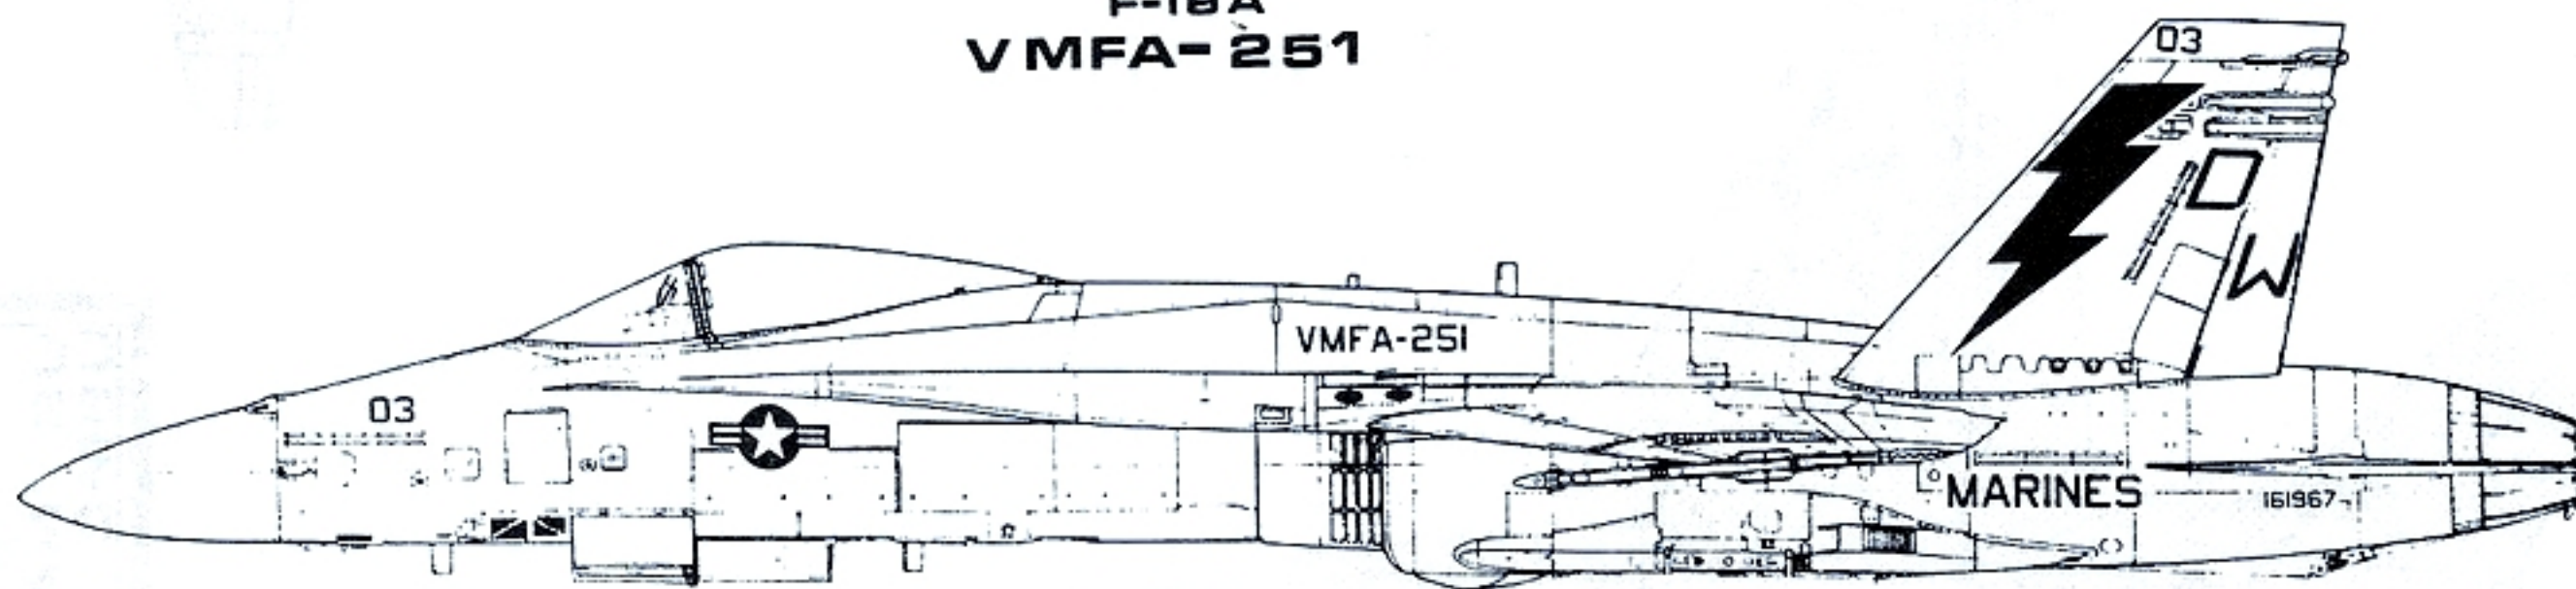

CONTRIBUTORS
LCDR JOHN CIMELLARO
SQUADRON/SIGNAL

MFG. BY
REPLI-SCALE
P.O. BOX 812
SANTA ANA, CA 92702