


CONSOLIDATED B-24H-1-FO 42-7546/P
577 BS/392 BG. Wendling, Norfolk. 1943

Apply 24 first, then when dry 25 followed by 23 to leave a fine coloured line around lettering.

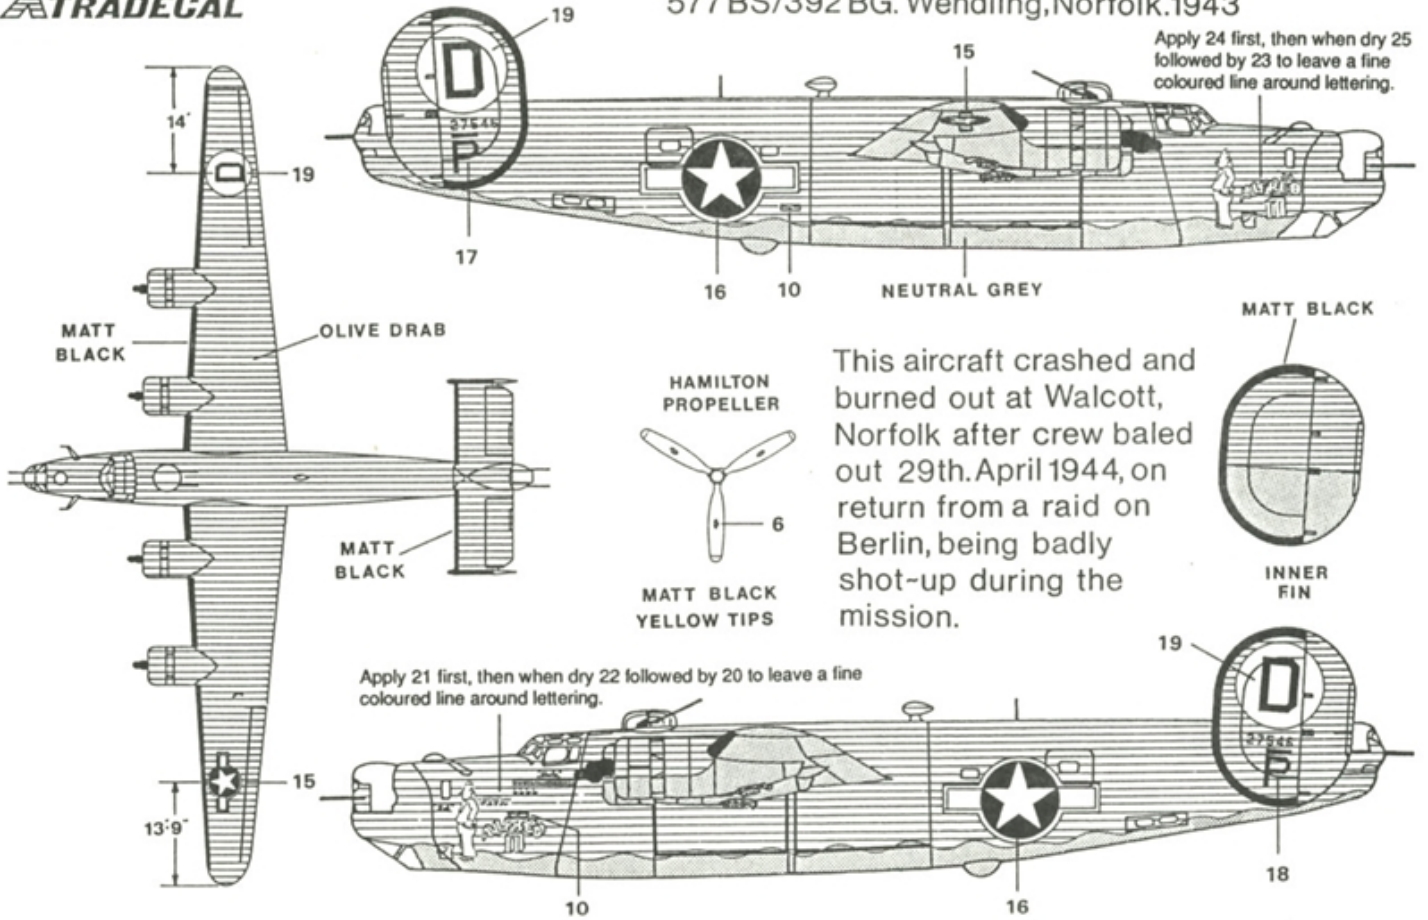

CONSOLIDATED B-24H-15-FO 42-52511/U8-E
786 BS/466 BG. Attlebridge, Norfolk. 1944

