


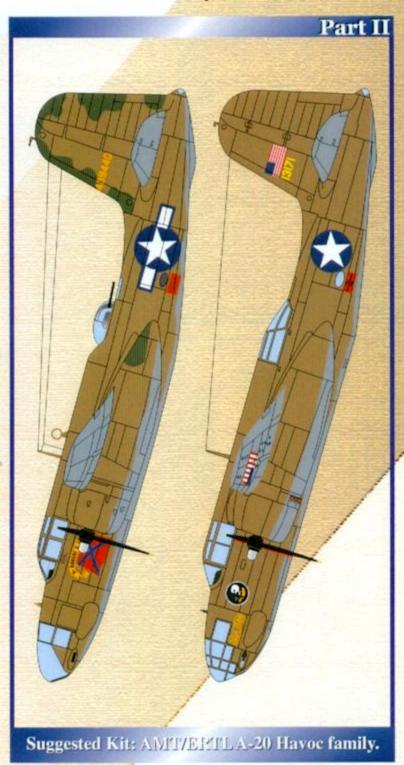

Marauding Havocs A-20/F-3



A-20/F-3






Marauding Havocs

A-20/F-3



48203

F-3A (A-20J) 155th Night Photo Squadron 10th Photo Recon Group. Pilot Lt. Gordon Hulse. This A/C survived the war, but 2/3rd of its crew did not. Lt. Hulse (pilot) and Lt. Leavenworth (nav.) were killed in action in another F-3 on Oct. 30, 1944. Olive Drab over Neutral Gray with Green 42 leading and trailing edges of flying surfaces. Note Flat Black propeller blades, hubs and Natural Metal prop. bosses. 5(5) 2(2 or 3) 4(4) Lady Jean, A-20B of 47th Bomb Group, 12th Air Force. Youks Les Bain, Algeria, December 1942. Overall Olive Drab with Neutral Grey under surfaces. Note Flat Black 7(8)propeller blades, hubs and Natural Metal prop. bosses. D 10

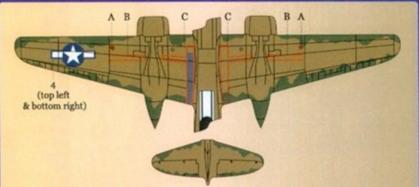

Decaling: Apply decals only to a glossy surface.

With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.

Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel.
Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.

3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.

4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.

5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.

6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).

