


EAGLE STRIKE



48066

CARL VINSON'S HORNETS


HORNETS

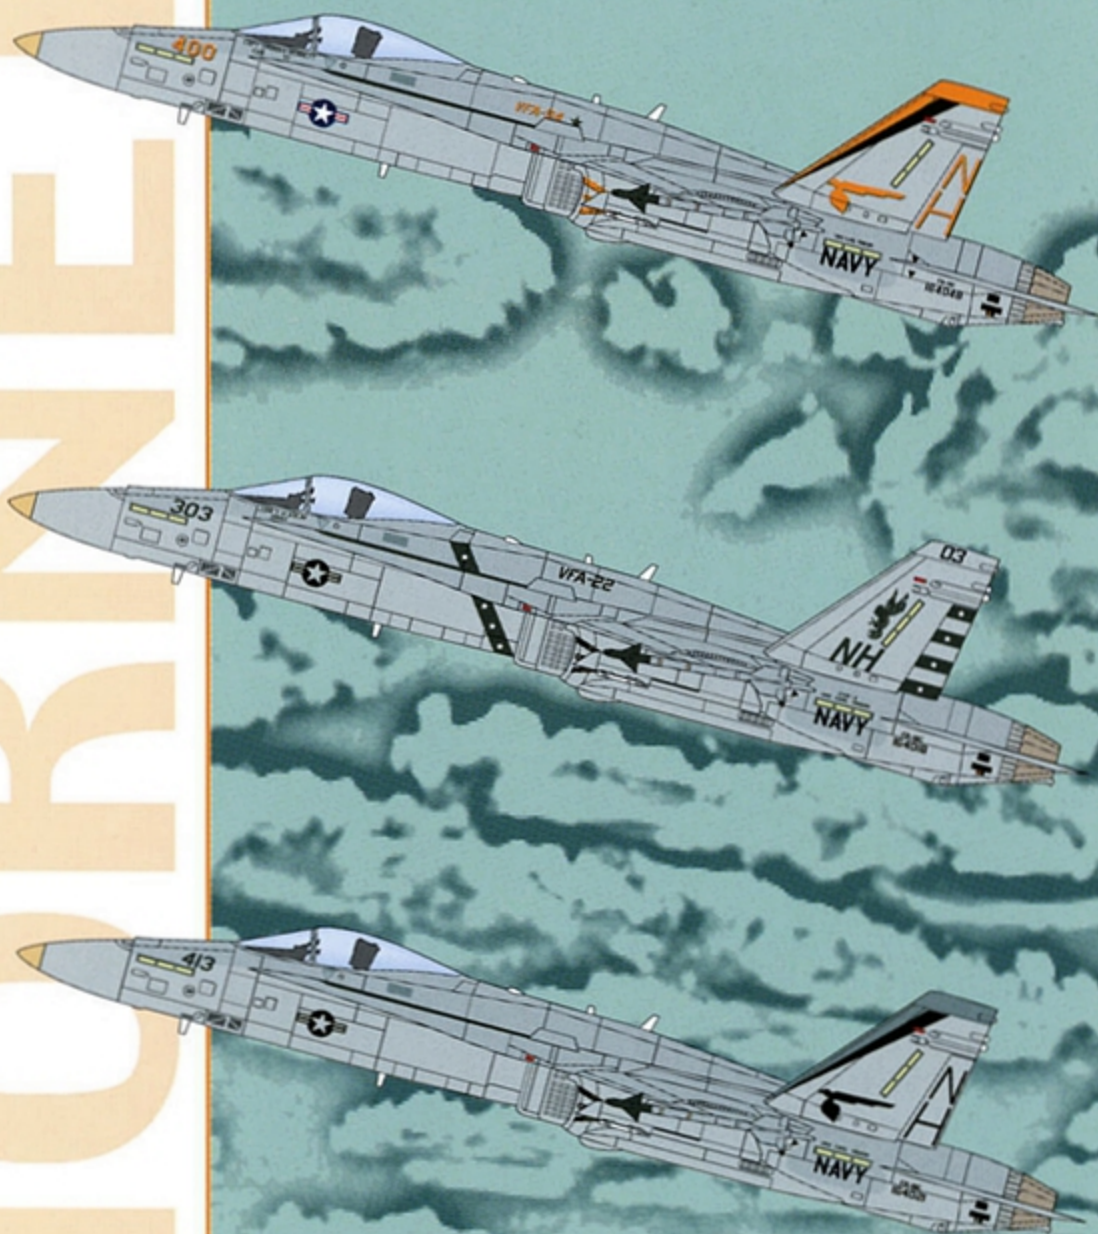

suggested kits: Hasegawa F-18 family.


CARL VINSON'S HORNETS

A/C Type Mighty Shrike 400, F/A-18C.
 Unit VF-94 CAG Flagship on C.V.
 Locale & Date USS Carl Vinson, 11/00.
 Camouflage & Markings Standard Hornet camouflage of Lt. and Dk. Ghost Grays.
 Remarks Capt. Bennett, CAG, is the first ever CAG that is an EA-6B pilot, not an F-14/18 driver as usual.

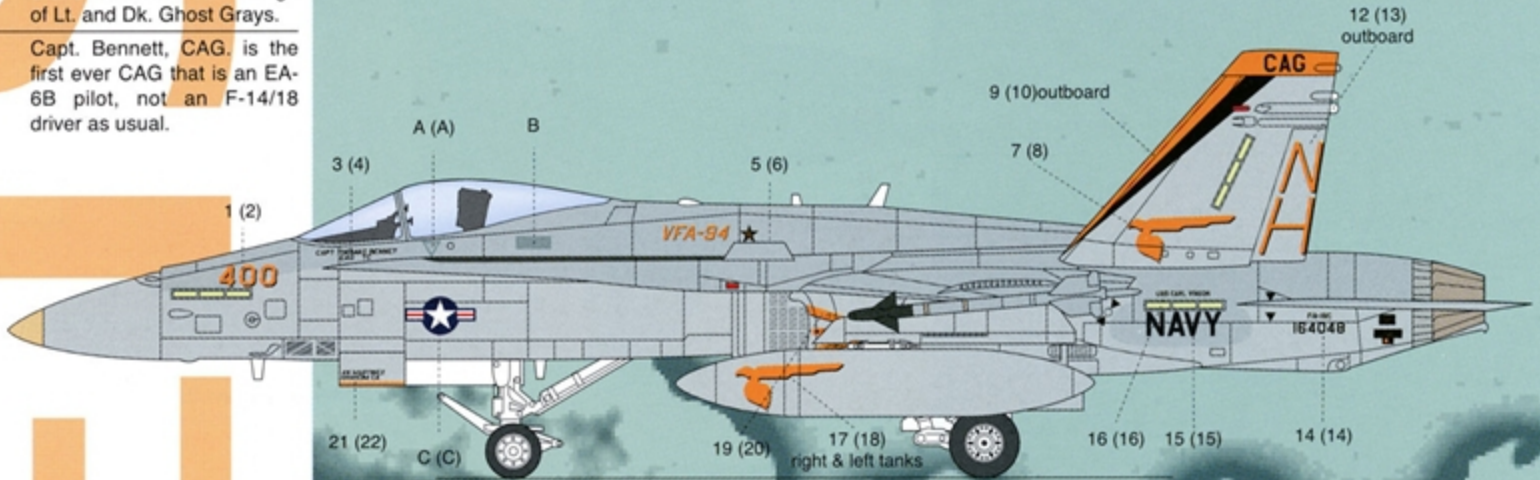



Nose Gear Door Edges
 in Orange on 400 and Red on 303 and 413.

A/C Type Red Cock 303, F/A-18C.
 Unit VF-22 CAG Fighting Cocks, Carrier Air Wing-11.
 Locale & Date USS Carl Vinson, 11/00.
 Camouflage & Markings As A/C 1.

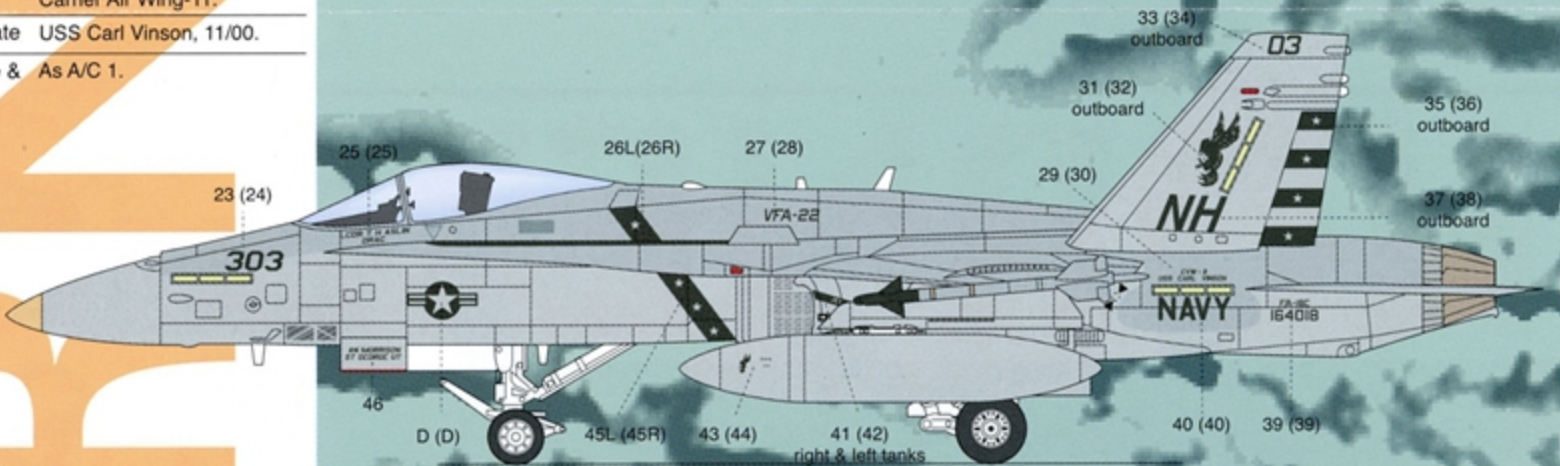

A/C Type F/A-18C.
 Unit VFA-94 Mighty Shrikes, Carrier Air Wing-11.
 Locale & Date USS Carl Vinson, 11/00.
 Camouflage & Markings As A/C 1.

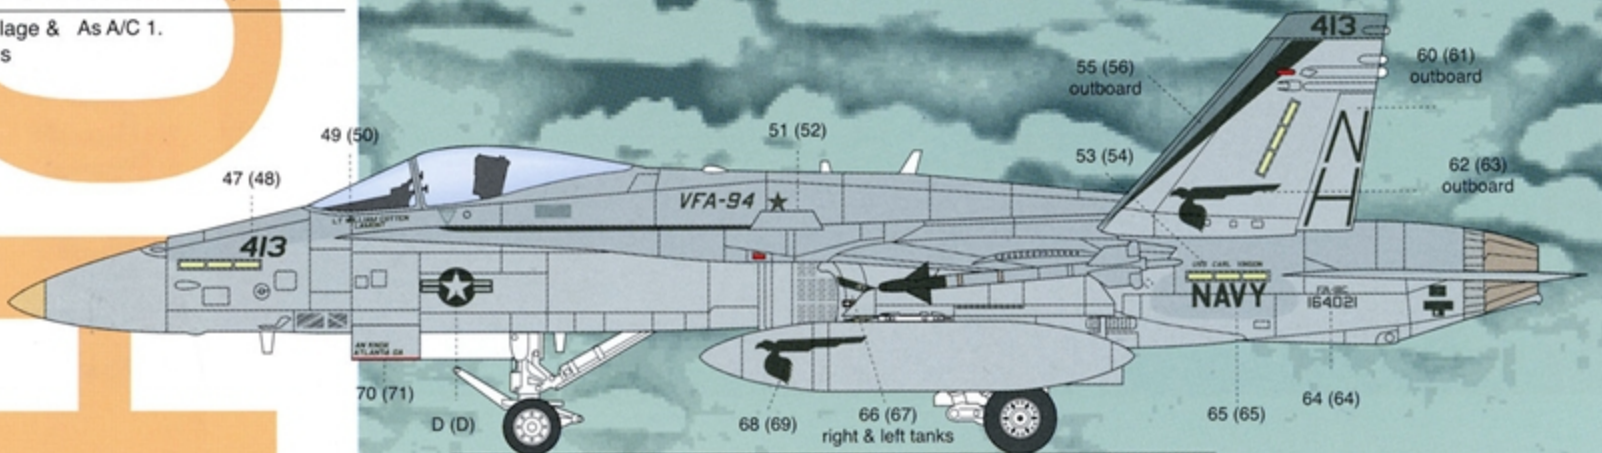


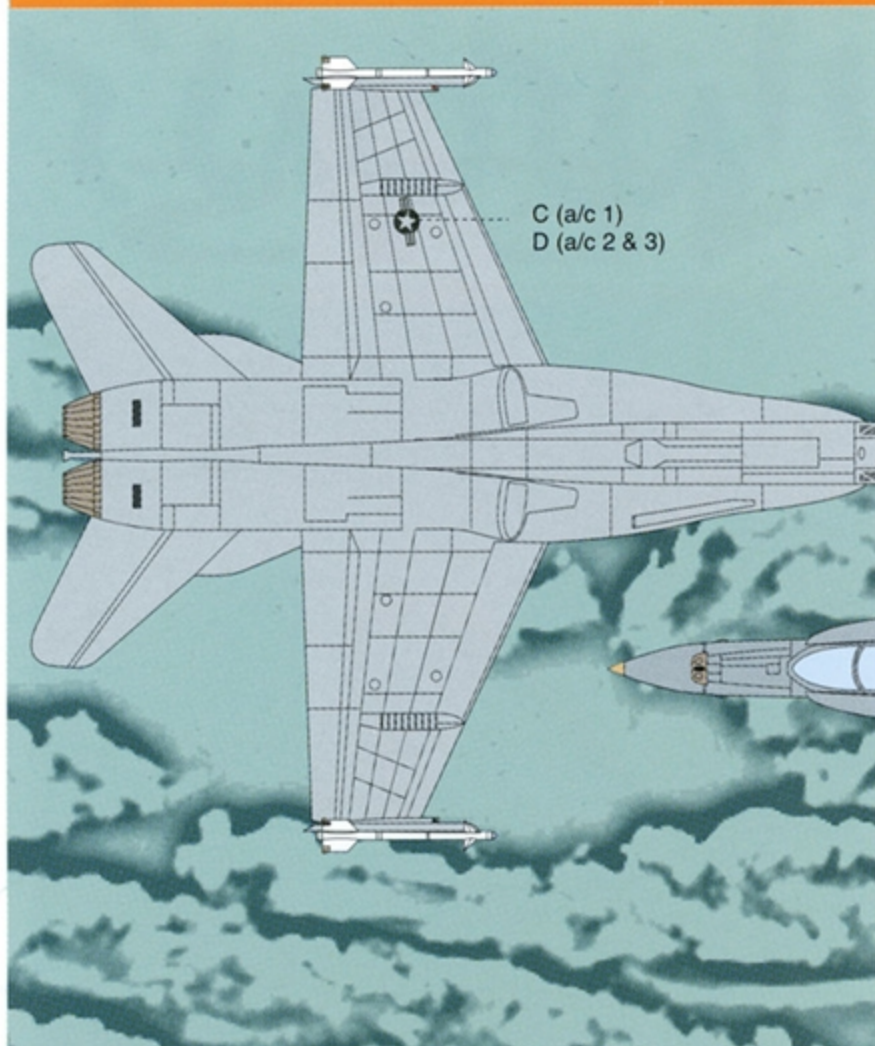

References:

- Photos taken by Col. Mark Hasara during his latest visit to USS Carl Vinson.

our thanks to him!!!

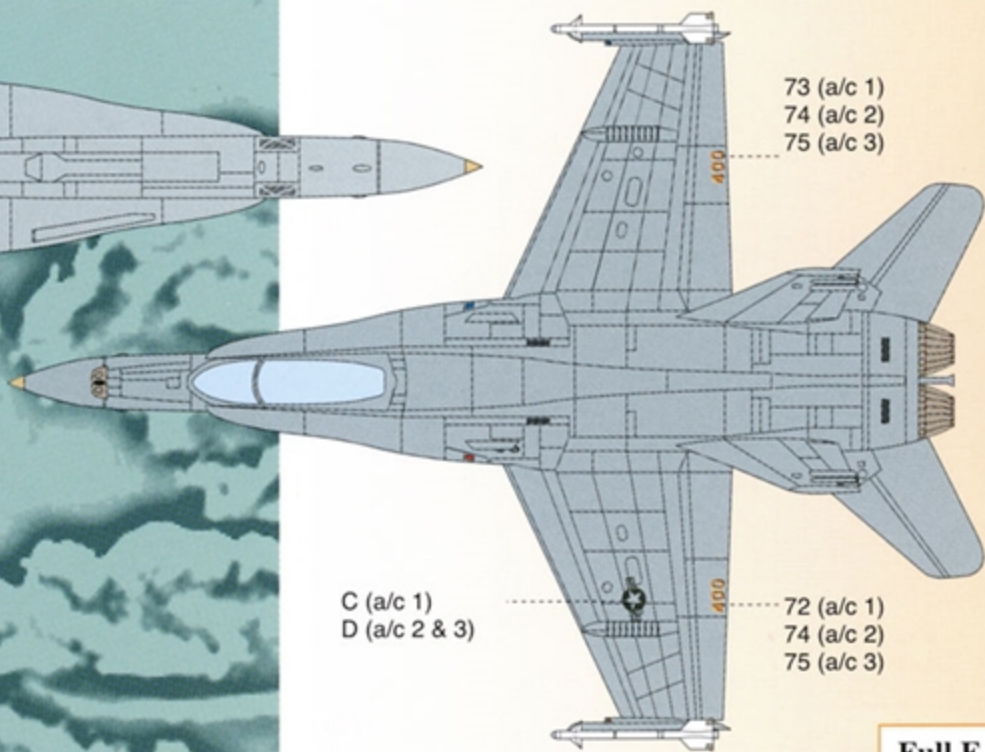

color schemes



12982 SW 132nd Ave, Miami, FL. 33186
U.S.A
Ph: (786) 293-6859, Fax: (786) 293-9286.

EAGLE STRIKE
Productions

Suggested 1:48 Scale Kits:
- Hasegawa F-18 family.

Full F-18 Stencil Set available in AMD 148-022.

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.
4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do **DO NOT TOUCH THE DECAL**, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).

48066