


INSTRUCTIONS FOR ASSEMBLING THE ALBATROSS

AURORA

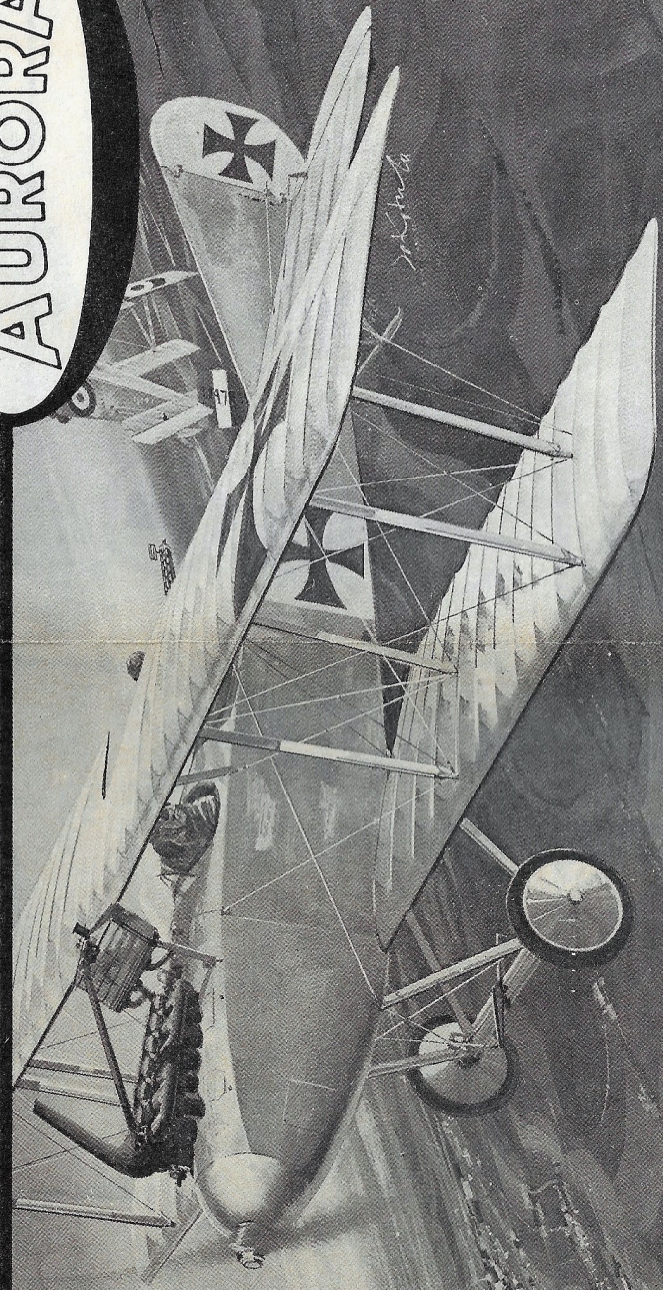

IMPORTANT - READ THIS FIRST!

Before assembling model, study sketch carefully.

Important—Apply cement to inside surfaces only. Avoid getting cement on outer surfaces of model sections. Use cement very sparingly and avoid getting cement on hands, so as not to mar or smear plastic surfaces.

Do not hurry. Work carefully and patiently. **Important Note:** Before proceeding to cement parts together, it is advisable to fit parts together dry (without cement) so that you may familiarize yourself with the parts and how they go together, also noting the points where cement is to be applied.

For best results assemble model exactly in the order indicated.

This kit is molded of styrene plastic—Use only Aurora's Fireproof Styrene Cement and Aurora's Speed-Dry Enamel. Assure yourself of a perfect model every time!

LITHO. IN U. S. A.

© 1964

MADE IN U. S. A.

AURORA PLASTICS CORP.
West Hempstead, L. I., N. Y.

THIS KIT IS MOLDED OF STYRENE PLASTIC

Use Only . . .

AURORA'S
FIREPROOF
STYRENE PLASTIC
CEMENT



TUBE 10¢
BOTTLE WITH BRUSH 25¢

"THE ENAMEL WITH THE SPRAYED ON LOOK"

• ONE COAT COVERS
• NO BRUSH
MARKS
• DRIES IN
30 MINUTES

79¢ per
KIT





also sold
in individual
bottles . . .
at 10¢ each

SPEED-DRY ENAMELS are AURORA'S REVOLUTION-
ARY NEW ENAMEL PAINTS developed after years
of research especially for Plastic Models and
other products of Wood, Metal, Glass or China.


FOR SUGGESTED DETAIL PAINTING SCHEME — SEE ILLUSTRATIONS. Paint parts as indicated and allow to dry before assembling.

For best results, use only AURORA'S SPEED-DRY ENAMEL — ONE COAT COVERS — DRIES IN 30 MINUTES — NO BRUSH MARKS.

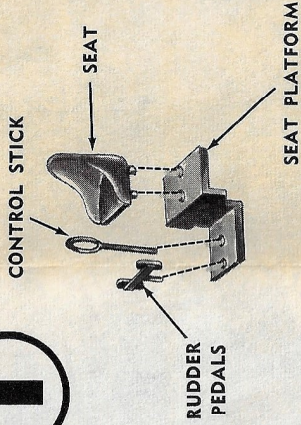
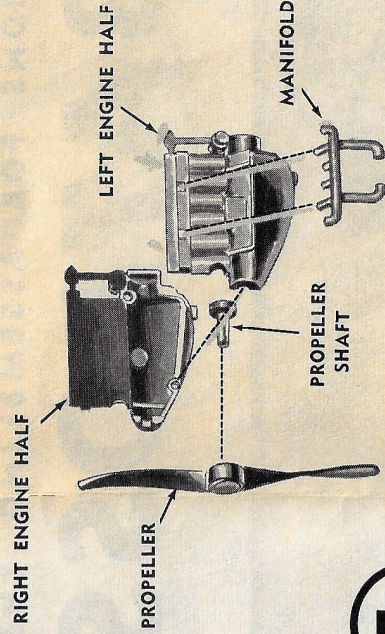


1. Place PROPELLER into position in RIGHT ENGINE HALF.
2. Cement LEFT ENGINE HALF to RIGHT ENGINE HALF, making sure not to allow cement to adhere PROP SHAFT to ENGINE.
3. Using a drop of cement fasten PROPELLER to PROP SHAFT.
4. Cement MANIFOLD into position.
5. Cement RUDDER PEDALS, CONTROL STICK and SEAT to SEAT PLATFORM, in top of FUSELAGE.

1

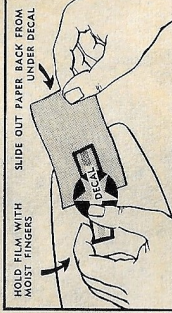


1. Cut each decalcomania from sheet separately, inside of cutting line close to design.
2. Dip each decalcomania into water for approximately 30 seconds, and then lay on flat surface.
3. When decalcomania slides easily on paper backing, partly off paper and place in location desired. Hold decalcomania in this position and then slide paper backing from underneath design. (Note illustration.)
4. Press out bubbles with soft, damp cloth and allow decalcomania to set.

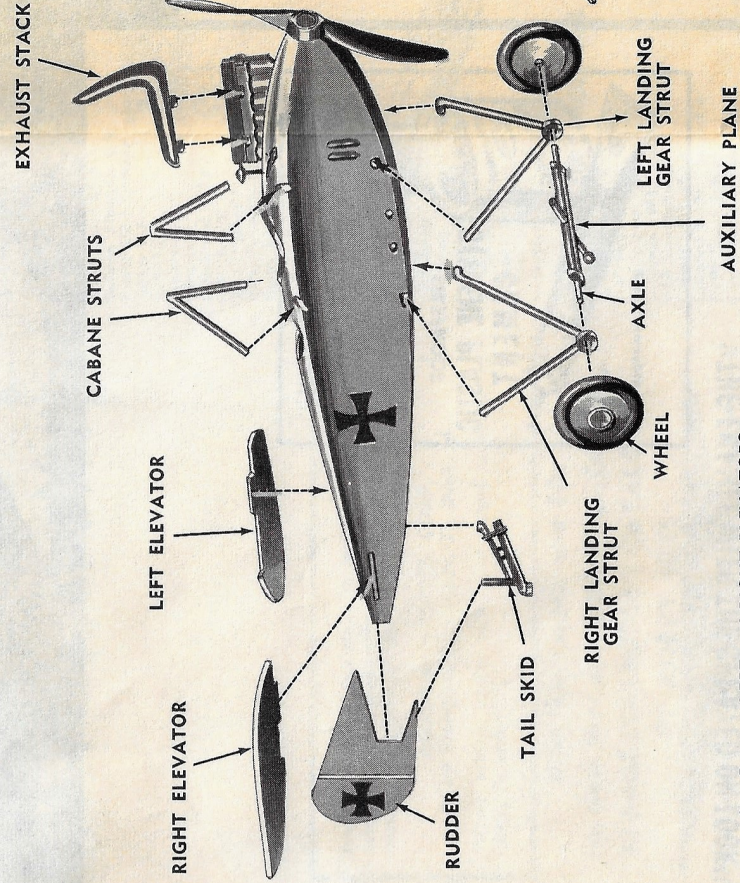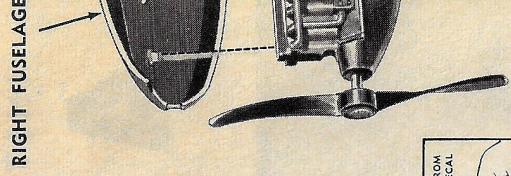


9. Cement LEFT and RIGHT ELEVATORS to REAR of FUSELAGE.
10. Cement RUDDER into position.
11. Cement TAIL SKID to RUDDER FIN and FUSELAGE.
12. Cement EXHAUST STACK to top of ENGINE and CABANE STRUTS into GROOVES in top of FUSELAGE.
13. Cement LEFT and RIGHT LANDING GEAR STRUTS to FUSELAGE.
14. Cement AUXILIARY PLANE between STRUTS allowing AXLES to pass through holes in bottom of STRUTS.
15. Cement Wheels to ends of AXLES.

3

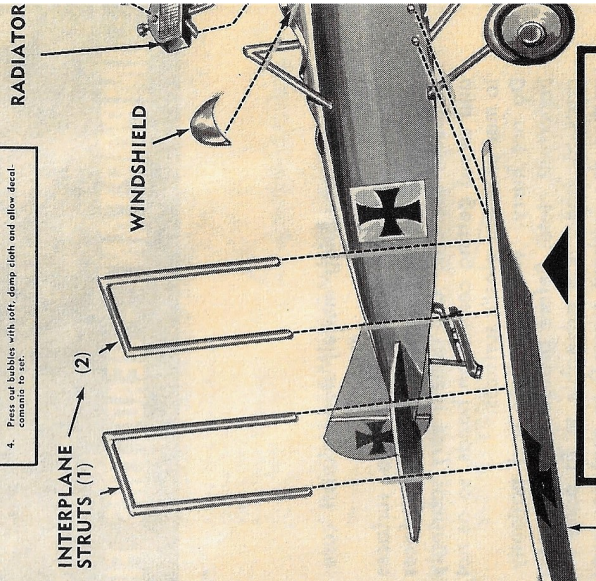


LOWER RIGHT WING HALF

16. Cement (CLEAR PART) WINDSHIELD to FUSELAGE at front of COCKPIT.
17. Cement RADIATOR to FRONT CABANE STRUT and WATER LINE to RADIATOR and EXHAUST STACK.
18. Cement FORWARD MACHINE GUN to RIGHT SIDE of FUSELAGE.

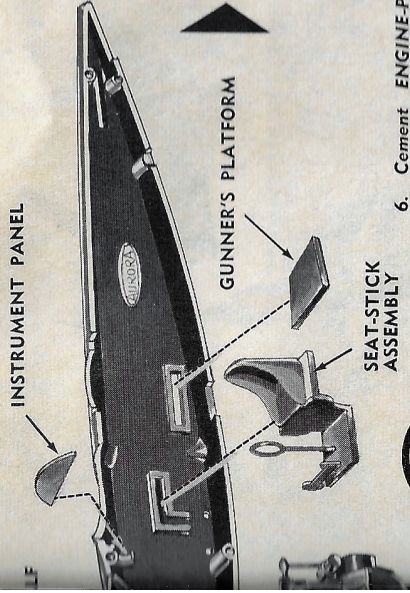


RIGHT FUSELAGE HALF

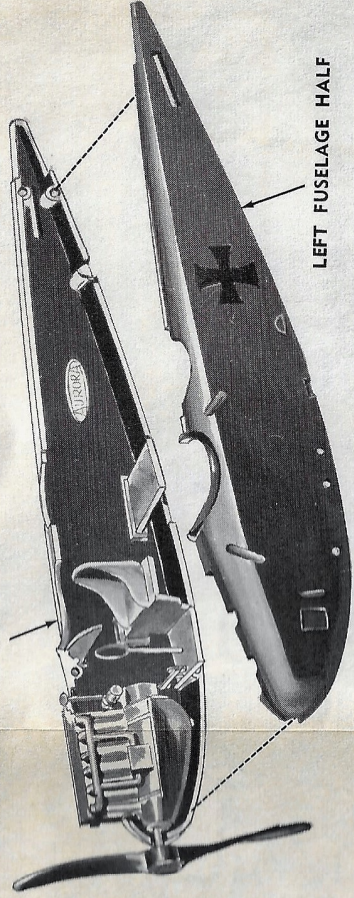

2


6. Cement ENGINE-PROP ASSEMBLY to RIGHT FUSELAGE HALF.
7. Cement INSTRUMENT PANEL, SEAT-STICK ASSEMBLY and GUNNER'S PLATFORM to RIGHT FUSELAGE HALF.
8. Cement LEFT FUSELAGE HALF to RIGHT FUSELAGE HALF.

ALBATROSS

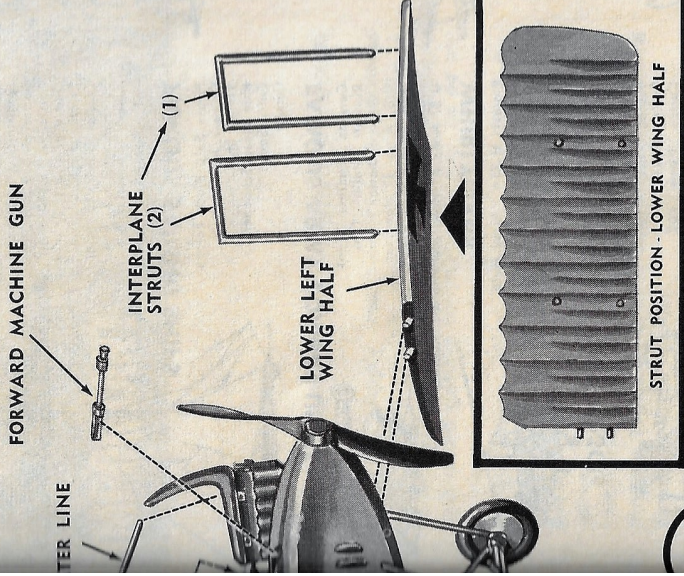


4

19. Cement INTERPLANE STRUTS into HOLES in LOWER WING HALVES. NOTE: STRUTS marked (#1) toward outside of WINGS. STRUTS marked (#2) toward inside of WINGS.
20. When STRUTS are firmly set, cement LEFT and RIGHT LOWER WING HALVES to FUSELAGE. NOTE: To insure that LOWER WINGS are square with FUSELAGE, it is suggested WINGS should be held firmly until dry.

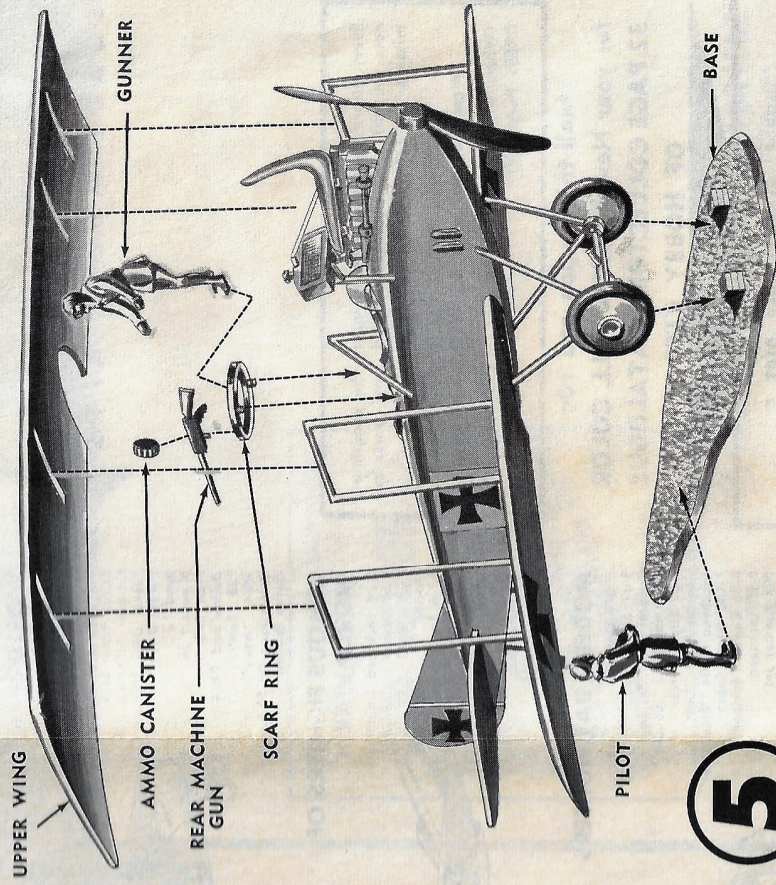

5

21. Cement SCARF RING (with small hole in top of RING toward REAR) over REAR COCKPIT.
22. Cement AMMO CANISTER to RIGHT SIDE of REAR MACHINE GUN then cement PIN on BOTTOM of MACHINE GUN into hole in SCARF RING.
23. Cement tops of WING STRUTS into slots in underside of UPPER WING. Hold in position until dry.
25. Place GUNNER in REAR COCKPIT.
24. Cut out sections of DECALS to correspond with markings on MODEL. Read directions on back of DECALS before applying. Allow to dry before any further handling.
26. Cement PILOT to BASE and place PLANE against Wheel Checks.

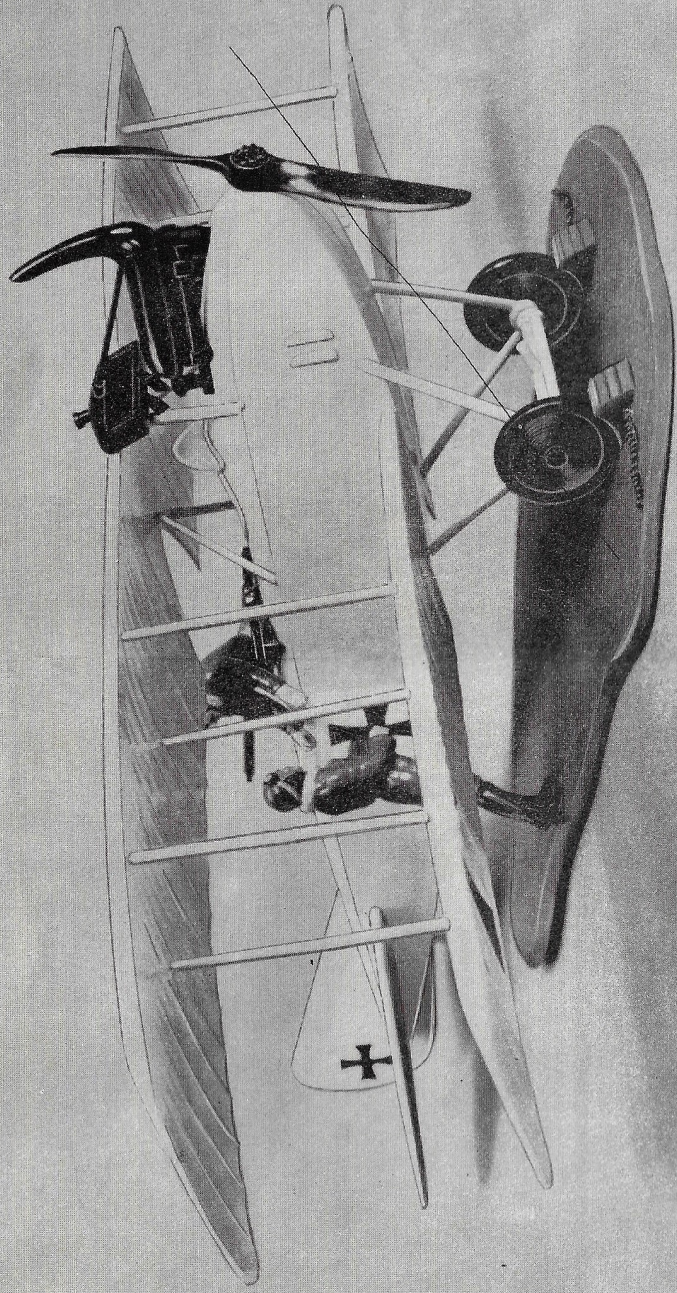

A FEW OF AURORA'S SCALE MODEL KITS

Every effort has been made to insure the completeness of this Kit—however, should any part be missing, write directly to:

AURORA PLASTICS CORP.
West Hempstead, L. I., N. Y., Dept. M

(When writing please print your NAME and ADDRESS PLAINLY)

**Mail this coupon and 10c
for your New AURORA FULL COLOR
32 PAGE COLLECTOR'S CATALOGUE
OF HOBBY KITS**

AURORA PLASTICS CORP. DEPT. C
44 Cherry Valley Rd., W. Hempstead, New York

Please rush me by return mail the new 32 page full-color AURORA HOBBY KIT CATALOGUE. I am enclosing 10c in stamps or coin.

NAME (PLEASE PRINT)

ADDRESS

CITY

STATE

CONTENTS: MERCHANDISE—Postmaster: This parcel may be opened for postal inspection. Return postage guaranteed.

Cut Along Line


FAMOUS FIGHTERS OF WORLD WAR I

DeHaviland Tiger Moth
French Nieuport
Sopwith Camel
British Scout SE-5
German Albatross D-3
Fokker Dr-1 Triplane
Fokker D-7
Spad 13
Nieuport 28
Platz D-3
DeHaviland DH-4
F2B "Brisit"
JN-4 "Jenny"
DeHaviland DH-10 Bomber
Gotha Bomber




FAMOUS FIGHTERS OF WORLD WAR II

P-38 Lockheed Lightning
P-51 Mustang
Curtis P-40
Hellcat
AT-6 Texan
SNJ Navy Trainer
B-17 Flying Fortress
British Spitfire
ME-109 Messerschmitt
Japanese Zero
Russian MiG-19
Focke-Wulf



MODERN DAY FIGHTERS

F8U-1 Crusader
B-47 Stratojet "Skysray"
Douglas F4EFA "Cougar"
B-52 Stratofortress
C-141 "Dodge"
Lockheed F-104 "Starfighter"
F-100 Super Sabre
F-36 Cooper Bomber
F-90 Lockheed
F9F Panther Jet
F94C "Starfire"
F8D Sabre Jet
Convair F-106 "Pogo"
Lockheed VTO
Vertiflite with Platform Trailer
F-101 Voodoo
North American F-107A
F-105 Thunderchief
Avro Arrow CF105

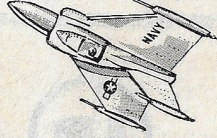

WORLD'S FIRST MANNED SPACE SHIP

X-15 Sateleoid Rocket Plane



GIANT BOMBERS

B-26 Martin "Marauder"
B-29 Superfortress
B-25 Mitchell Bomber
B8Y "Catalina"
B-58 Hustler
Russian Nuclear Bomber




FAMOUS WARSHIPS

Pocket Battleship Graf Spee
Battleship U.S.S. Iowa
Destroyer U.S.S. Halford
Carrier U.S.S. Saratoga
Destroyer U.S.S. Benning
Cruiser U.S.S. St. Paul
Carrier U.S.S. Forrestal
Submarine U.S.S. Sea Wolf
Atomic Submarine S.S.N. Nautilus
"Q" Ship Atlantis—German Raider




FAMOUS SAILING SHIPS

Pirate Ship Black Falcon
Chinese Junk
Viking Ship
Blue Nose Schooner
Cutty Sark
Corsair

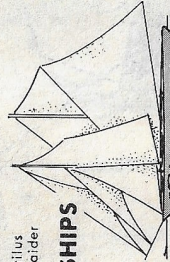


FAMOUS ARMY COMBAT UNITS

German "Panther" Tank
Russian "Stalin" Tank
"General Patton" Tank
U.S. Army M8 Howitzer
U.S. Army M8 Munitions Carrier
U.S. Army 155 MM "Long Tom"
U.S. Army 8" Howitzer with M8 Munitions Carrier




WHIRLYBIRDS

Prasecki H-25A "Army Mule"
Kaman Hok "Egg Beater"
Hiller Hornet "Ram Jet"
Sikorsky S-55 "Windmill"
Prasecki H-21 "Work Horse"

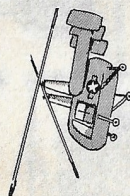


POPULAR PLANES OF THE 1930's

Boeing P-26A
Boeing P-12E
Boeing F4B4
Curtiss "Hawk" P6E
Curtiss SBC3 "Helldiver"
M-2 "Mail Plane"



SUPER MODERN JET AIR LINERS

Pan American Boeing 707
TWA Boeing 707
TU104 Russian Jet



RACING SPORT CARS

The MG
The Jaguar
Ferrari 342 "America"
Ferrari Sportster
The Cunningham

