Westland Sea King Collection Pt5





For the best results these decals should be applied to a gloss surface such as provided by either Xtracolor or Xtracrylix paints. Cut out the decal required and soak in warm water until the decal is released from the backing paper. Wet the area to be decaled with MICRO SET which will help to eliminate air trapped under the decal and position the decal.

After 5 or 10 minutes wet the decal with MICRO SOL which will soften the decal and ensure that it settles down over any surface detail. Allow the decal to dry for at least 12 hours. During this time some wrinkling of the decal may occur, this is normal. Do not touch the decal at this time.

Carefully check for small air bubbles and if there are any prick with a needle and apply a drop of MICRO SOL. After all air bubbles have been eliminated and the decals are dry wash the entire model with water to remove any excess decal adhesive.

When completely dry the whole model should be sprayed with a coat of Xtracolor or Xtracrylix Flat, Satin or Gloss varnish depending on the finish required.

Store in a cool dry place, avoid sunlight, dampness or extremes of temperature and/or humidity.




www.hannants.co.uk


Harbour Road, Oulton Broad, Lowestoft, Suffolk, NR32 3LZ

Phone +44 1502 517444


Fax +44 1502 500521

sales@hannants.co.uk

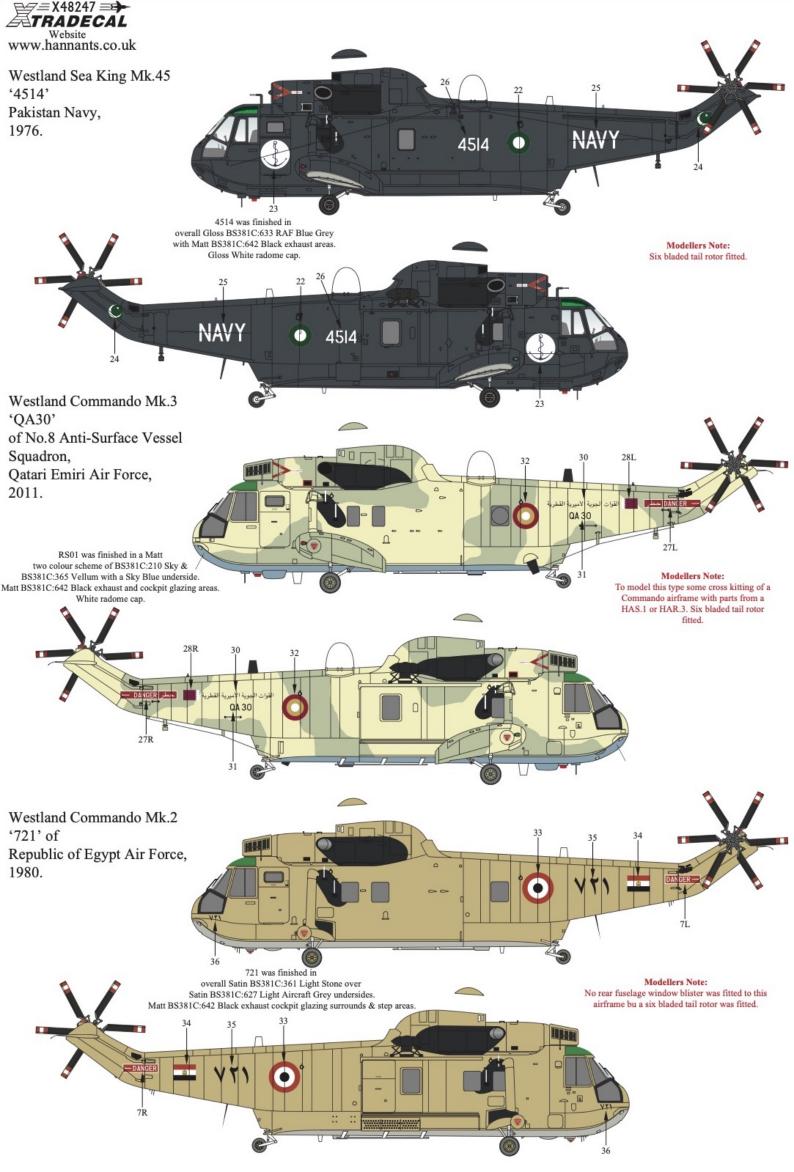

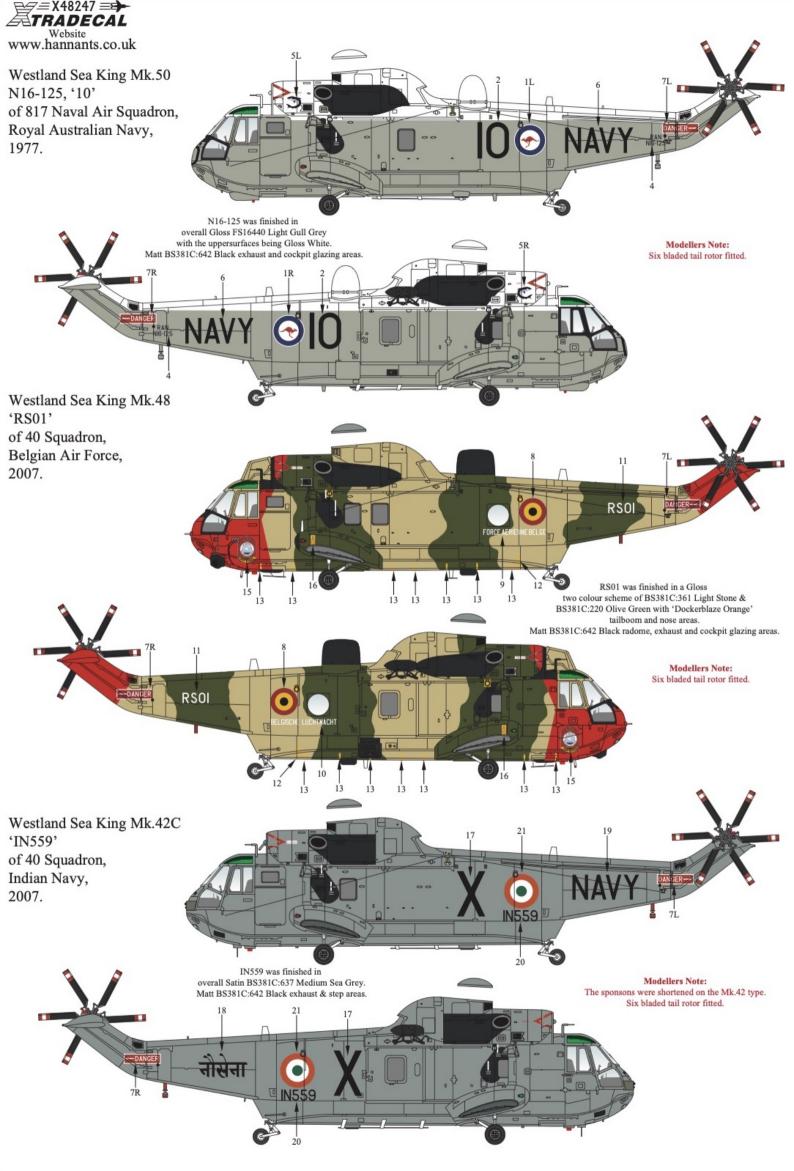



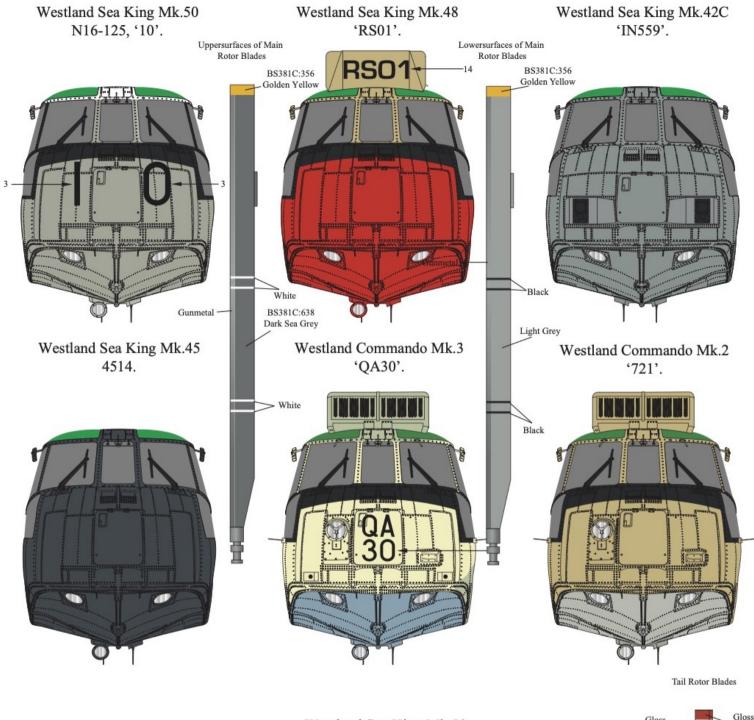



Xtracolor Paints

X029 Light Stone

X141 White

X137 Light Gull Grey

X003 Medium Sea Grey X007 Sky X012 Night Black X013 RAF Blue Grey X015 Light Aircraft Grey X027 Olive Drab

Paints:

The colours used on these aircraft can be found in the Xtracolor (prefix number with X) and Xtracrylix (prefix number with XA1) range of paints.



Xtracolor Paints

XA1003 Medium Sea Grey XA1007 Sky XA1012 Night Black XA1013 RAF Blue Grey XA1015 Light Aircraft Grey XA1027 Olive Drab XA1029 Light Stone XA1137 Light Gull Grey XA1141 White