




Install radio rack.

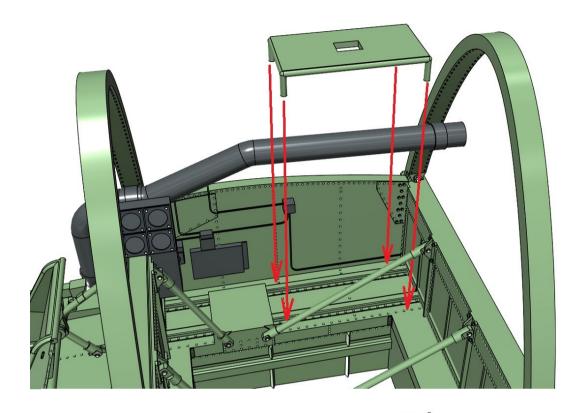

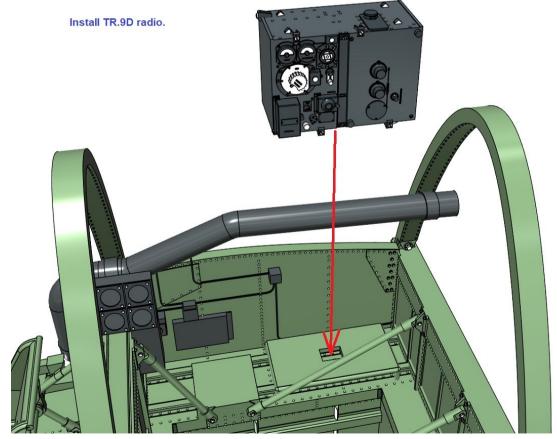


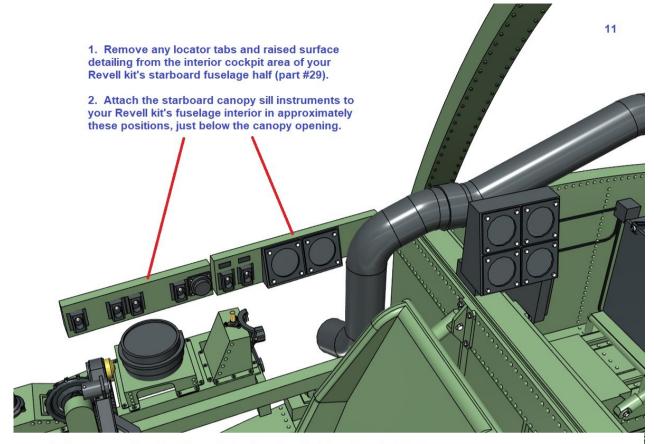

1. Remove any locator tabs and raised surface detailing from the interior cockpit area of your Revell kit's port (left) fuselage half (part #30).

2. Attach the port canopy sill instruments to your Revell kit's fuselage

Radio altimeter for late aircraft only.

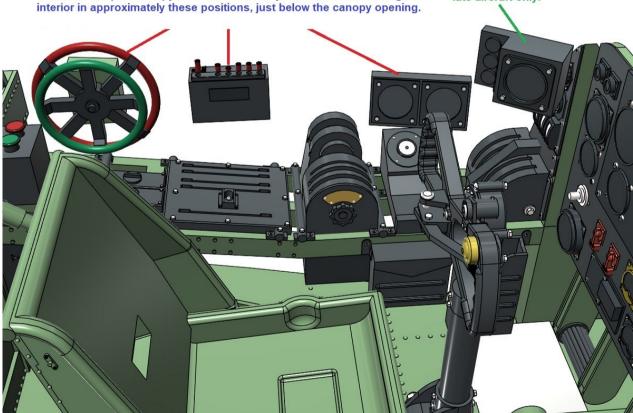





- 1. airspeed indicator
- 2. artificial horizon
- 3. rate of climb indicator
- 4. blind approach visual indicator
- 5. RPM indicator
- 6. clock
- 7. altimeter
- 8. direction indicator
- 9. turn and bank indicator
- 10. RPM indicator
- 11. oil temperature gauge
- 12. oil temperature gauge
- 13. air temperature gauge
- 14. pneumatic triple pressure gauge
- 15. radiator temperature gauge, port
- 16. radiator tempertaure gauge, starboard
- 17. boost gauge, port
- 18. boost gauge, starboard

1/32 scale RAF aircraft instrument decals are available from "Airscale".

Link - https://www.airscale.co.uk/

1/32 scale Beaufighter airframe stencil and markings decals are available from "Aviaeology". Link - https://www.aviaeology.com/

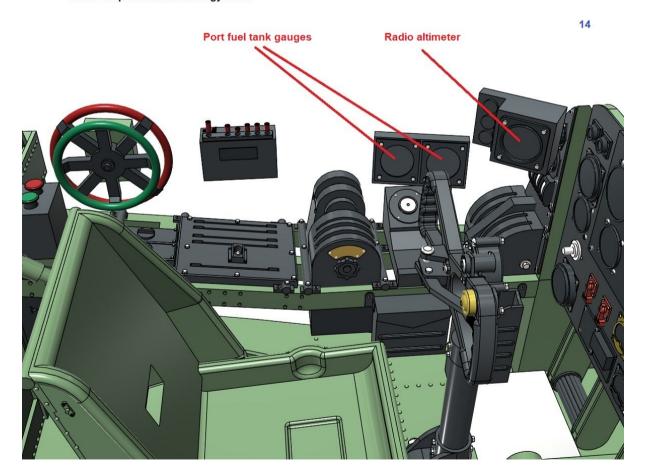

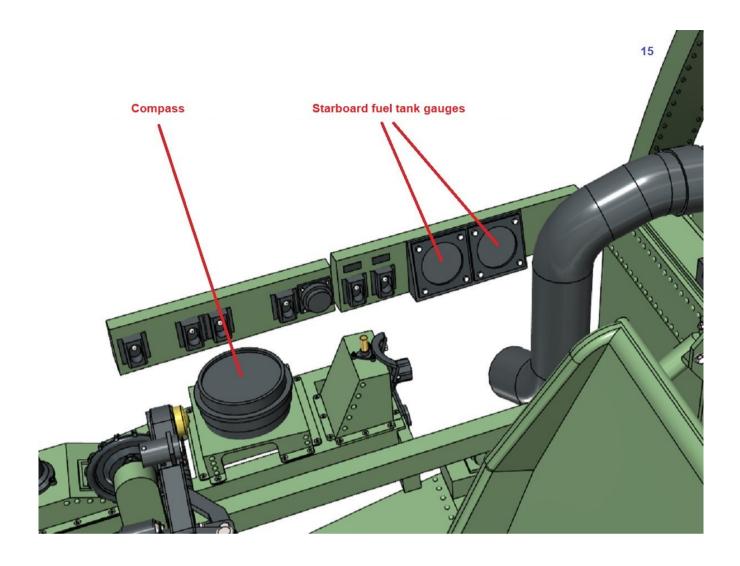

"Airscale" RAF instrument decals available at https://www.airscale.co.uk/ (click here).

"Aviaeology" Beaufighter airframe stencil and markings decals are available at https://www.aviaeology.com/ (click here).