

3. Submerge the decal completely in lukewarm water for 10 sec.

4. Put the wet decal on-plotting base and allow it soften completely.


paper by tweezers and remove decal carefuly to model surface. In case that the decal was placed incorrectly, add water

Avia S-199



Gvia S-199 HMD72064

vertectives suff ut, server suff. and Israeli service

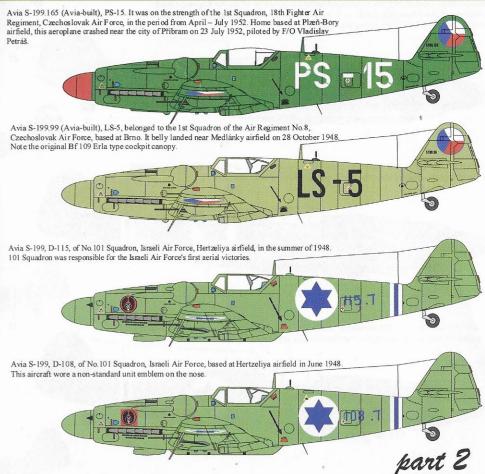

HMD72064

Stencils for two aircraft are included in the decal set

Limited series only 200 pcs!

MADE IN CZECH REPUBLIC






H-Models Decals Gustav Hýbner


www.ghstudio.net ghstudio@ghstudio.net


nmodels@volny.cz

Na zápraží 408/3, Liberec 3, 460 01

Ve spolupráci s Nakladatelstvím 4+ In co-operation with 4+ Publishing Co. 5. Place the decal together with the base paper on the model. We recommended use decal solutions(Setter, Softer)Keep

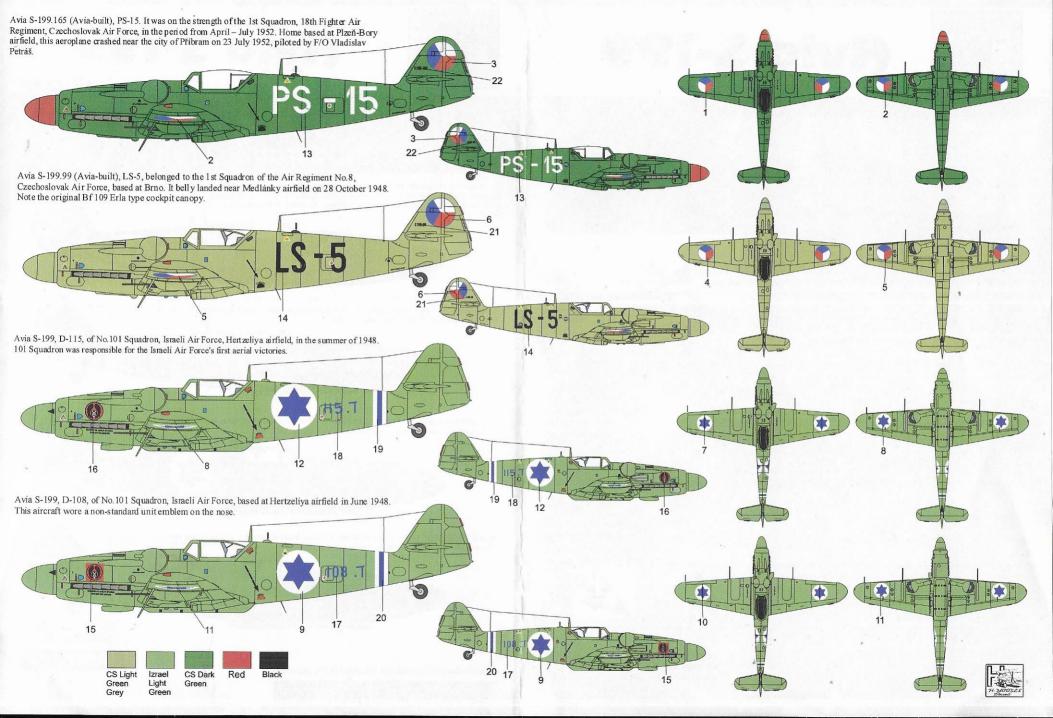

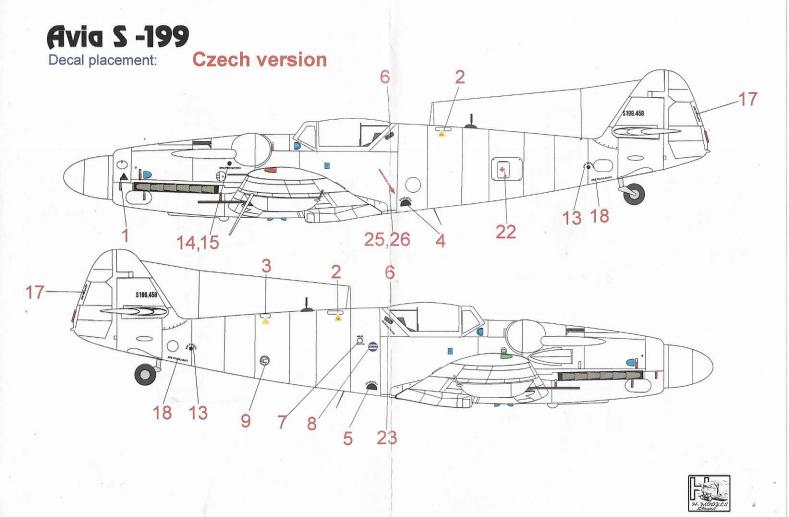

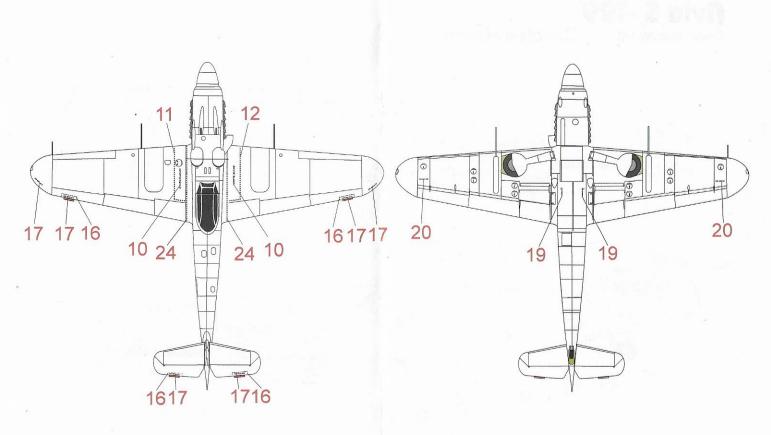

1-

