


RYN-up
Decals
Pick
Your
NoseART


PYND48030

NEW!

A-20J
410 BG/ 647 BS

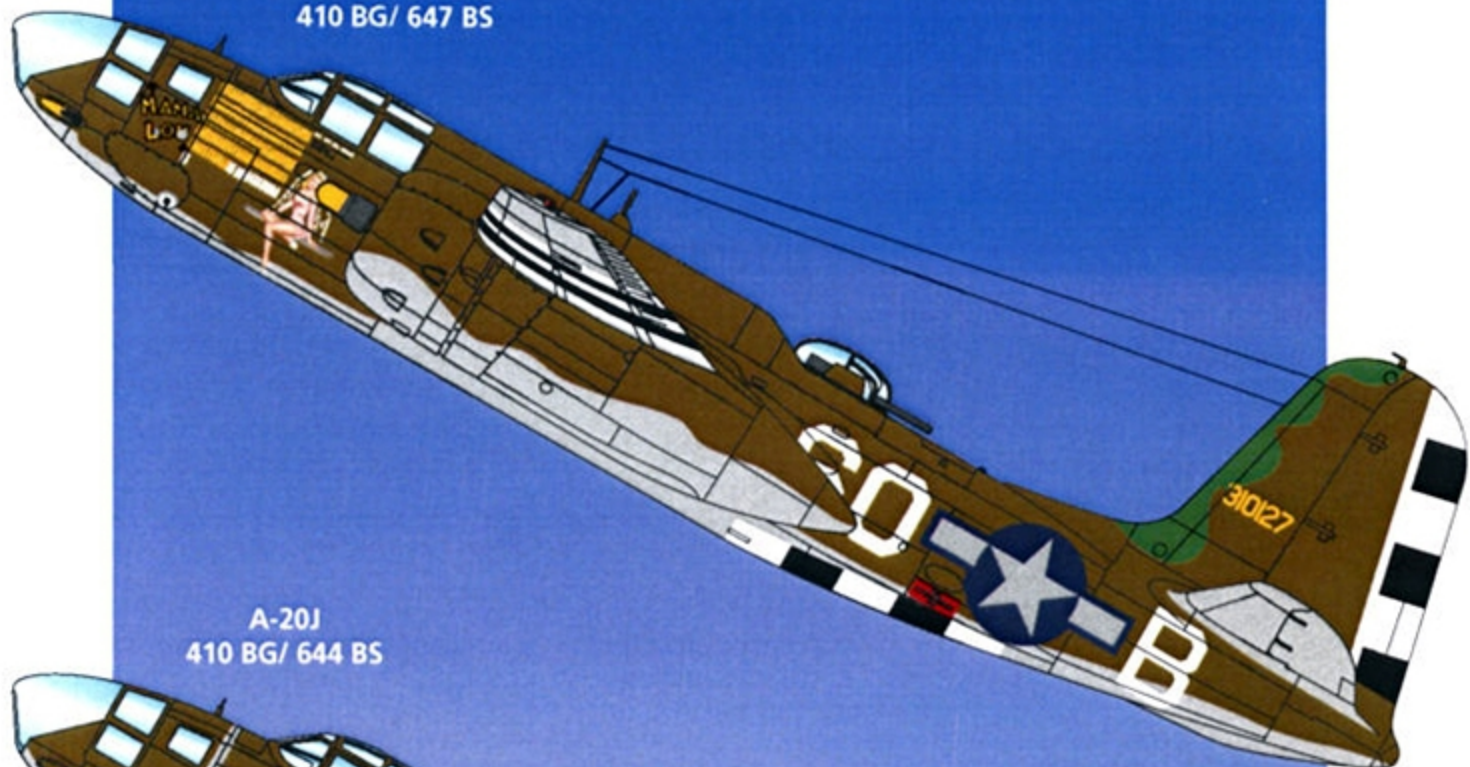

A-20J
410 BG/ 644 BS

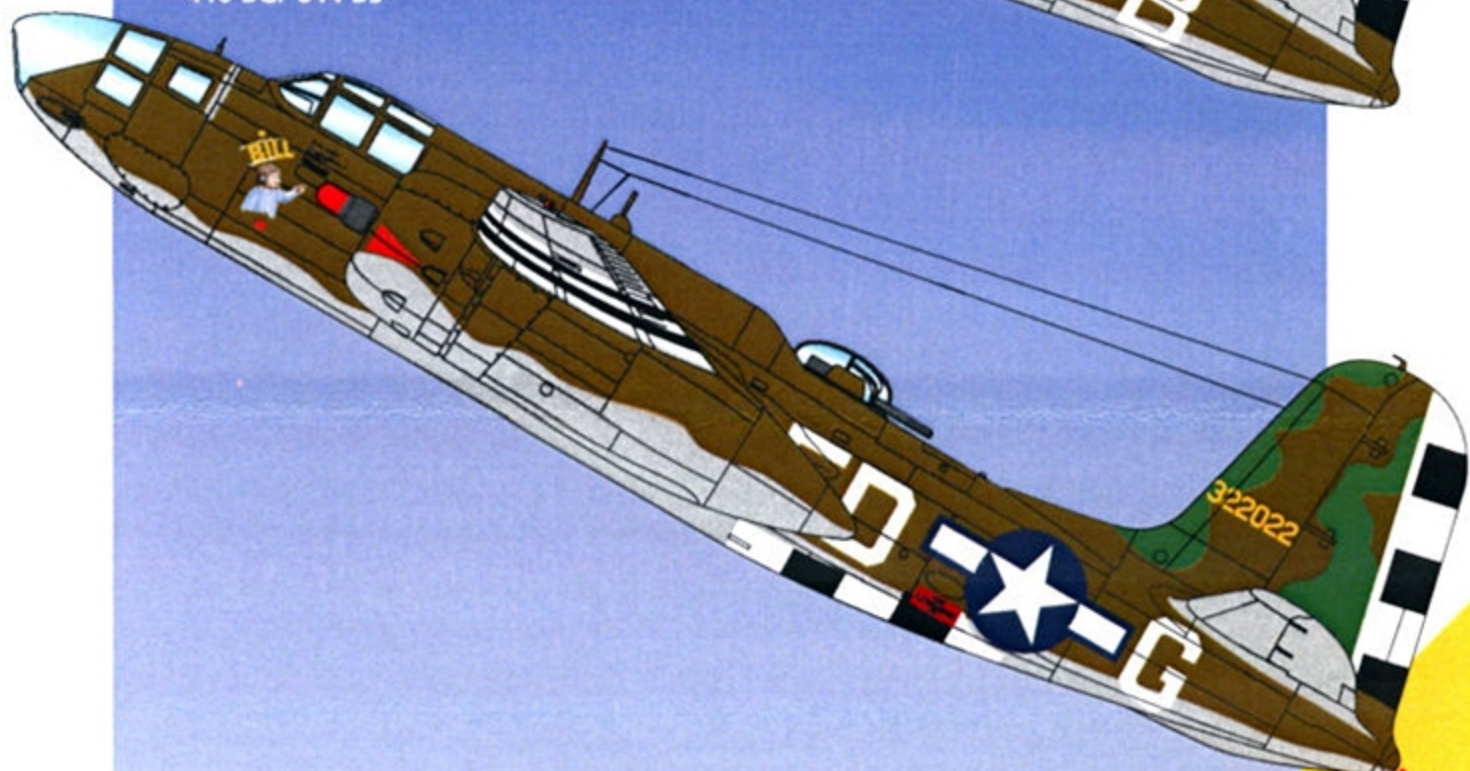

Havoc Hussies Part 2


**LIMITED EDITION
OF 300!**

PYN-up
Decals
Pick Your
NoseART



A-20J
410 BG/ 647 BS 43-10127

PYND48030

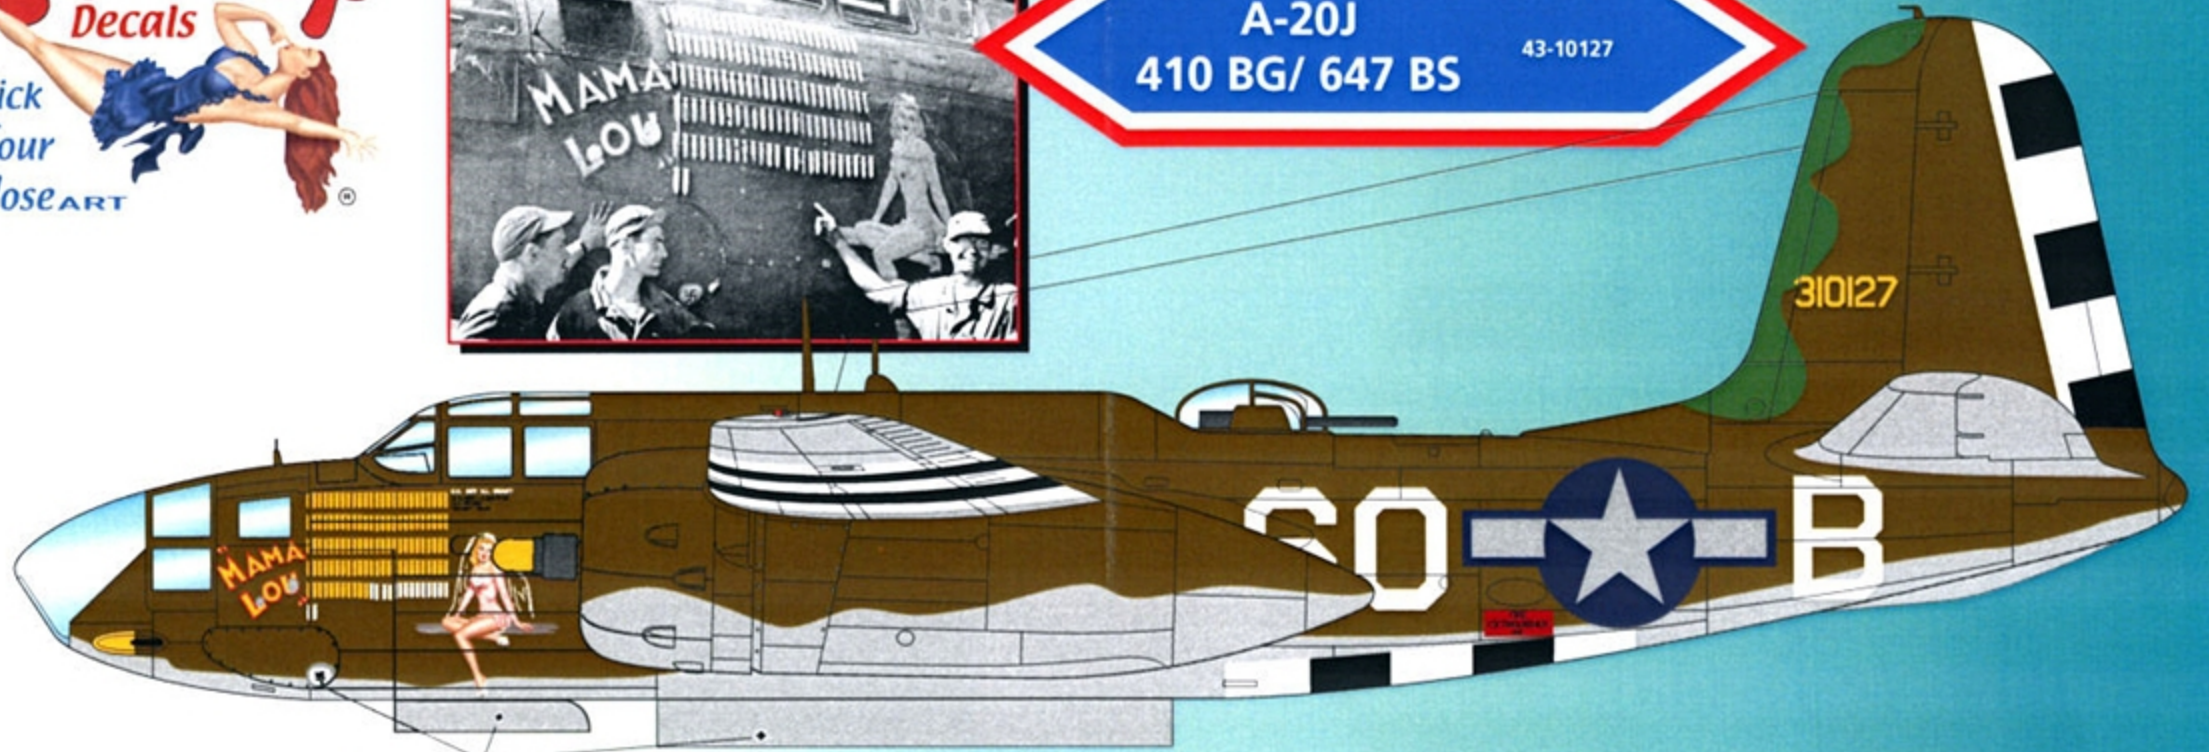


Note battle damage patches (extras are provided)







A-20J
410 BG/ 644 BS 43-22022

322022

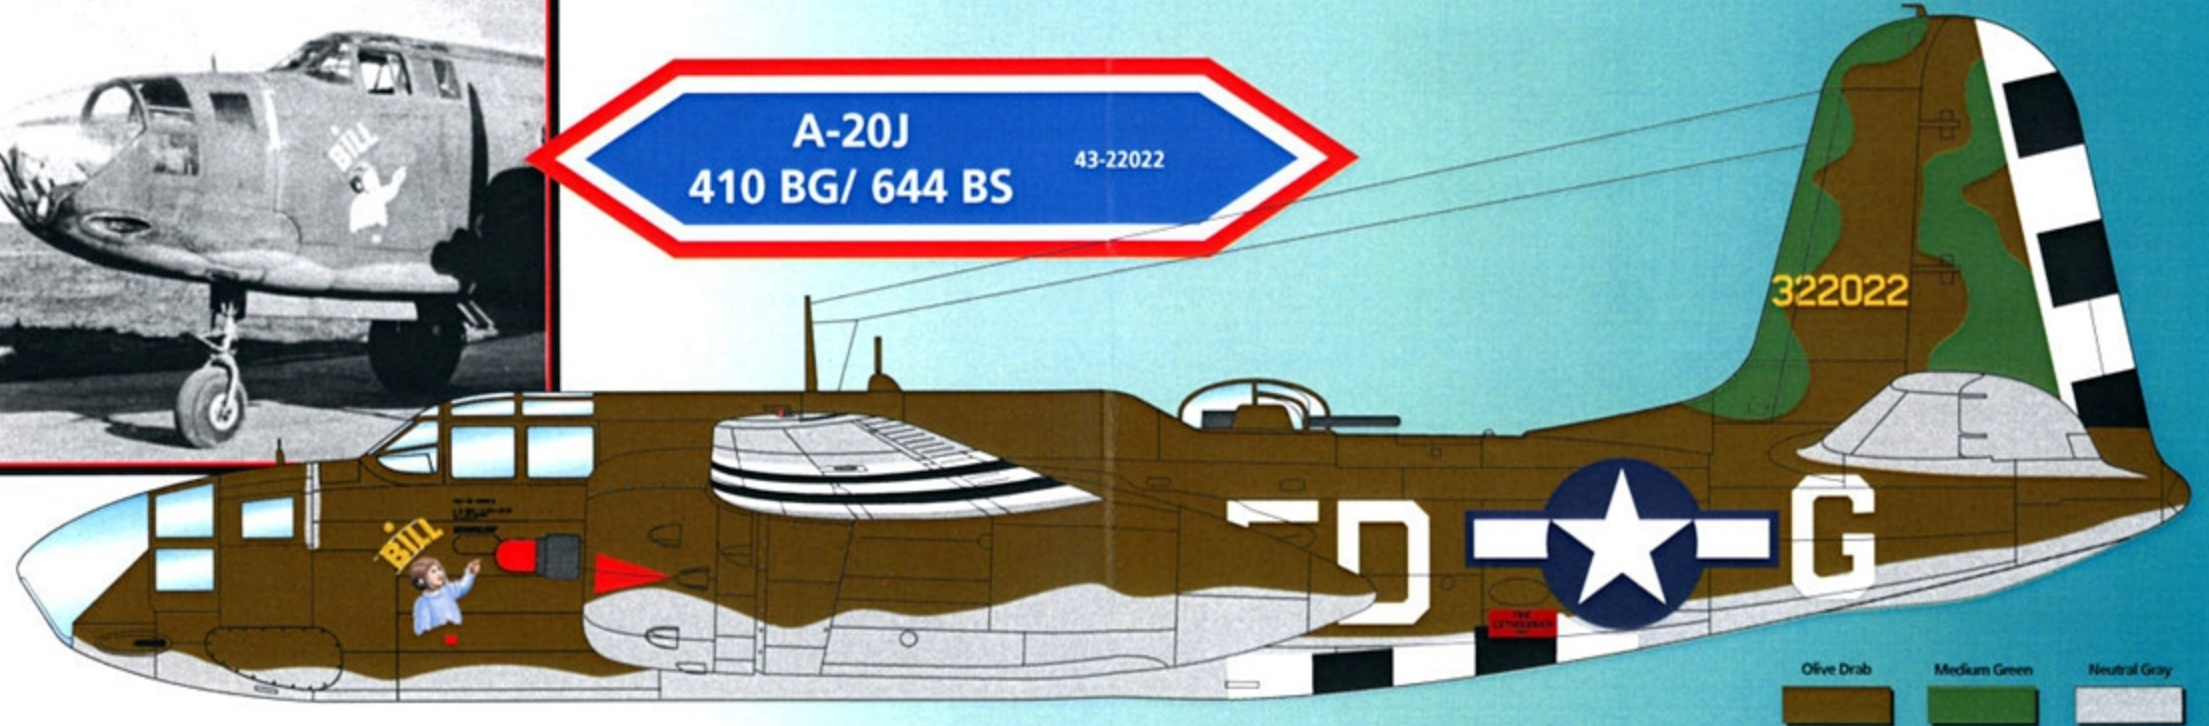

Olive Drab Medium Green Neutral Gray

Special thanks to "Eagle Eye" Mike Lampros!

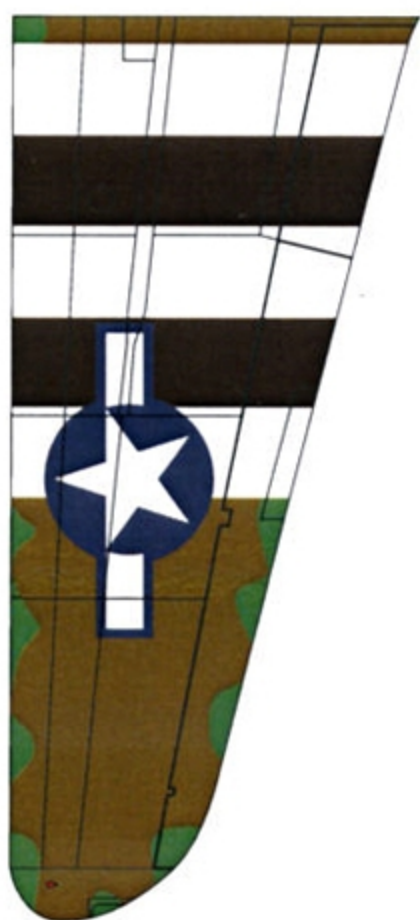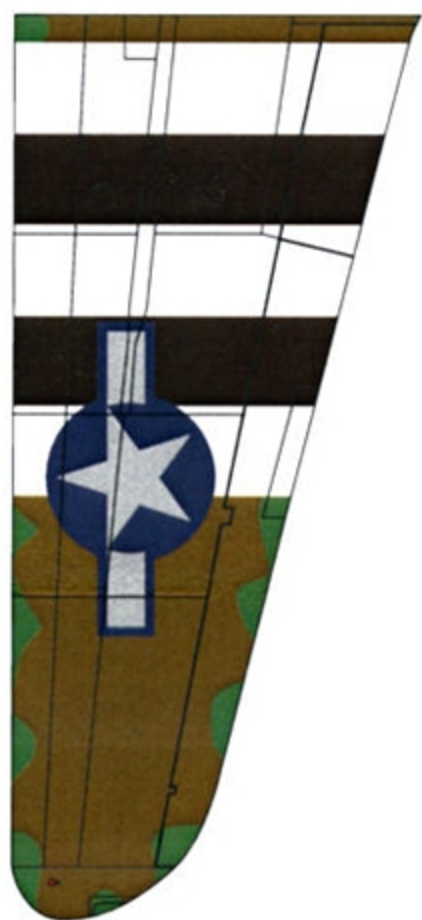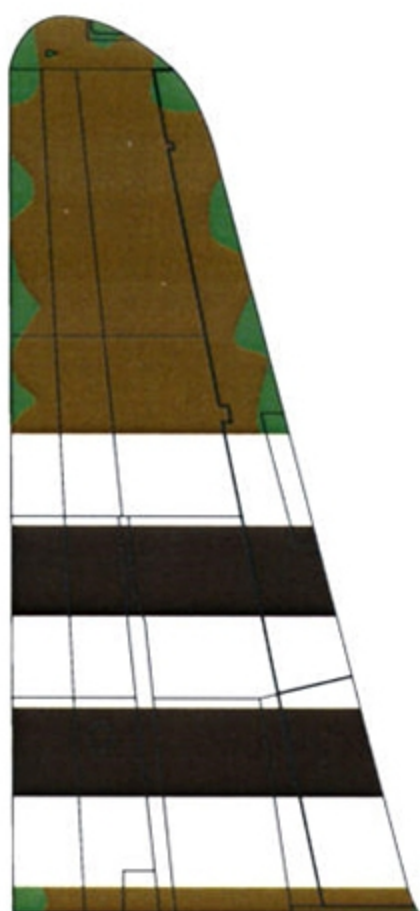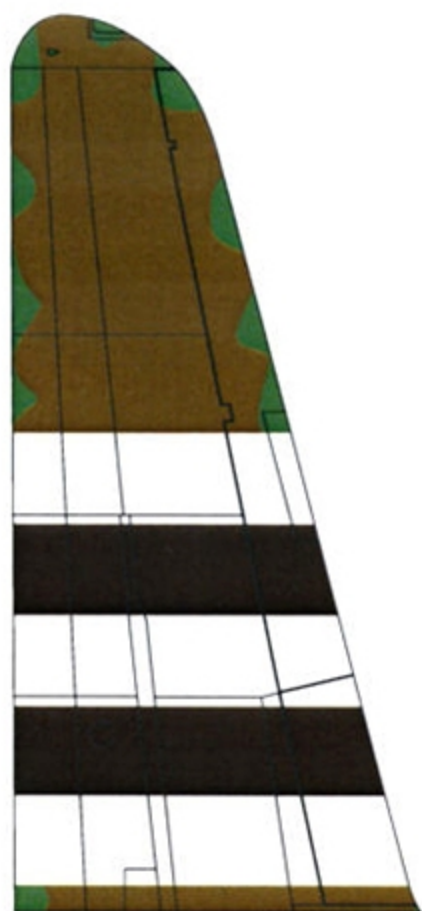

...available only from



P.O. Box 3956, Merrifield, VA 22116 USA

☎ 703/440-8720 FAX 703/440-8724

www.meteorprod.com

Write, call, or visit our home page to order our 120+ page catalog of decals, kits, conversions, tools, books, magazines, etc., and we'll send it to you right away!

© PYN-up Decals, 2005

PYN-up 
PICK YOUR NOSE ART DECALS
PYND48030 Havoc Hussies Part 2

Applying the Specialty Nose Art

PYN-ups has supplied you with the thinnest possible decal material to create a true masterpiece on your model. Some extra care is required when handling these decals. After applying the white background decal from the main decal sheet, carefully trim around the nose art decal to separate it from the rest of the paper. Only use room temperature water. Do NOT leave the decal in the water by itself. The material will curl on you. Place the image in the water and hold the opposite edges down against the paper (either with your fingers or cotton swabs) and wait for the decal to separate from the paper. Once it has separated, the tendency to curl will have passed for the most part. Gently slide the nose art decal on top of the previously applied white background decal.

SQ*B

- Serial number for this aircraft shown incorrectly as 310197 in some publications.
- Later aircraft had yellow cowl rings.

Applying the Decals

You probably already know all this stuff, so feel free to use your regular process; however, if you're new to aftermarket decals, here goes:

- Generally, use the Microscale Finishing System. We don't recommend extremely strong decal solvents such as Solvaset.
- Your model must have a smooth, glossy surface, as decals won't adhere well to matte surfaces. Use gloss paints or your favorite clear gloss overspray over matte or semigloss paint.
- Cut each subject out without trimming off the slight excess film (this helps the decal film disappear when dry).
- Put the decal in warm water that has a drop or two of liquid dishwashing soap or photo-flo for 10 seconds.
- When the decal will slide off the backing paper without forcing it, apply it to the proper position on your model. Slide the backing paper out from underneath.
- Gently blot off excess water and smooth out bubbles under the decal surface. If you wish, carefully brush on a mild decal softener such as Micro-Sol.
- When all decals are completely dry, gently wash off all excess decal adhesive.
- Finally, overcoat your model with a good quality gloss coat, followed by your choice of matte or eggshell clear topcoat.

FS 595 Color Cross Reference

41 Olive Drab	(FS 4087) Xtracolor X111, Floquil 303108/303170/303263, Gunze Sangyo H304, Modelmaster 1711, Mr Color 304, Pro Modeler 88-0028
43 Neutral Gray	(FS 6173) Xtracolor X158, Gunze Sangyo H053, Pro Modeler 88-0035, Floquil 303176
42 Medium Green	(FS 4092) Gunze Sangyo H302, Humbrol HU01, Modelmaster 1764, Mr Color 302, Tamiya XF61, Xtracolor X114