


7042

Fw-189

1/72


Interior set for CONDOR Kit

Photo-etched parts PP

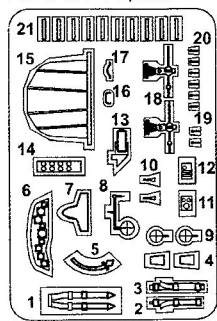


Film F

Polyurethane parts PUR

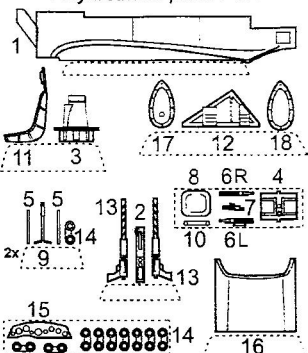

① Úprava dílů stavebnice/Arrangement of kit parts

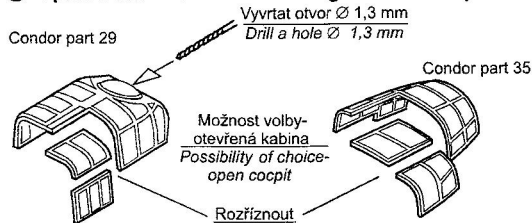

Nepoužijete díly Condor: A1, A2, A14, A15, A16, A17, A18, A19, A20, A21,  
 Not for use Condor parts: A22, A23, A24, A25, A28, A32, A34, A53, A54


Prameny/Sources

Fw 189 in action, no 1142, Squadron Signal publications  
 MBI, Focke-Wulf Fw 189, vydavatelství MBI


Colors

| Color | Code             | Supplier | Quantity |
|-------|------------------|----------|----------|
| A     | Greengrey RLM 02 | Humbrol  | 78       |
| B     | Black            | Humbrol  | 33       |
| C     | Gunmetal         | Humbrol  | 53       |
| D     | Light Grey       | Humbrol  | 147      |
| E     | Light Greengrey  | Humbrol  | 95       |
| F     | Leather          | Humbrol  | 62       |


② Sestava ovládacích pedálů  
 Rudder pedals assembly

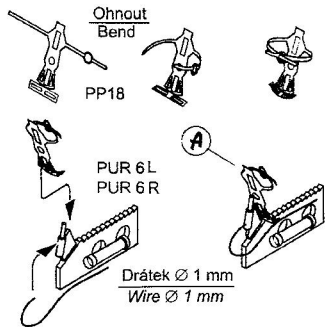


③ Sestava pumového zaměřovače  
 Bomb sight assembly

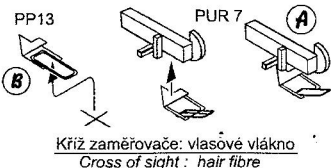


④ Sestava fotokamery  
 Camera assembly

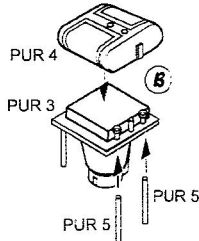


⑤ Montáž sedačky pilota  
 Pilot's seat assembly

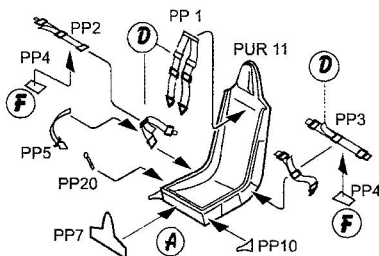


⑥ Montáž přístrojové desky a horního panelu  
 Instrument panel and upper panel mounting

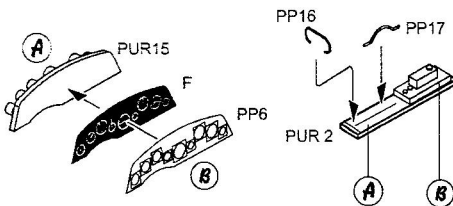

⑦ Sestava kulometů  
 Guns assembly

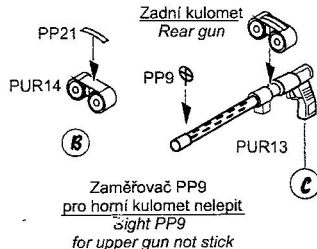

## (8) Sestava interieru/Interior assembly

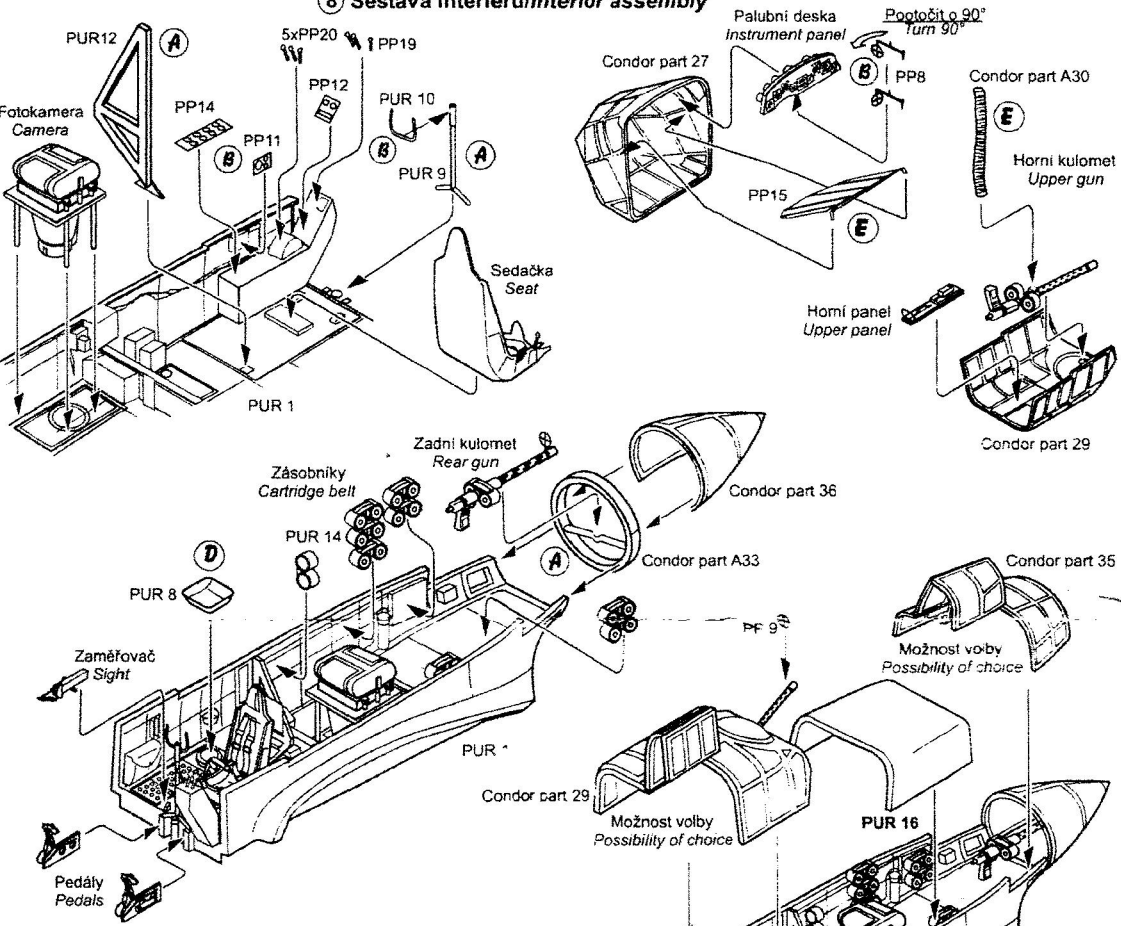

## 9 Montáž krytů kamery / Camera covers mounting

