

DIRECTIONS FOR APPLICATION



1. MAKE SURE THAT MODEL IS FREE FROM DUST AND OIL.
2. CUT OUT DECALS FROM SHEET.
3. DIP DECALS IN WATER AS NEEDED. (DO NOT WET ENTIRE SHEET)
4. WHEN DECAL SLIDES ON BACKING EASILY IT IS READY TO APPLY.
5. USING A WET BRUSH SLIDE DECAL FROM BACKING ONTO MODEL INTO PROPER POSITION. BLOT EXCESS WATER GENTLY WITH BRUSH. LET DRY COMPLETELY.
6. AFTER DECALS ARE DRY GENTLY WIPE EXCESS ADHESIVE FROM MODEL WITH A DAMP CLOTH.

F-16 FALCON
N.J. & KANSAS ANG
C.O.'S AIRCRAFT


Repli
Scale

P.O. BOX 818
SANTA ANA, CALIF. 92705

5015 48TH SCALE

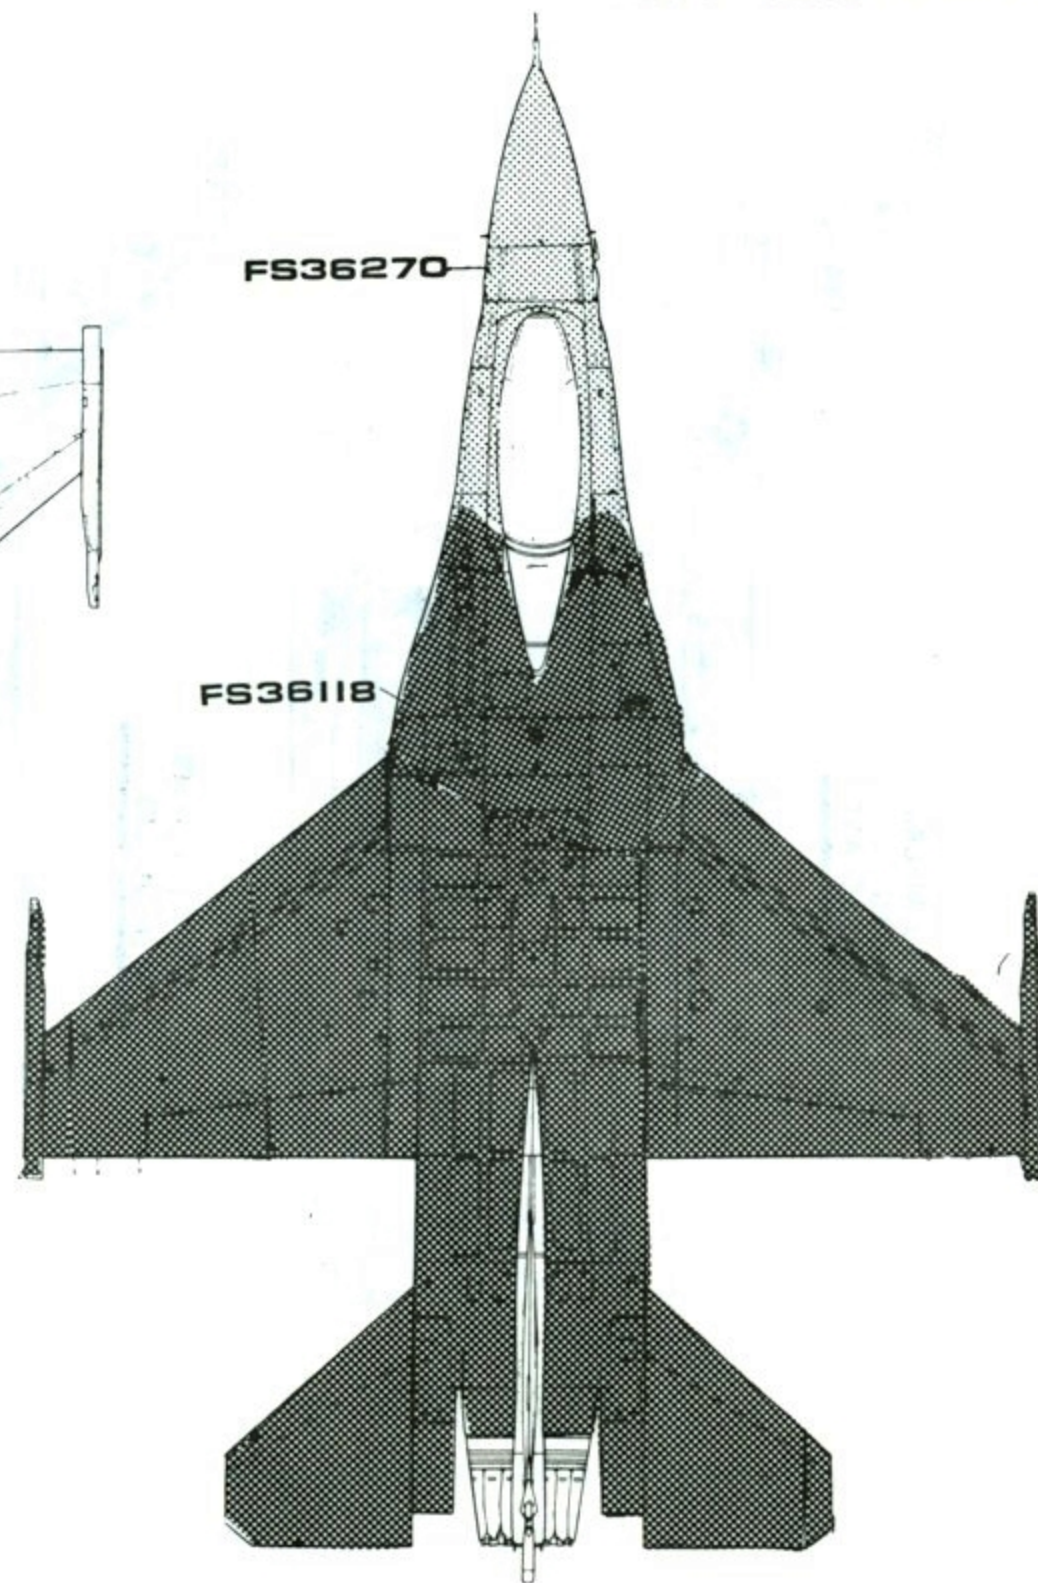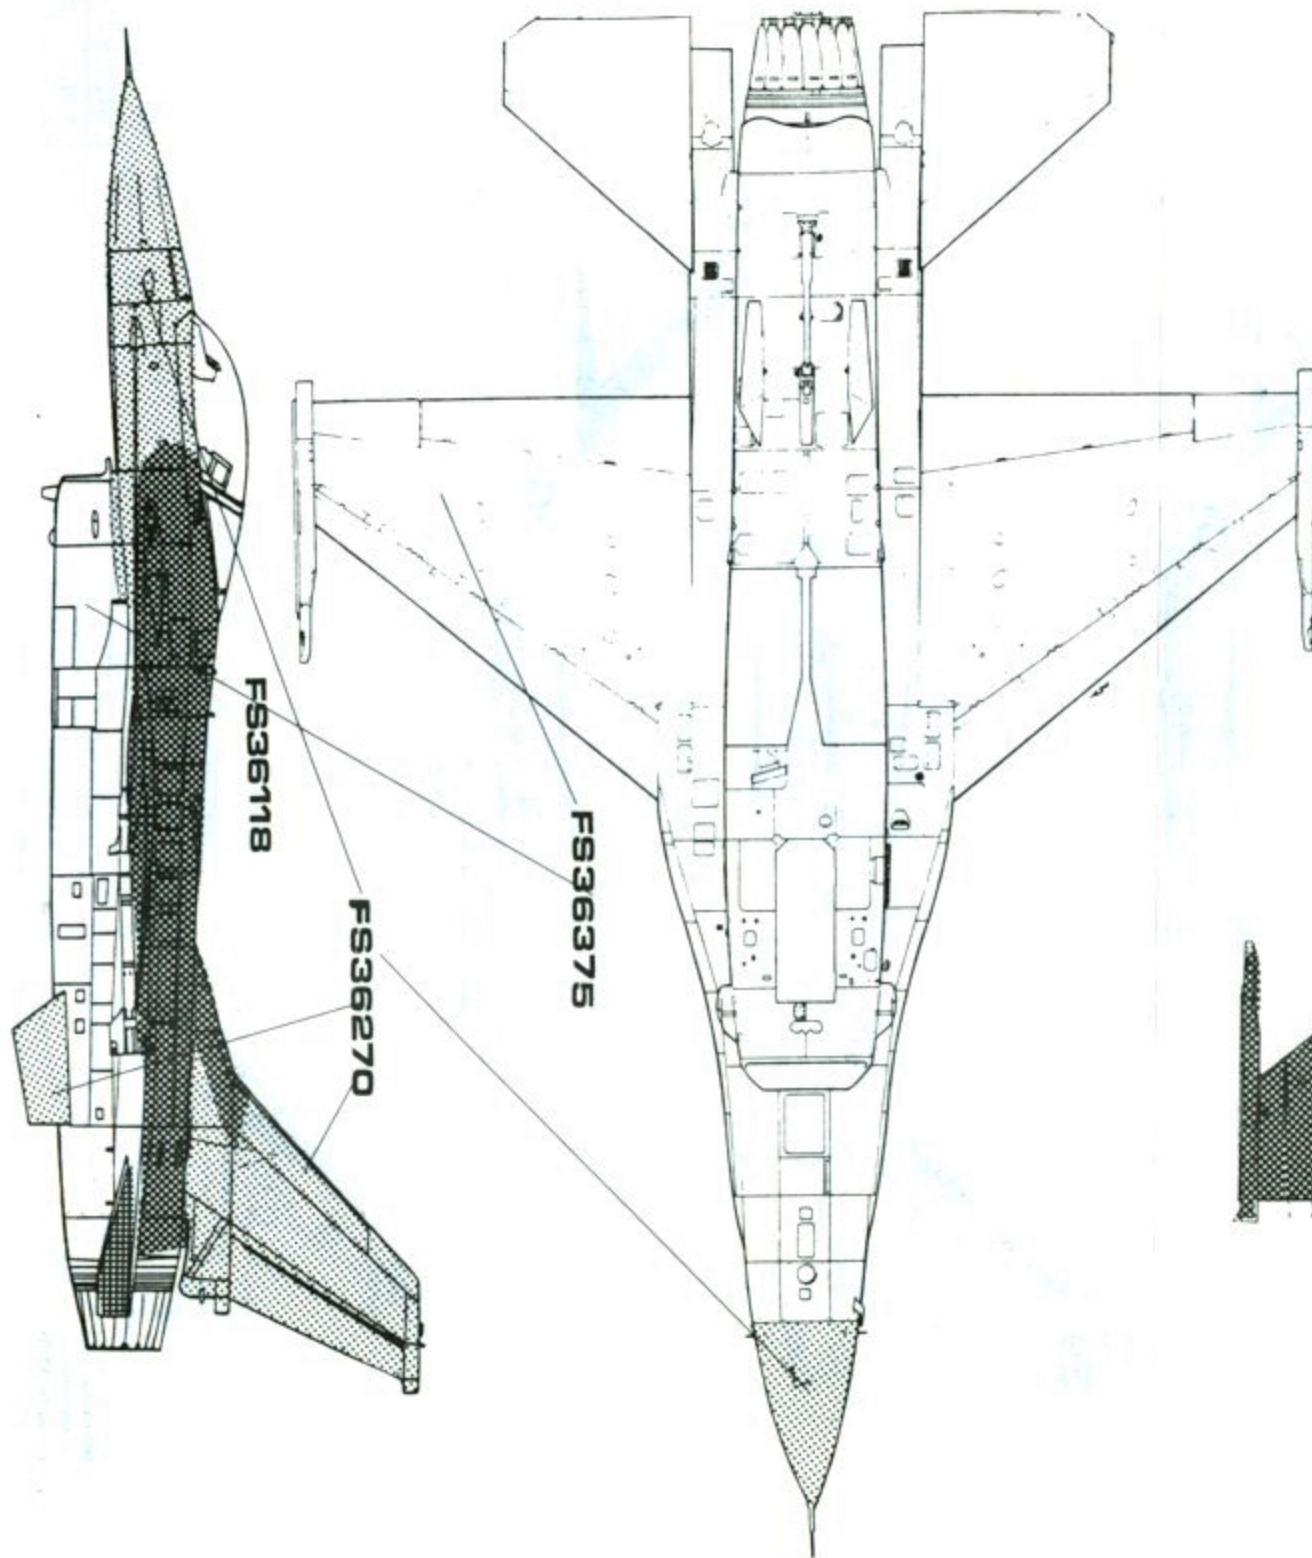

C/O's AIRCRAFT
184 TFG
KANSAS ANG

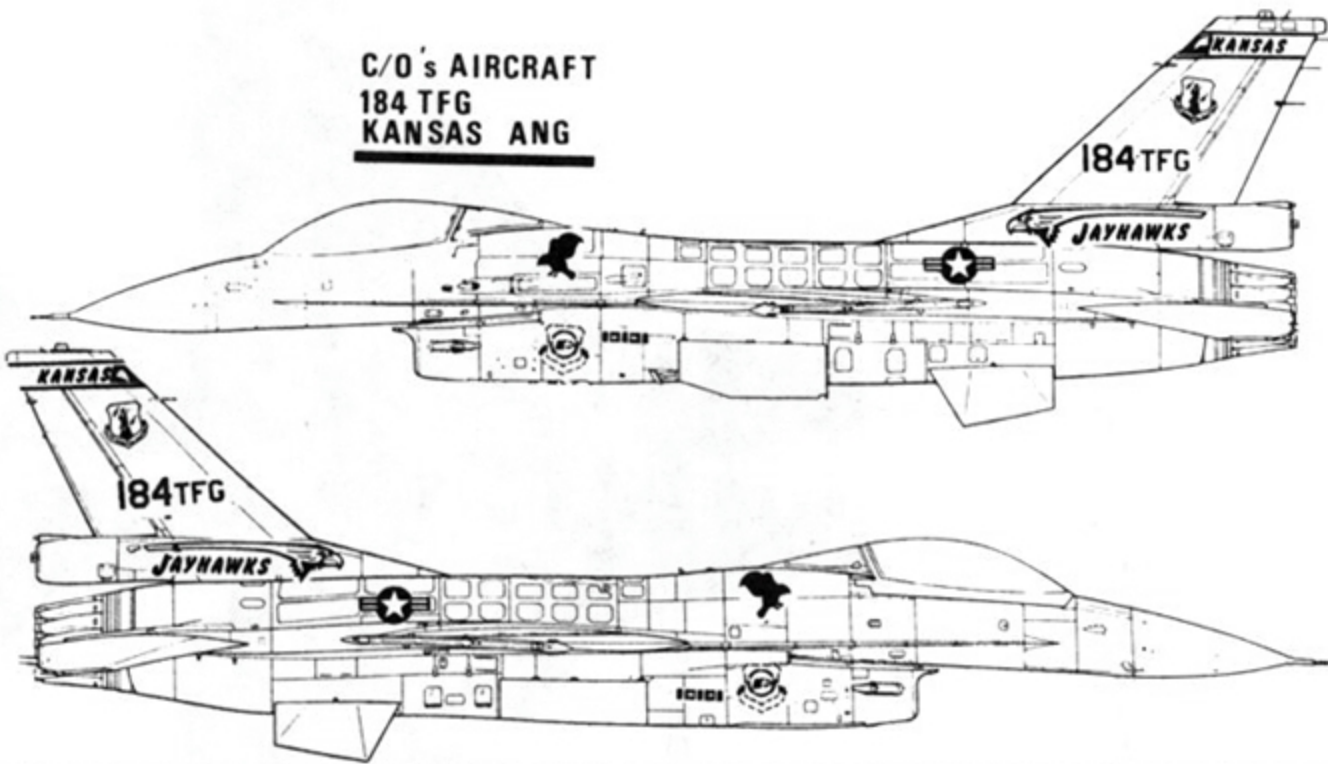

177TH FIG
NJ ANG

