
CK-15 Mack LTL WESTERN

Before starting this kit clean all resin parts with dish soap and luke warm water. Rince with warm water and let parts airday on a paper towel. Lightly sand parts before using automotive primer. Metal parts can be cleaned up with small files and polished to look chrome with steel wool or a wire brush in a dremmel tool.

Make window glass by tracing patterns using a razor knife then cut out with sizzors. Trim to fit then glue in with Elmers glue or Testors clear parts cement.

Mack LTL wheel bases anywhere from 172 " to 220 " power-Cummins NHB diesel

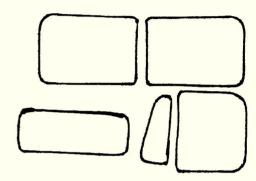

1652

Mack MODEL LTLSW

BODY BUILDER'S DIAGRAM

