
1:72 SCALE

ITEM NO.:07207

T-34/85 Model 1944

T-34/85 1944年型

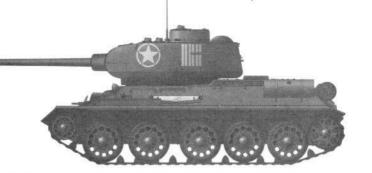

READ BEFORE ASSEMBLY:

- This kit is not recommended for inexperienced modelers or for children under 14 years of age
- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.
- Keep out of reach of children. They must not be allowed to ingest small parts or handle plastic bags in any way.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件,不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴、过量的快干胶水使用可能导致可动零件会粘住、小心涂胶。
- 取蚀刻片时应特别注意安全, 防止利边划伤手指。
- 某些零件表面需贴上水贴纸,请选择在装配的同时进行。
- 推荐模型工具(自备): 胶水,水口剪刀,长咀钳,刀片, 锉刀,镊子,钳,钻,剪刀,瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆、模型内不含。
- 谨防小孩吸吮塑料零件,或者将塑料袋套在头上。制作时 应将套材远高小孩接触。
- 本产品不适合14岁以下没有经验的模型爱好者



cyanoacrylate glue 使用强力胶



weight 配重



make hole 钻孔.



cut / remove 切除



弯曲



file / sand 锉平



选择



no cement 不涂胶水




贴纸


水贴纸的使用:


- 1. 从水贴纸上剪下印花;
- 2. 将印花放入温水中浸10秒, 然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4. 手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干,汽泡消失。


DECAL APPLICATION


- Cut off decal from sheet.
- Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
- Hold the backing sheet edge and slide decal onto the model
- 4. Move decal into position by wetting decal with finger.
- Press decal gently down with a soft cloth until excess water and air bubbles are gone.

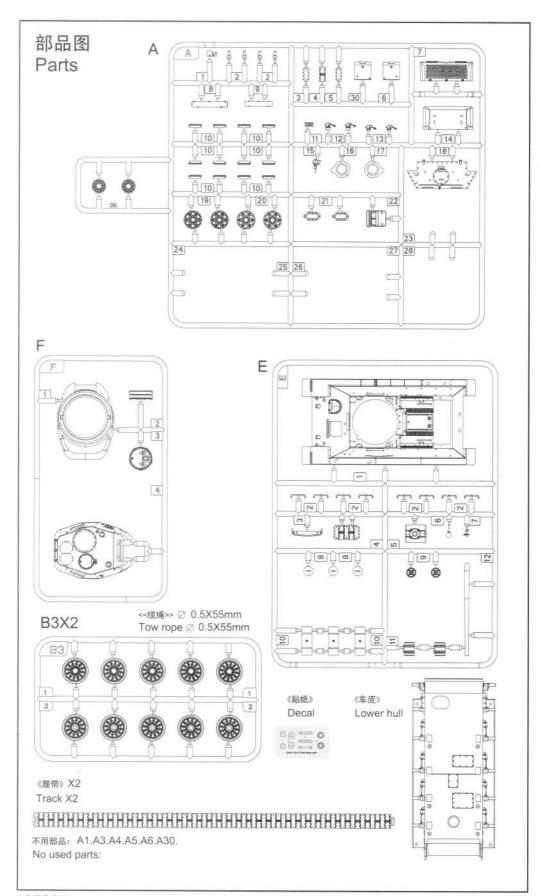


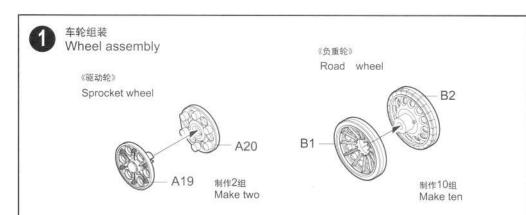


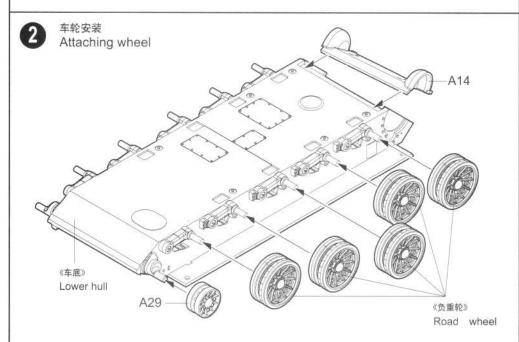


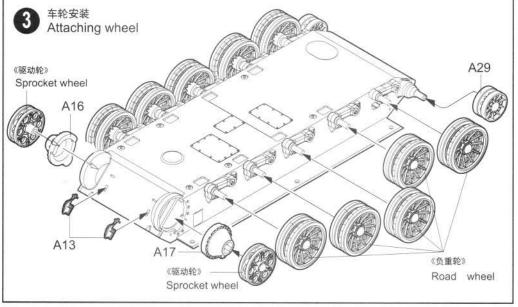

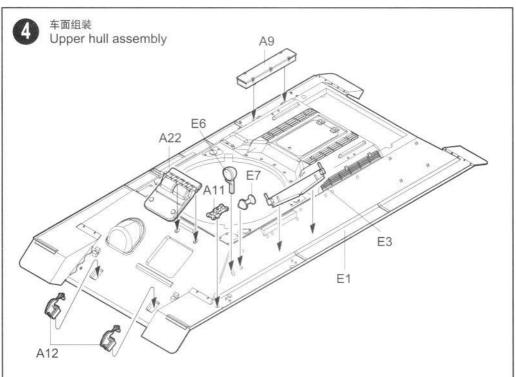


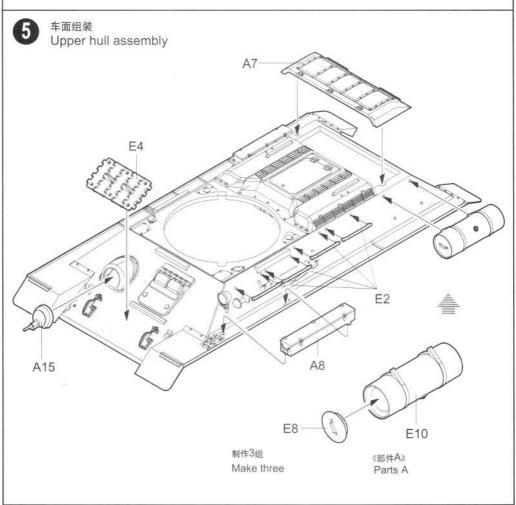

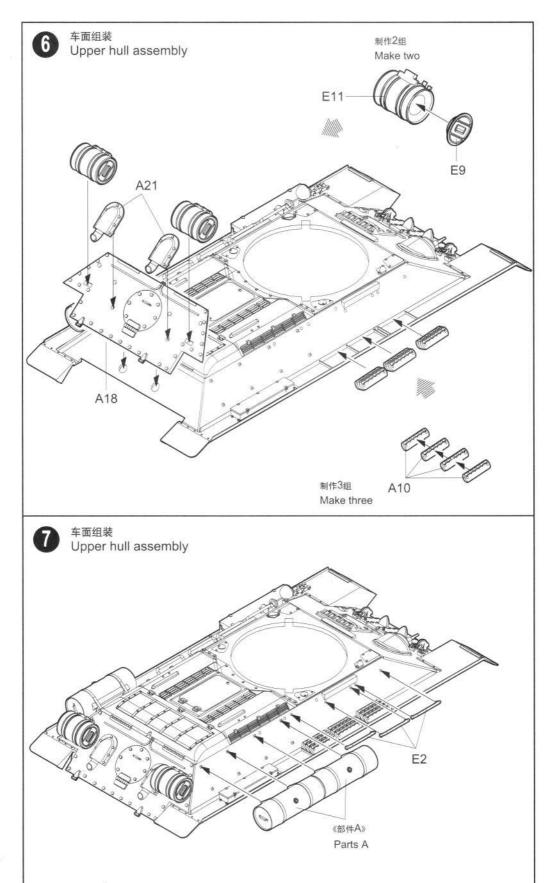

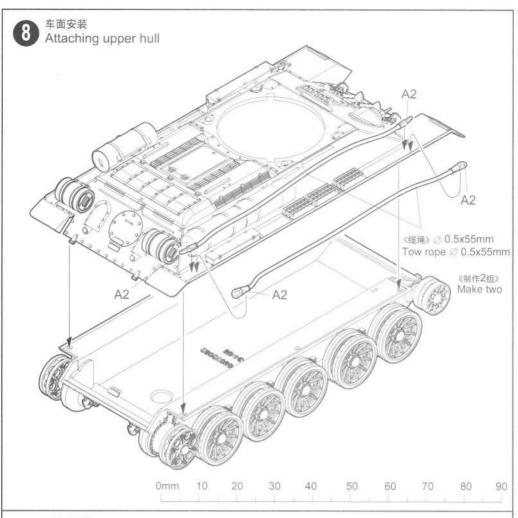



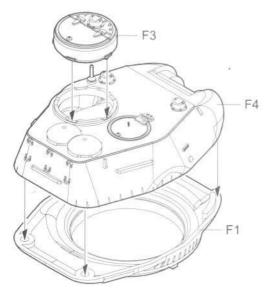


《天线制作》

How to make anterna




★加热浇口、拉线冷却、冷却后毁成所需长度。 Heat sprue as shown, remove from flame and streth allow to cool and cut to required length.

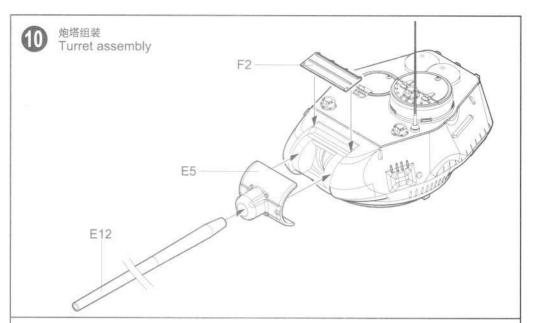




履带联接 Track construction

- * 腰带可用塑料胶水粘合。
- *履带可用模型油漆喷涂。
- *若履带断裂,用细丝线固定。
- * The tracks in this kit can be glued using plastic cement.
- * The tracks can be painted using plastic paints.
- * If track is broken strengthen with staples or thread.

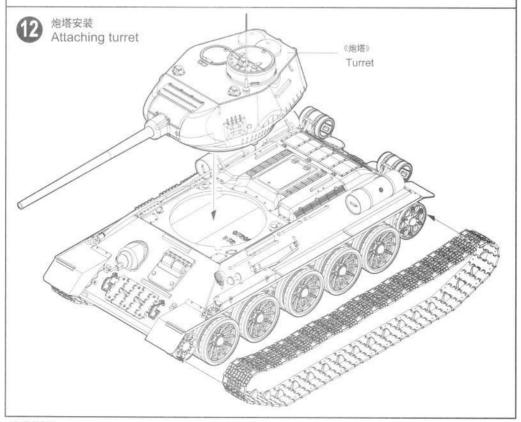



涂装同标贴指示 Painting & Marking guide

使用 MR.HOBBY 涂料

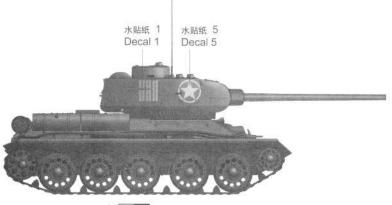

H 303303 绿色 Light Green

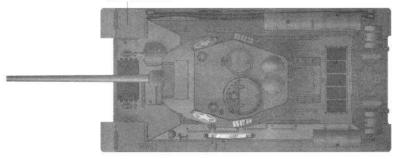

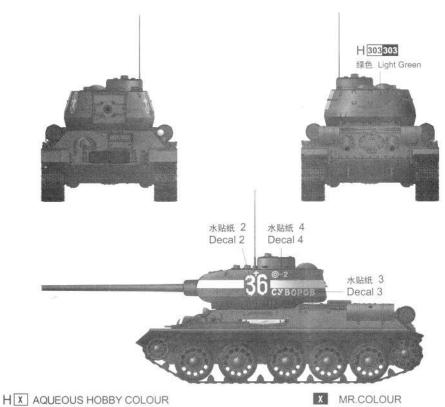



07207 1/72 T-34/85 Model 1944