


## **EVID S-199**



## **2-199**

HMD72063 ⊕

## the Mule in the Crethorlovuk ond brueli service

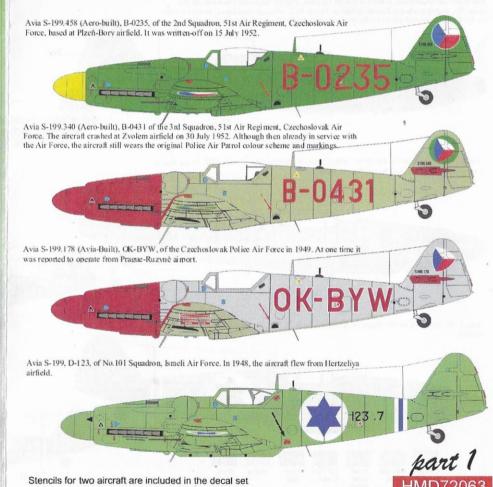




- 1. Apply gloss core to model suface
- 2. Cut out the needed detail from the sheet.
- 3. Submerge the decal completely in lukewarm water for 10 sec.
- 4. Put the wet decal on-plotting base and allow it soften completely.
- 5. Place the decal together with the base paper on the model. We recommended use decal solutions (Setter, Sofrer) Keep paper by tweezers and remove decal carefuly to model surface. In case that the decal was placed incorrectly, add water with a brush on the border of the decal.
- 6. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
- 7. Allow the decal dry well.

H-Models Decals
Gustav Hýbner
Na zápraží 408/3, Liberec 3, 460 01
www.ghstudio.net
ghstudio@ghstudio.net

nmodels@volny.cz


MADE IN CZECH REPUBLIC

Limited series only 200 pcs!

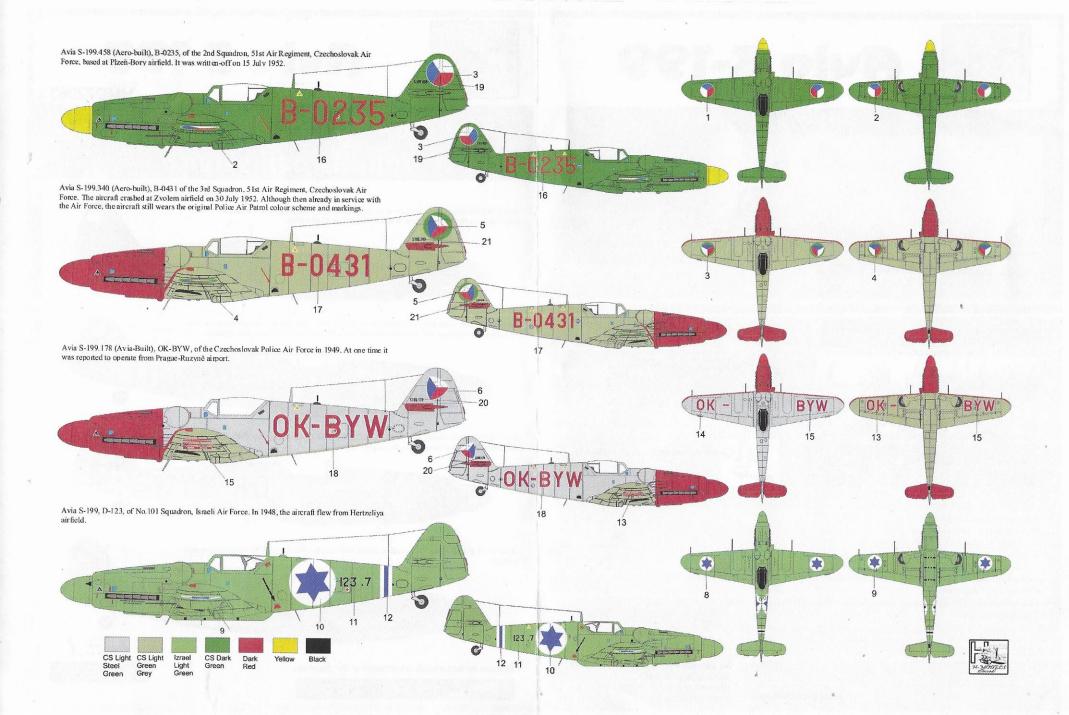

**RVIO S -199** Czech version Decal placement: \$199.458 25,26 14,15 \$199,458



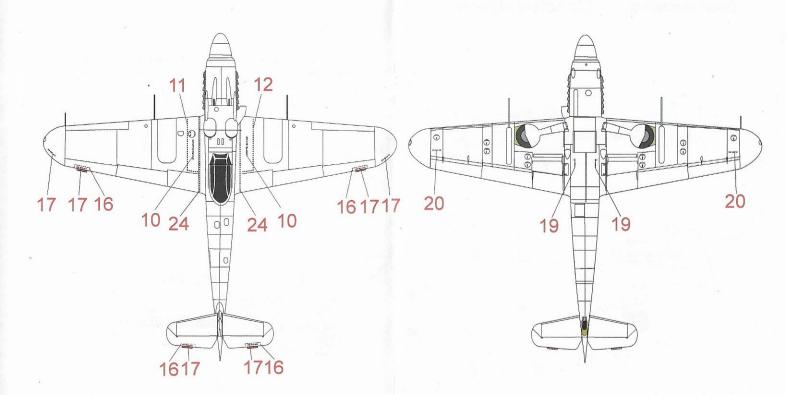

**RVIQ S -199** 

