



48020

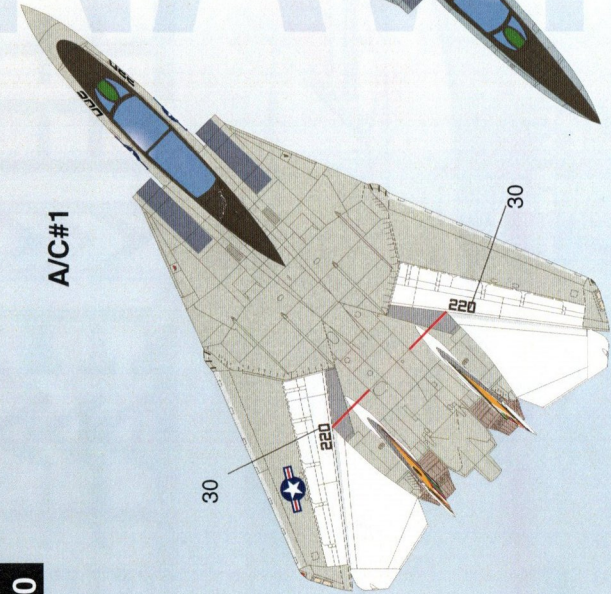

A/C#1

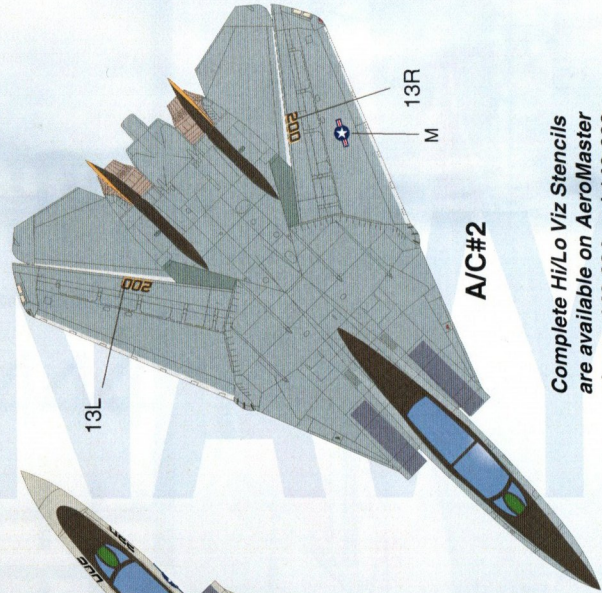

A/C#2

Complete Hi/Lo Viz Stencils  
are available on AeroMaster  
sheets 148-024 and 148-023.

Recommended Kit: Hasegawa F-14A

Reference: -Koku-Fan Magazine  
3/96, Pgs 1-6.

- Koku Fan FAOW #3, 1977

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.
4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do **DO NOT TOUCH THE DECAL**, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).




48020

# F-14 TOMCATS

## PART 1




Recommended Kit: Hasegawa F-14A

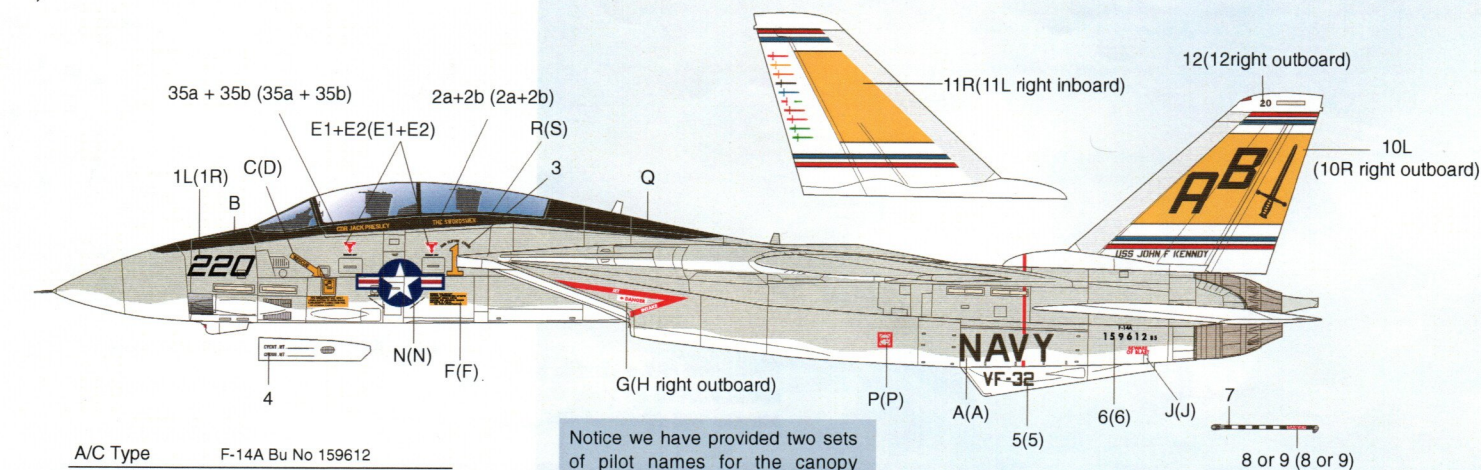


A/C Type	F-14A Bu No 159612
Unit	Cdr. Jack Presley#220 of VF-32, CVW1, USS John F. Kennedy.
Locale & Date	NAS Atsugi, May 1976.
Camouflage & Markings	Lt. Gull Gray over Gloss White with White Fin/ Rudder upper surface of control surfaces. Highly polished leading edge slats and fin. Black anti-glare panels (decals).
Remarks	*CAG* Aircraft as they are called normally carry model number ending in double nuts (zeros). Model AB220 indicates this aircraft is temporarily assigned this number.

Notice we have provided two sets of pilot names for the canopy sides. Just applying the yellow one will suffice. However, if you want a really deep yellow color, apply the white decal directly under the yellow one, allowing the first one to dry before the application of the second layer. We recommend this last step for a more satisfying result.

**Modeller must paint fin and rudder White before decaling**

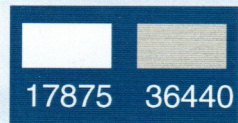

**A/C Profile**

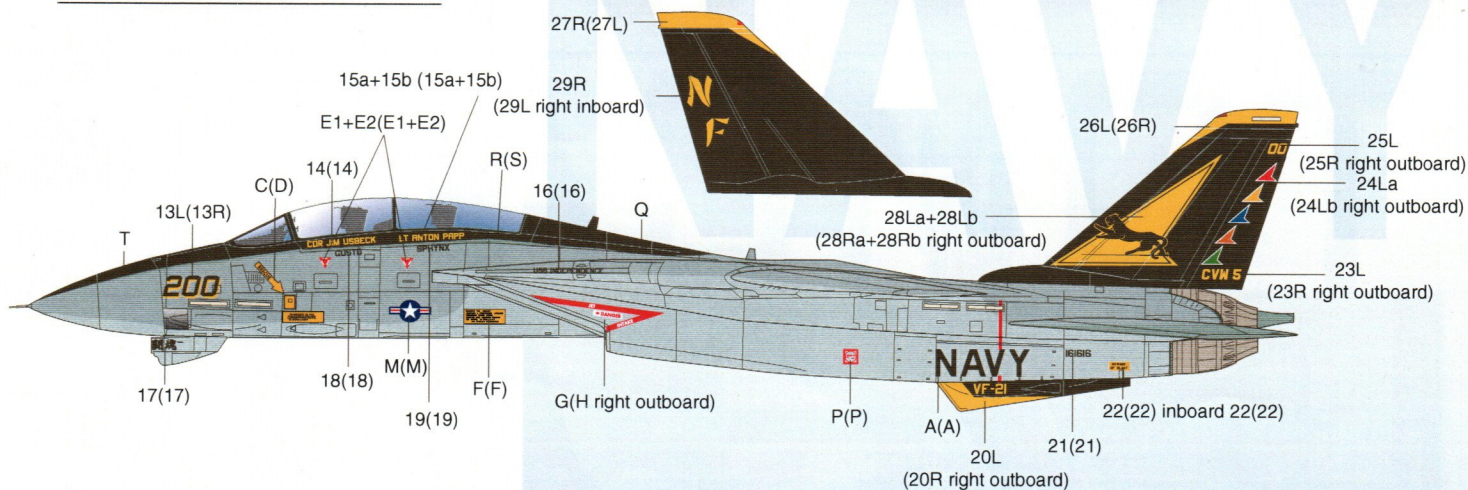

A/C Type	F-14A. BuNo161616,#200.
Unit	CAG A/C of VF-21, CVW-5, USS Independence.
Locale & Date	NAS Oceana, Dec. 18. 1995.
Camouflage & Markings	Dk. Ghost Gray over Lt. Ghost Gray with Black vertical fins and canopy framing.
Remarks	During this cruise, VF-21 Visited NAF Atsugi, Iwo-Jima, Guam, Hawaii, NAS Miramar, NAS Dallas, NAS Pensacola, NAS Key West, and on Dec. 18, NAS Oceana. We believe this was VF-21's last cruise. Kanji Characters read "Tou-Kon", which means "Fighting Spirit."



**Modeller must paint vertical fin, rudder, and canopy framing Black before decaling.**

**We recommend that before painting, you trim your vertical stabs / rudder to a perfect fit (DO NOT ATTACH). Then paint and decal the A/C as well as vertical fins. When everything is dry, attach them using cyano glue. It Works!**

**A/C Profile**