

BOEING 707 ASTROJET

AURORA



IMPORTANT - READ THIS FIRST!

Before assembling model, study sketch carefully.

Important—Apply cement to inside surfaces only. Avoid getting cement on outer surfaces of model sections. Use cement very sparingly and avoid getting cement on hands, so as not to mar or smear plastic surfaces.

Do not hurry. Work carefully and patiently. Important Note: Before proceeding to cement parts together, it is advisable to fit parts together dry (without cement) so that you may familiarize yourself with the parts and how they go together, also noting the points where cement is to be applied.

For best results assemble model exactly in the order indicated.

This kit is molded of styrene plastic—Use only Aurora's Fireproof Styrene Cement and Aurora's Speed-Dry Enamel. Assure yourself of a perfect model every time!

© 1965

AURORA PLASTICS CORP.

West Hempstead, L. I., N. Y. 11552

THIS KIT IS MOLDED OF STYRENE PLASTIC

Use Only . . .

AURORA'S
FIREPROOF
STYRENE PLASTIC
CEMENT


TUBE 10c
BOTTLE with BRUSH 25c

"THE ENAMEL WITH THE SPRAYED ON LOOK"


- ONE COAT COVERS
- NO BRUSH MARKS
- DRIES IN 30 MINUTES




SPEED-DRY ENAMELS are AURORA'S REVOLUTIONARY NEW ENAMEL PAINTS developed after years of research especially for Plastic Models and other products of Wood, Metal, Glass or China.

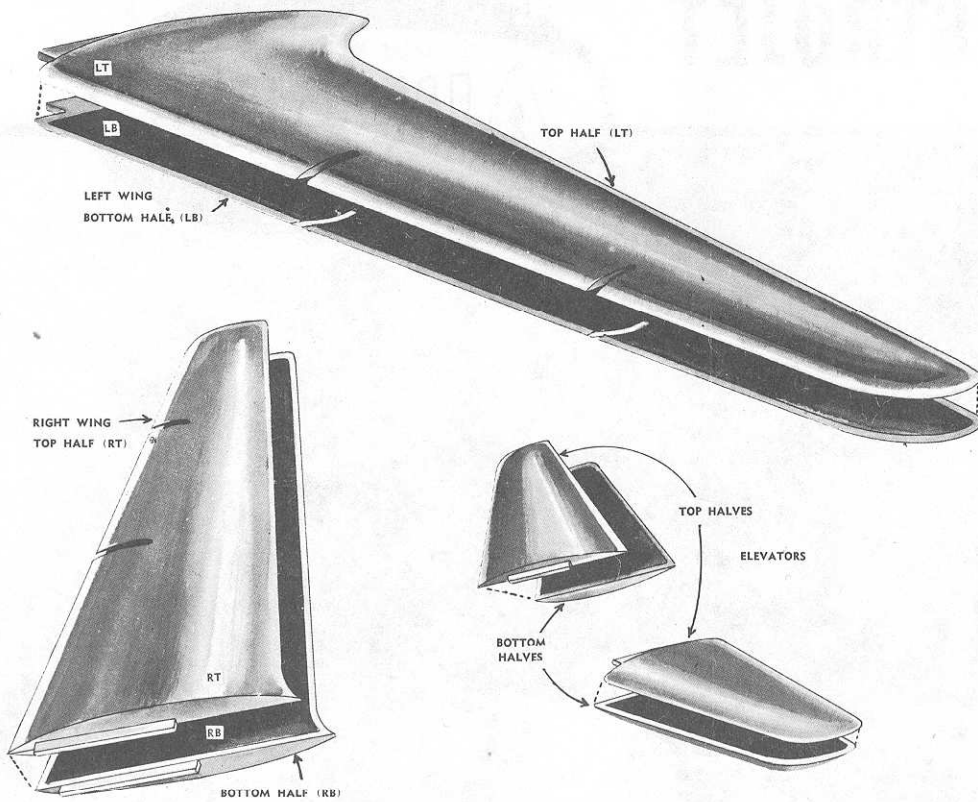


1. Cement TOP and BOTTOM HALVES of WING together (LT to LB).
2. Cement TOP and BOTTOM HALVES of WING together (RT to RB).
3. Cement TOP and BOTTOM HALVES of ELEVATORS together.

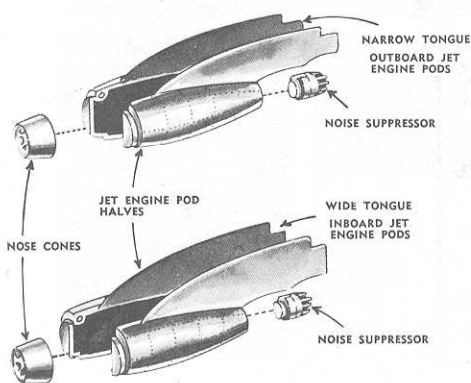




4. Cement JET ENGINE POD HALVES together (#1 to #1, #2 to #2, etc.)
5. Cement NOISE CONES to JET ENGINE PODS.
6. Cement NOISE SUPPRESSORS to back end of JET ENGINE PODS.

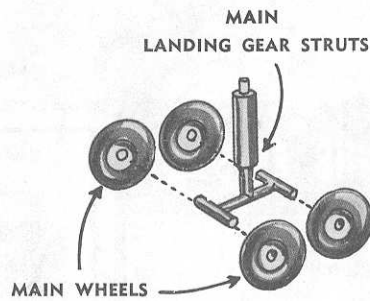

7. Cement MAIN WHEELS to MAIN LANDING GEAR STRUTS.

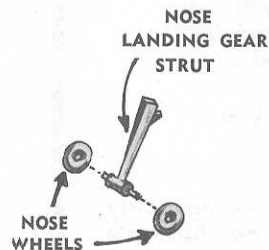

8. Cement NOSE WHEELS to NOSE LANDING GEAR STRUT.

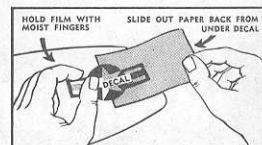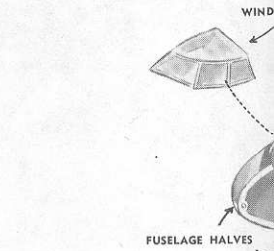

1. Cut each decalcomania from sheet separately inside of cutting lines close to design.
2. Dip each decalcomania into water for approximately 30 seconds, and then lay on flat surface.
3. When decalcomania slides easily on paper backing, (DON'T FORCE) with moist fingers slide decalcomania partly off paper and place in location desired. Hold decalcomania in this position and then slide paper backing from underneath design. (Note illustration.)
4. Press out bubbles with soft, damp cloth and allow decalcomania to set.



BOEING 707 ASTROJET

9. Cement FUSELAGE HALVES together.

NOTE: If it is desired to have model stand on its landing gear when assembled, now is the time to do it. Place a 1 ounce weight (preferably modeling clay) inside nose section of FUSELAGE before cementing FUSELAGE halves together. This weight will counterbalance weight of tail.

10. Cement LEFT and RIGHT WINGS to FUSELAGE.

S of LEFT
of RIGHT
S of ELE-

WINDSHIELD

OM
AL

de


ely

ig.

id

al.

AURORA

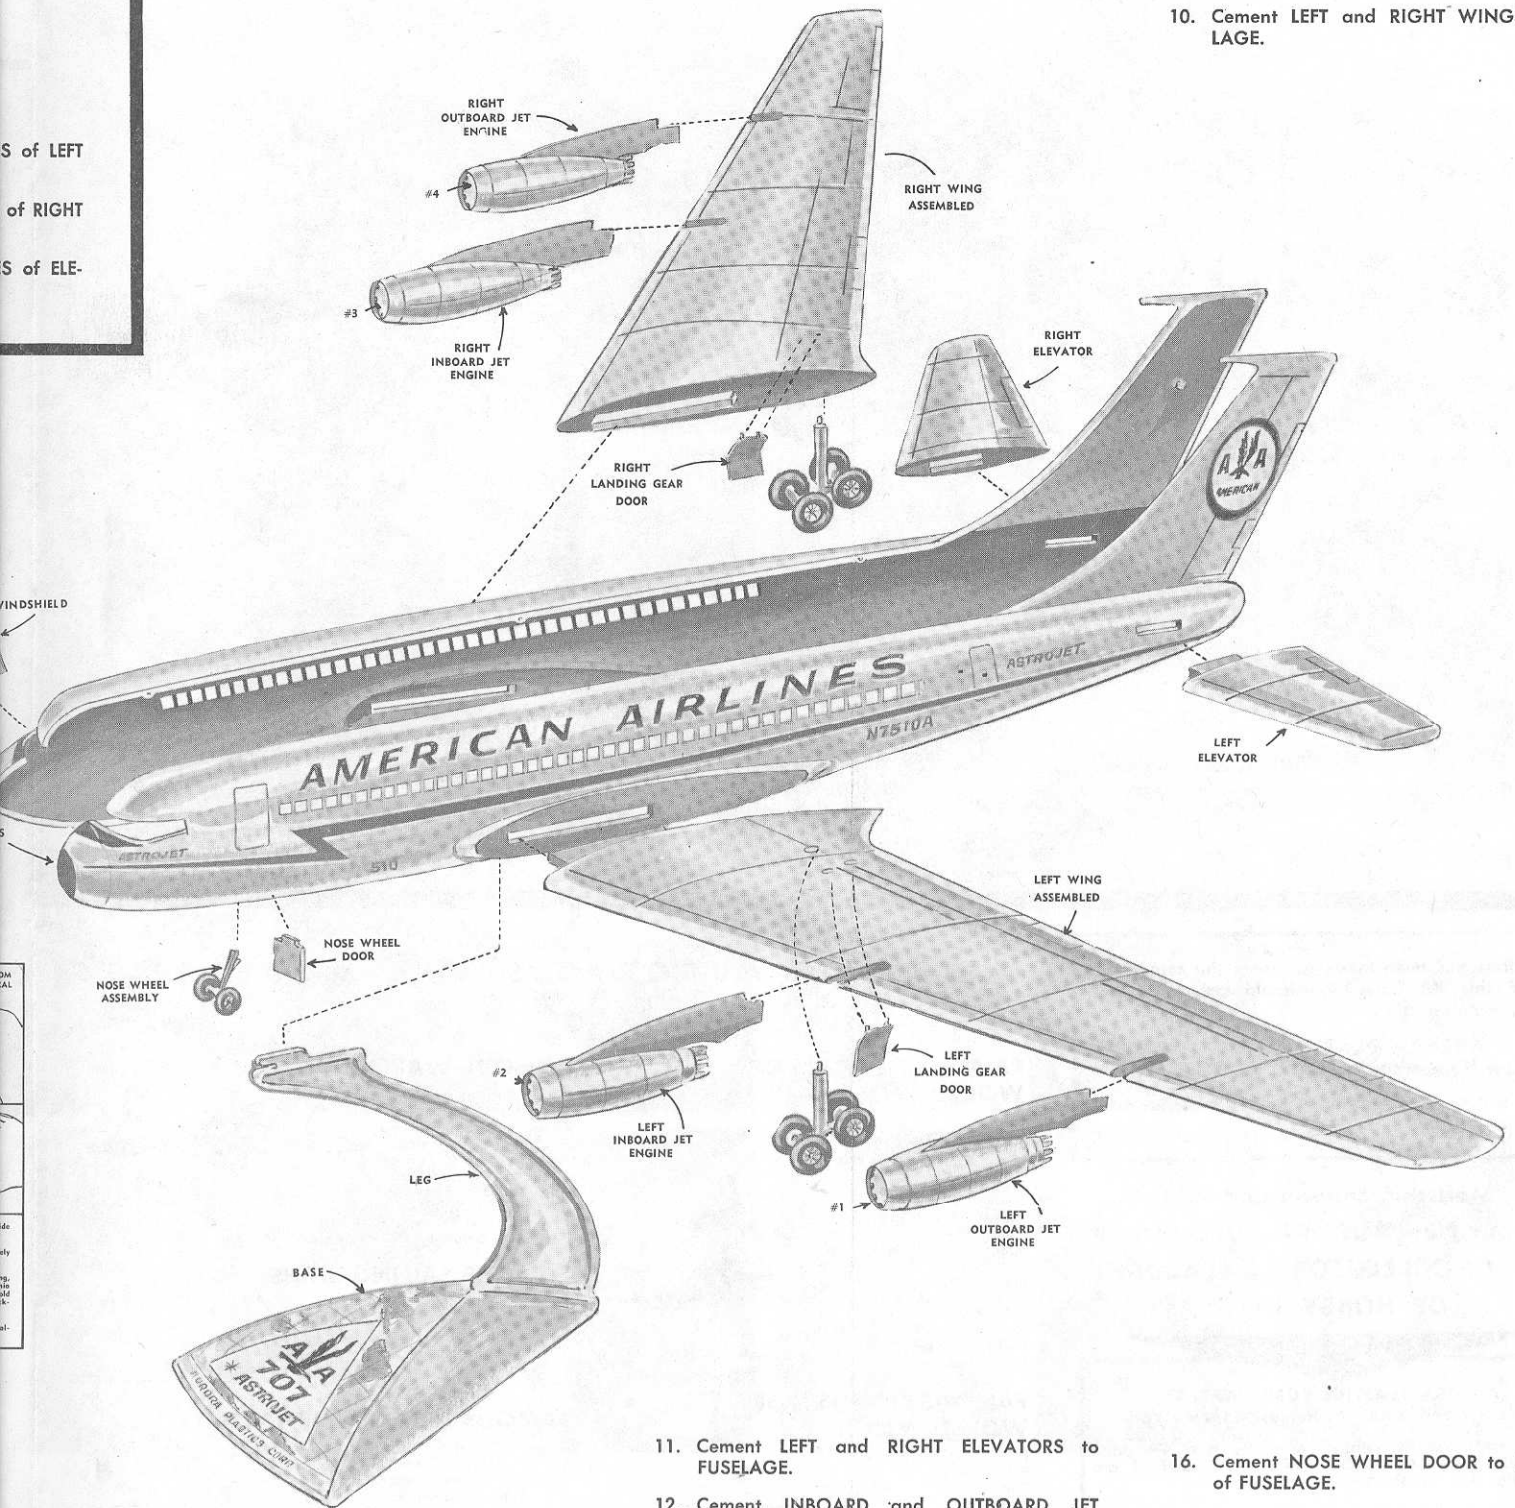

11. Cement LEFT and RIGHT ELEVATORS to FUSELAGE.
12. Cement INBOARD and OUTBOARD JET ENGINE PODS to LEFT and RIGHT WING. NOTE: Pods with wide tongue at rear are the INBOARD PODS (marked LI and LR); those with narrow tongue are the OUTBOARD PODS (marked LO and RO).
13. Cement MAIN LANDING GEAR ASSEMBLIES to UNDERSIDE to LEFT and RIGHT WINGS.
14. Cement LEFT and RIGHT LANDING GEAR DOORS to underside of LEFT and RIGHT WINGS.
15. Cement NOSE WHEEL ASSEMBLY to UNDERSIDE of NOSE of FUSELAGE.

16. Cement NOSE WHEEL DOOR to UNDERSIDE of FUSELAGE.
17. Cement COCKPIT CANOPY to FUSELAGE.
18. Cut out sections of DECALS to correspond with markings on Model or Sketch. Read DIRECTIONS on back of DECALS before applying. Allow to dry before any further handling.
19. Assemble LEG to BASE of STAND and mount completed Model on Stand. SUGGESTED DETAIL PAINTING SCHEME—SEE SKETCH.
For best results, use only AURORA'S SPEED-DRY ENAMEL—ONE COAT! COVERS—NO BRUSH MARKS—DRIES IN 30 MINUTES.



Every effort has been made to insure the completeness of this Kit—however, should any part be missing, write directly to:

AURORA PLASTICS CORP.
West Hempstead, L. I., N. Y., Dept. M

(When writing please print your NAME and ADDRESS PLAINLY)

Mail this coupon and 25c
for your New **AURORA FULL COLOR**
44 PAGE COLLECTOR'S CATALOGUE
OF HOBBY KITS

AURORA PLASTICS CORP. DEPT. C
44 Cherry Valley Rd., W. Hempstead, New York
11552

Please rush me by return mail the new 44-page full-color AURORA HOBBY KIT CATALOGUE. I am enclosing 25c in stamps or coin.

NAME
(PLEASE PRINT)

ADDRESS

CITY ZONE

STATE


CONTENTS: MERCHANDISE—Postmaster: This parcel may be opened for postal inspection. Return postage guaranteed.

Cut Along Line

A FEW OF AURORA'S SCALE MODEL KITS


FAMOUS FIGHTERS OF WORLD WAR I

DeHaviland Tiger Moth
French Nieuport
Sopwith Camel
British Scout SE-5
German Albatross D-3
Fokker DR-1 Triplane
Fokker D-7
Spad 13
Nieuport 28
Pfalz D-3
DeHaviland DH-4
F2B "Brisfit"
JN-4 "Jenny"
DeHaviland DH-10 Bomber
Gotha Bomber

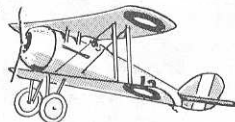

FAMOUS FIGHTERS OF WORLD WAR II

P-38 Lockheed Lightning
P-51 Mustang
Curtis P-40
Hellcat
AT-6 Texan
SNJ Navy Trainer
B-17 Flying Fortress
British Spitfire
ME-109 Messerschmitt
Japanese Zero
Russian Mig-19
Focke-Wulf

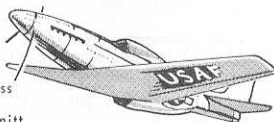


SUPER MODERN JET AIR LINERS

Pan American Boeing 707
TWA Boeing 707
TU104 Russian Jet
DC-8 Jetliner




FAMOUS WARSHIPS

Pocket Battleship Graf Spee
Battleship U.S.S. Iowa
Destroyer U.S.S. Halford
Carrier U.S.S. Saratoga
Destroyer U.S.S. Bennion
Cruiser U.S.S. St. Paul
Carrier U.S.S. Forrestal
Submarine U.S.S. Sea Wolf
Atomic Submarine S.S.N. Nautilus
"Q" Ship Atlantis—German Raider



FAMOUS SAILING SHIPS

Pirate Ship Black Falcon
Chinese Junk
Viking Ship
Blue Nose Schooner
Cutty Sark
Corsair

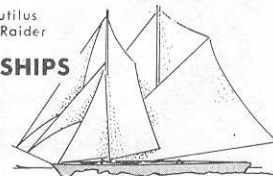

FAMOUS ARMY COMBAT UNITS

German "Panther" Tank
Russian "Stalin" Tank
"General Patton" Tank
U.S. Army 8" Howitzer
U.S. Army M8 Munitions Carrier
U.S. Army 155 MM "Long Tom"
U.S. Army 8" Howitzer with M8 Munitions Carrier

