Lockheed F-104 Starfighter Collection Pt1



For the best results these decals should be applied to a gloss surface such as provided by either Xtracolor or Xtracrylix paints. Cut out the decal required and soak in warm water until the decal is released from the backing paper. Wet the area to be decaled with MICRO SET which will help to eliminate air trapped under the decal and position the decal.

After 5 or 10 minutes wet the decal with MICRO SOL which will soften the decal and ensure that it settles down over any surface detail. Allow the decal to dry for at least 12 hours. During this time some wrinkling of the decal may occur, this is normal. Do not touch the decal at this time.

Carefully check for small air bubbles and if there are any prick with a needle and apply a drop of MICRO SOL. After all air bubbles have been eliminated and the decals are dry wash the entire model with water to remove any excess decal adhesive.

When completely dry the whole model should be sprayed with a coat of Xtracolor or Xtracrylix with a coat of Flat, Satin or Gloss varnish depending on the finish required.

Store in a cool dry place, avoid sunlight, dampness or extremes of temperature and/or humidity.





Harbour Road, Oulton Broad, Lowestoft, Suffolk, NR32 3LZ


Phone +44 1502 517444


Fax +44 1502 500521

www.hannants.co.uk

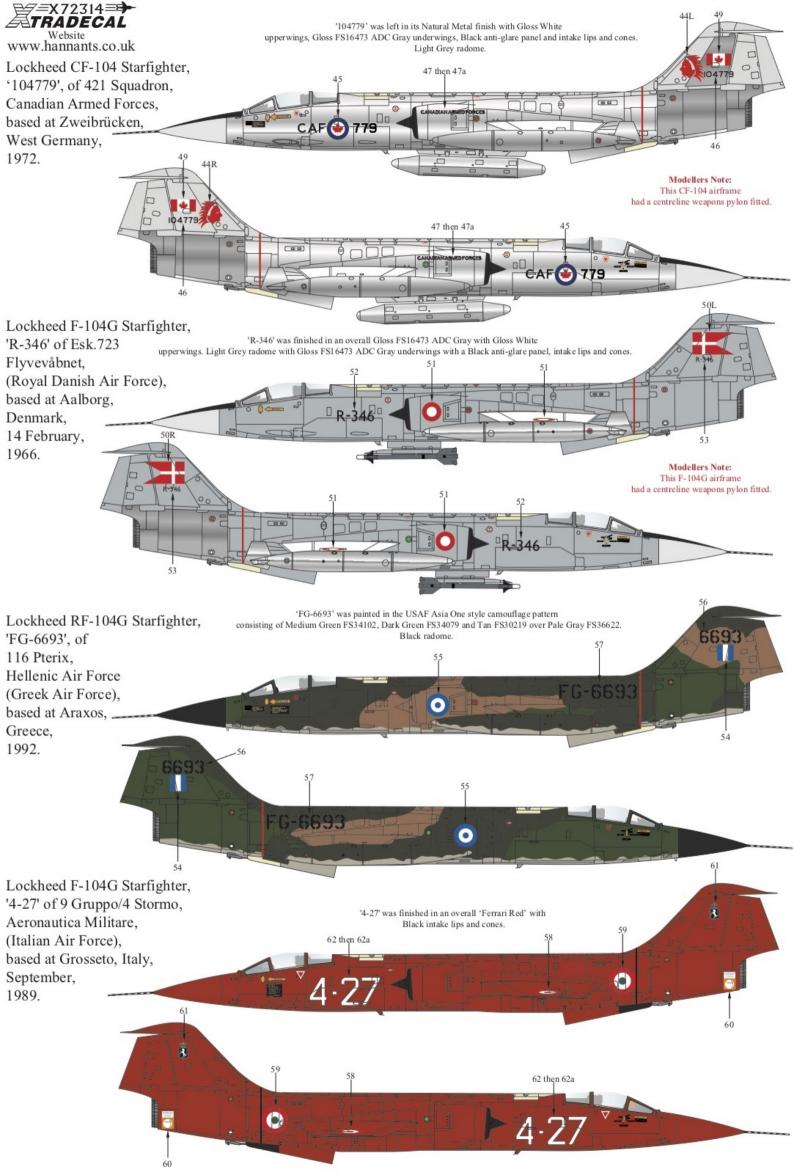

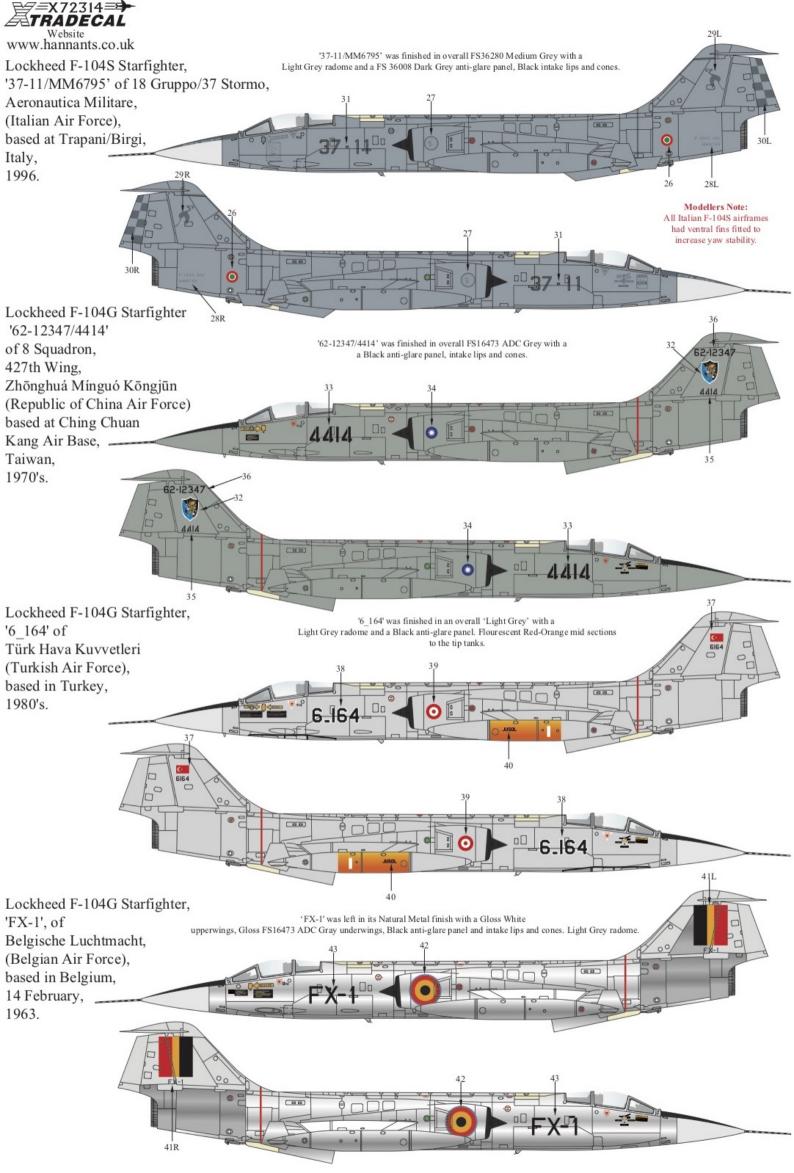

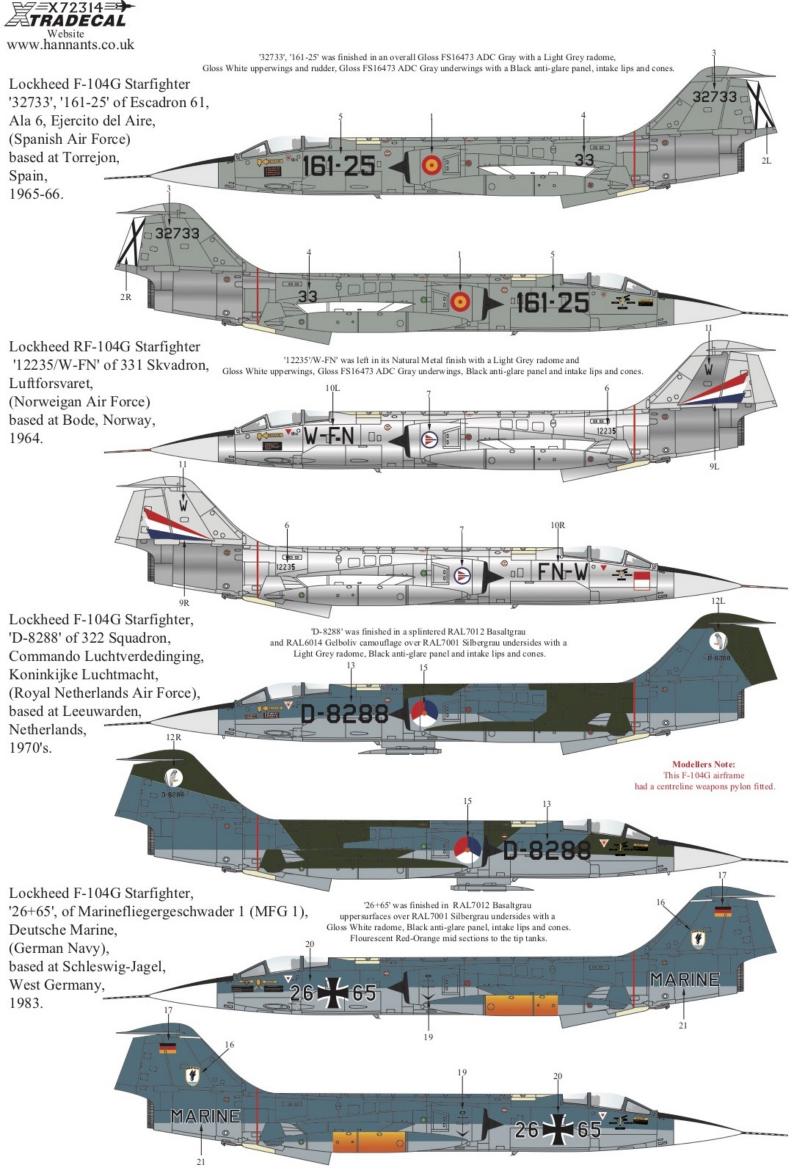

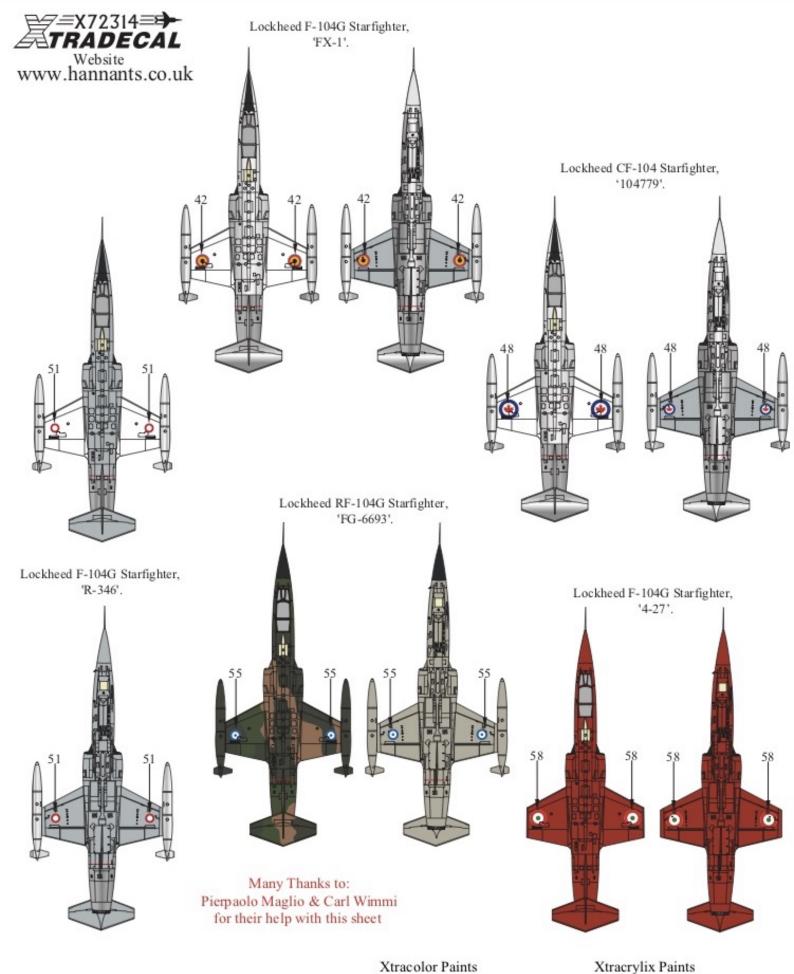

Paints:

The colours used on these aircraft can be found in the Xtracolor (prefix number with X) and Xtracrylix (prefix number with XA1) range of paints. X102 Tan Vietnam
X110 Forest Green
X138 ADC Grey
X140 Light Grey
X141 White
X166 Green Vietnam
X251 RAL 6014 Gelboliv
X254 RAL 7012 Basaltgrau
X255 RAL 7001 Silbergrau
X500 Duraluminum

X504 Exhaust

XA1138 ADC Grey
XA1140 Light Grey
XA1141 White
XA1166 Green Vietnam
iv
XA1251 RAL 6014 Gelboliv
rau
XA1254 RAL 7012 Basaltgrau
xA1255 RAL 7001 Silbergrau

XA1102 Tan Vietnam

XA1110 Forest Green

