


North American AJ Savage




No.30 © 2020
SCALE 1:72

AJ-1 Savage. 122591 / NB2. VC-5 "Savage Sons", USS Coral Sea. April 1950.
Early production aircraft with sliding canopy frame (White), without fitted prop spinners.

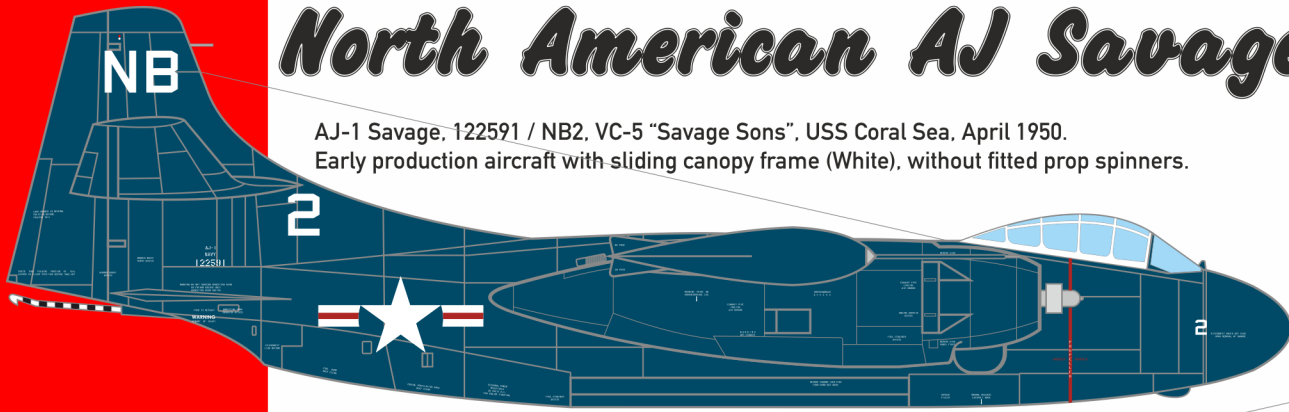


AJ-1 Savage. NF4 / 124176 "ICHI BAN!", VC-6 "Fleurs", USS Kearsarge. July 1952.

Starboard
ICHI BAN!
ICHI BAN!
Portside

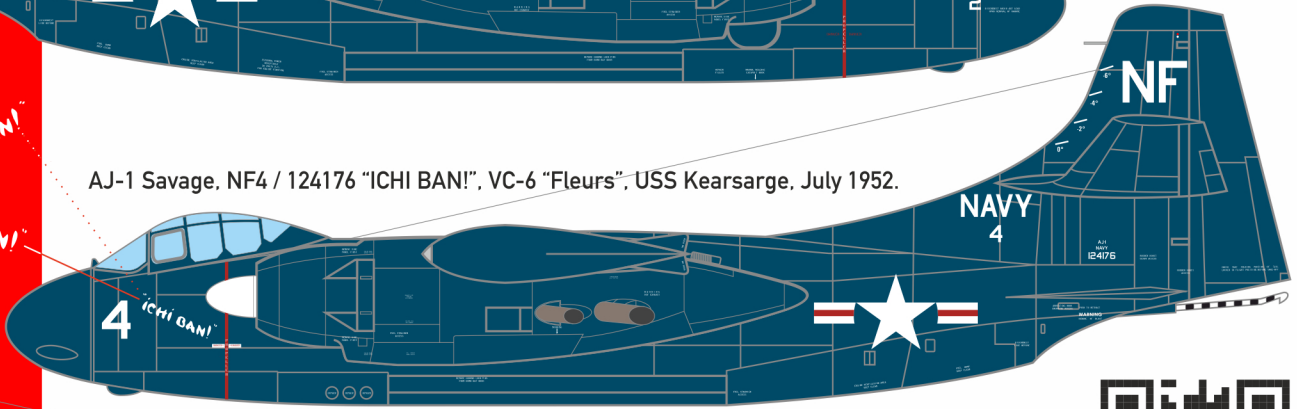


Retrofitted AJ-1 Savage. FG7 / 124856. VC-9 "Hooters", USS Lake Champlain. January 1956.

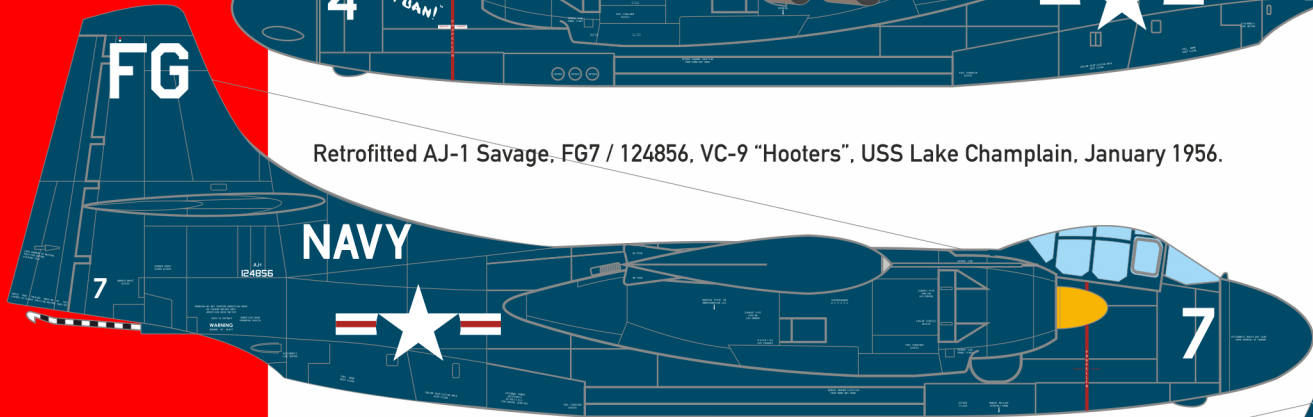


AJ-2 Savage. NH5 / 130415. VC-7 "Peacemakers", USS Lake Champlain. December 1955.

Starboard
STOLDT RR AD3
LT. HERMANN
ED LEGG AD1
Portside

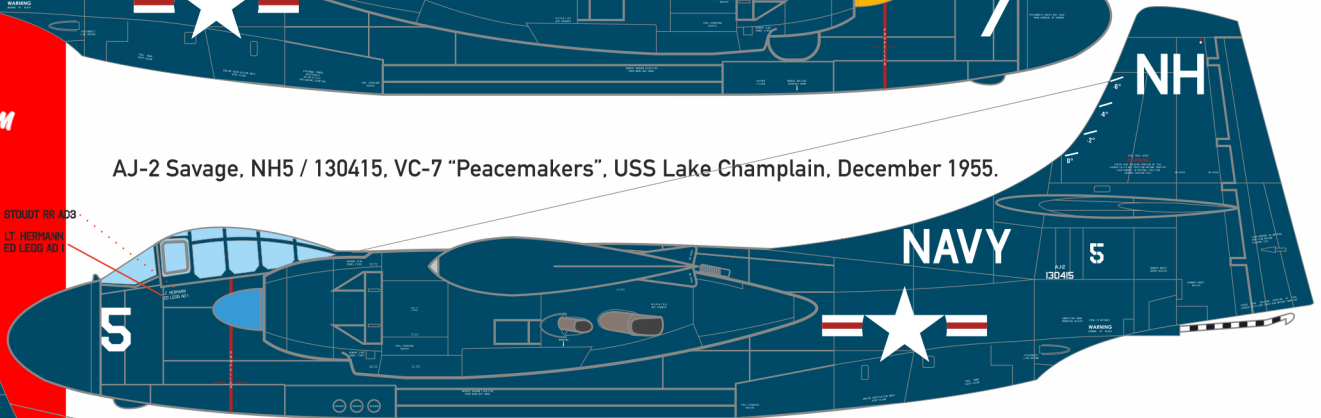


AJ-2P Savage. PB6 / 129185. VJ-61. USS Hornet. August 1955.

Portside D. CREED PHAN
F. TAYLOR ADC
LTJG PERKINS
ENS BEAR
Starboard

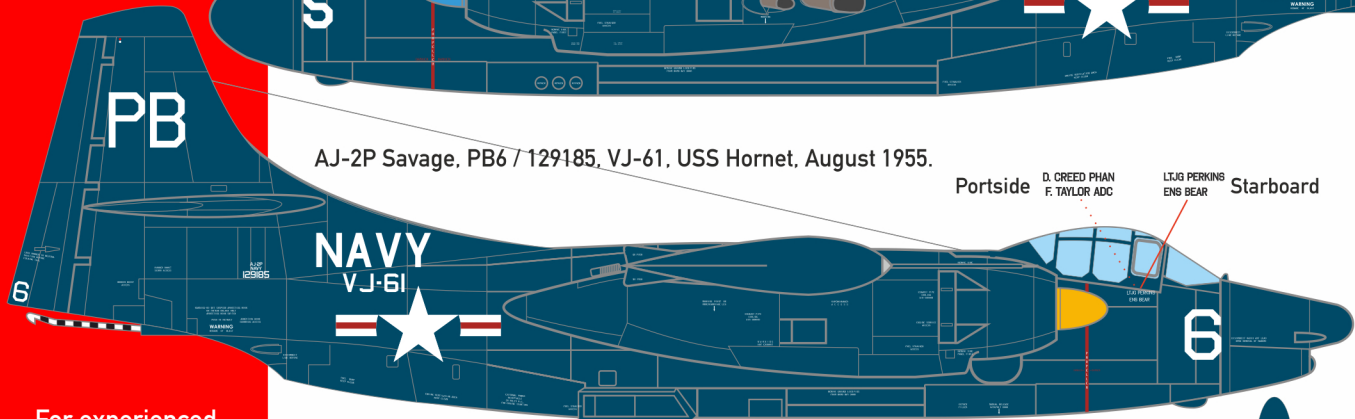


FS 595
15044

For experienced
modellers

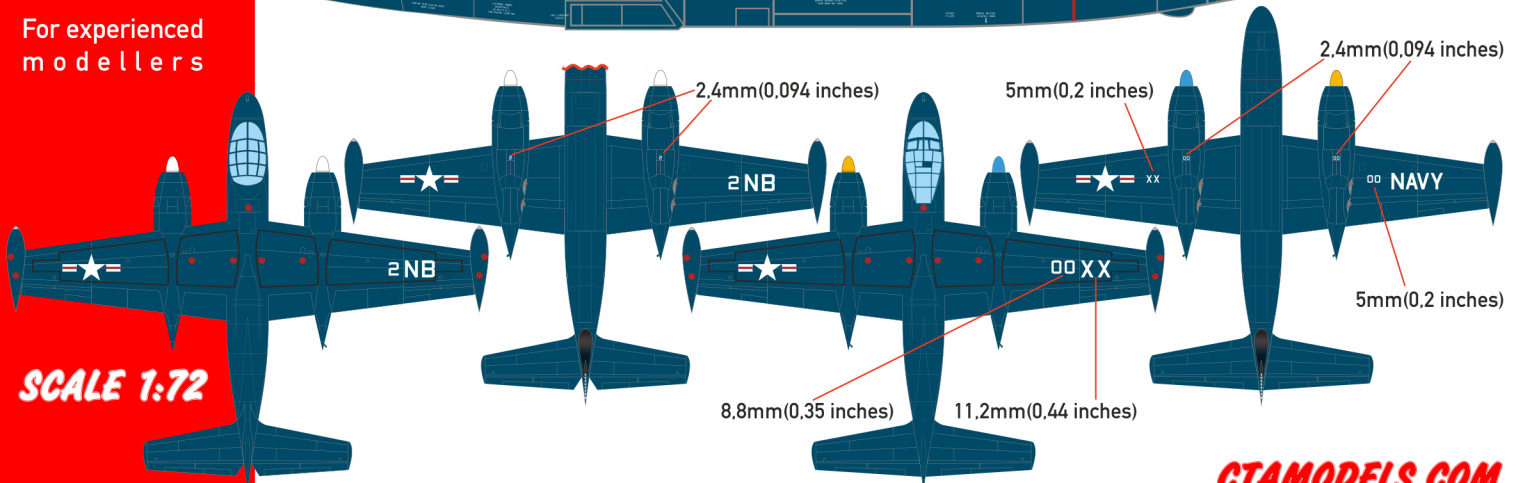


SCALE 1:72



CTAMODELS.COM

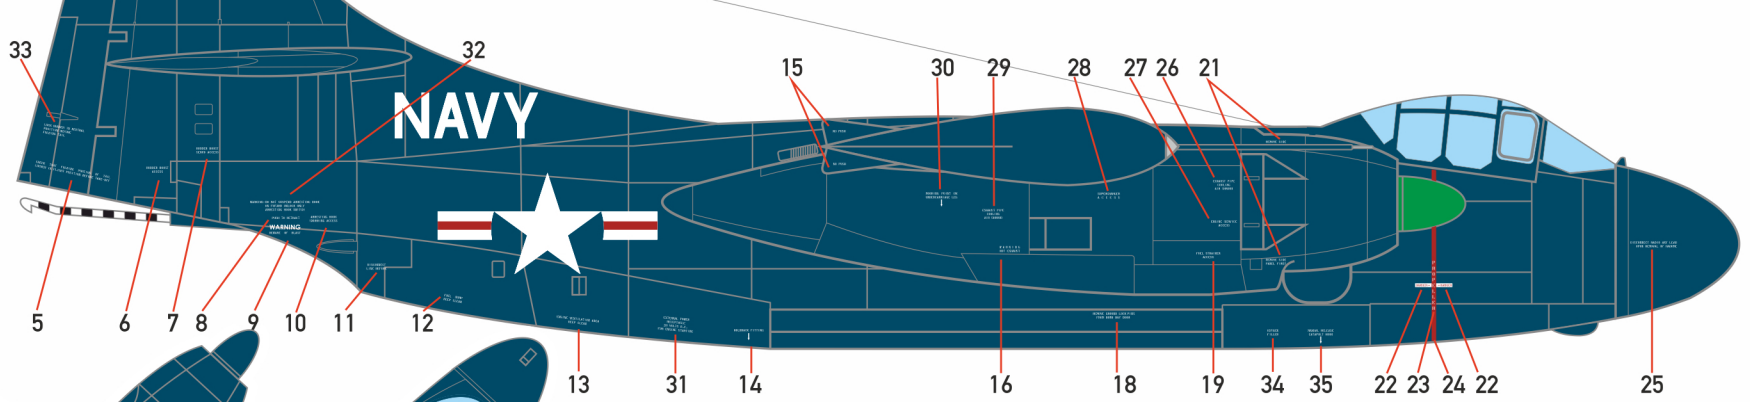

North American AJ Savage

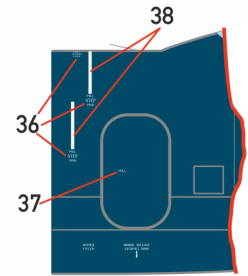

For experienced modellers

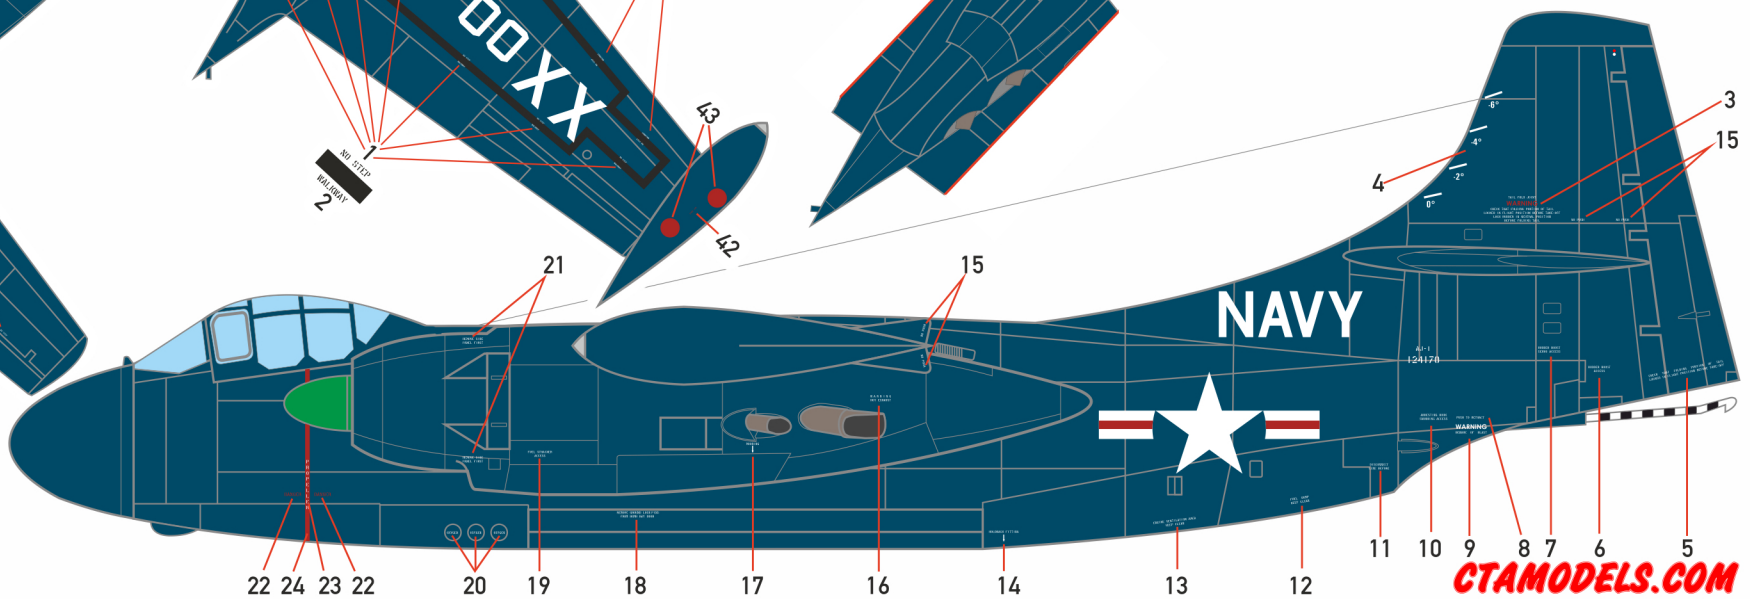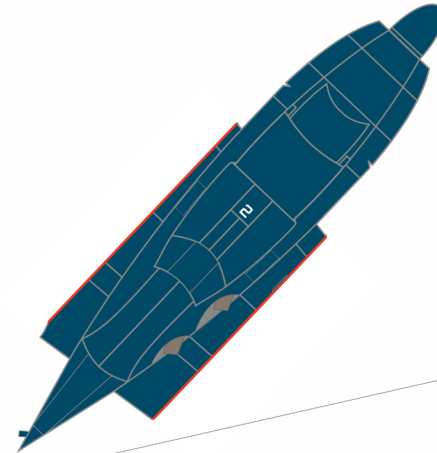

No.30 © 2020
SCALE 1:72



N'exposez pas le tapis OLFA à la lumière directe du soleil. N'exposez pas le tapis à des conditions extrêmes- forte chaleur ou grand froid. Rangez le tapis bien à plat et appuyez sur le tapis aussi légèrement que possible pour effectuer

NBNB22

WING - RIGHT UPPER / LEFT DORS

5 NH 5

WING - RIGHT UPPER

5 7 NH FG

WING - RIGHT UPPER

4 1

NBNB NH

NAVY NAVY

NAVY NAVY

NAVY NAVY

6 PB

WING - DOWN

PB 6

WING - RIGHT UPPER

NF 4

WING - RIGHT UPPER

WING - DOWN

6↑↓7

32↑

5↓

↑13 ↓33

10↑ ↓11

27↑ ↓19

35↑ ↓28

14↑ ↓9↓

↑16 21↓

↑31 15↓

8↑ ↓12

17

36

20

34

26

3

37

24

1

22

39

23

43

9

40

41

42

FUSELAGE WING

WARNING