


Instructions for Assembling **HAWK'S** All Plastic Airplane Kit of

DART XF-92A

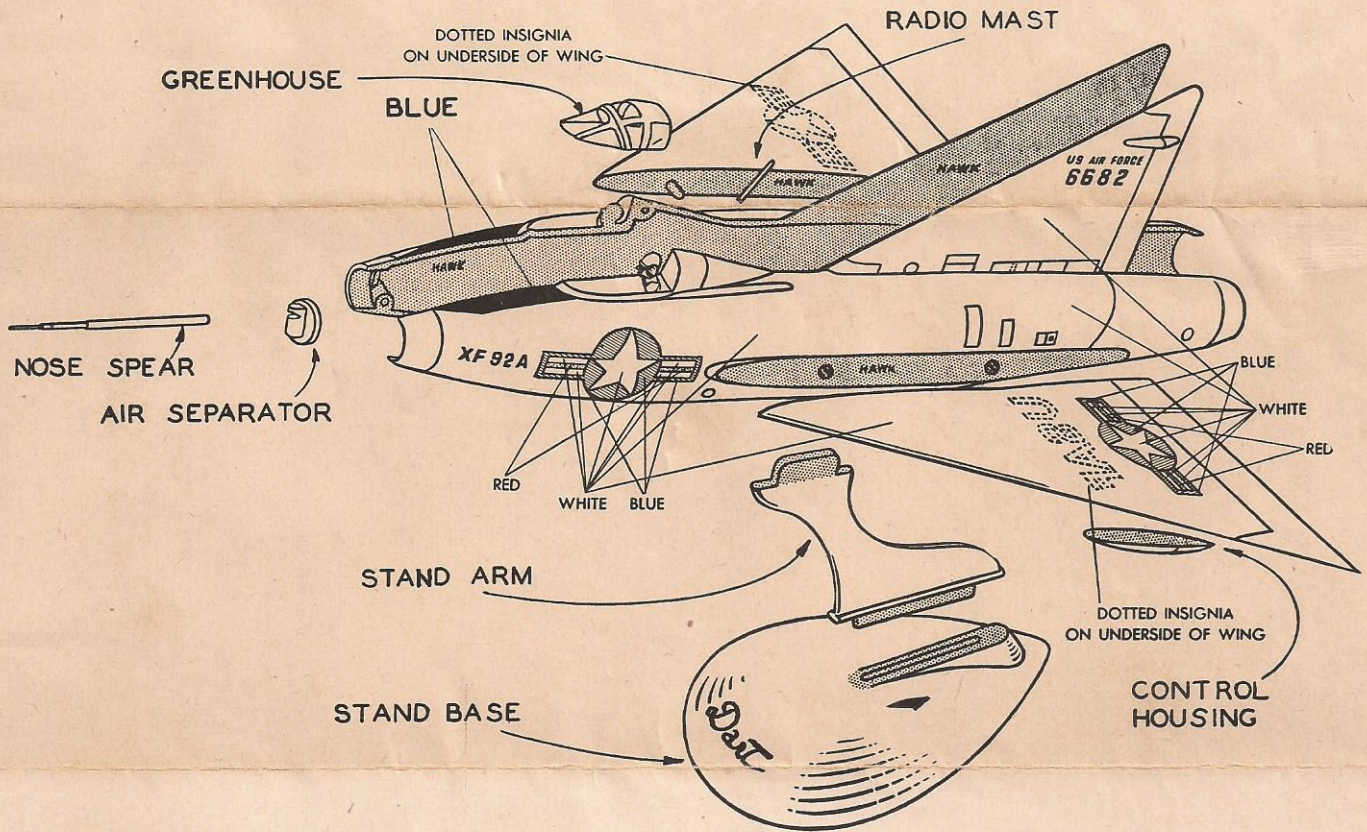

Catalog No. 605 – DART XF-92A (1/72" scale)

Study sketch of DART carefully and read these instructions thoroughly before assembling.

Place all parts of plane on work-table as shown in sketch. Remove any rough edges with a knife, fine file or sandpaper. Use polystyrene cement for gluing. Be very careful in assembling not to get cement on outer surfaces of plane parts.

ASSEMBLY

1. Cement both parts of stand together and set aside to dry.
2. Apply cement around edge of one half of fuselage. Press the two halves of fuselage together and hold until cement sets.
3. Apply cement to edge of "greenhouse" and place firmly over cockpit.
4. Apply cement to wing stubs and insert in fuselage holes.
5. Cement nose spear into air separator (see sketch), then cement edges of separator and slip into nose opening (stops on the inside of fuselage determine the correct depth to insert spear and separator).
6. Cement radio mast in place (see sketch).
7. Cement bottom of streamlined control housing and place on indicated positions under wings.
8. Cement completed model to stand and let dry thoroughly.
9. Read instructions on back of decals before applying. See sketch for correct positions of decals.
10. Plane is molded in the proper base color, but if you should decide to paint plane use a good grade of enamel (NOT LACQUER).

First with the Finest in Plastic Scale Model Airplanes