

EAGLE STRIKE




48199

Checkers anyone??
78 F-IC



P-51's Part I

Checkers anyone??

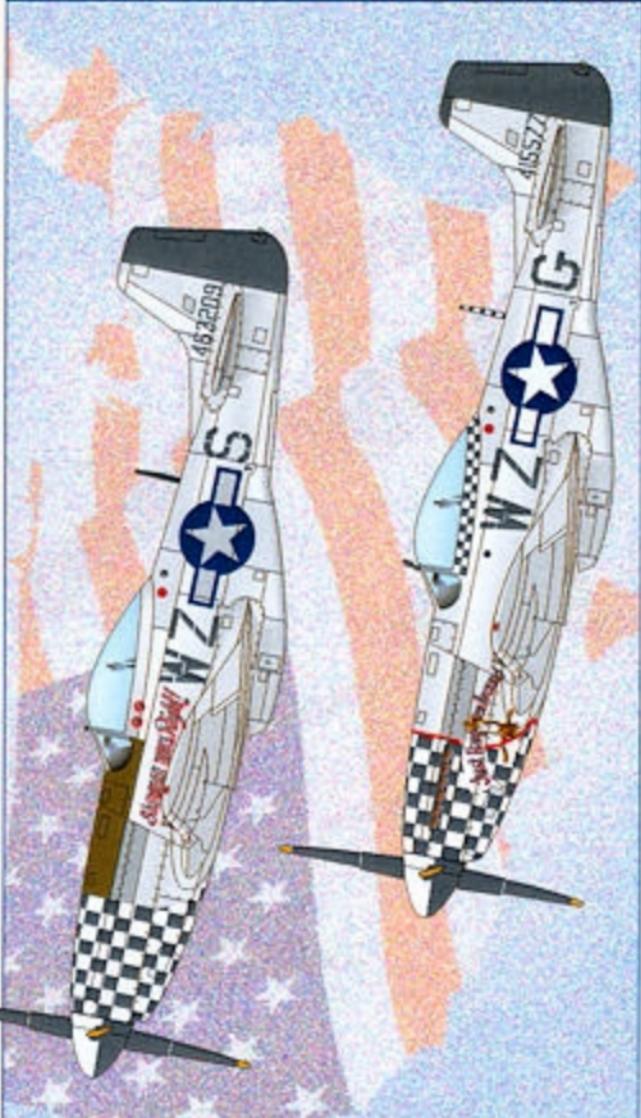

Suggested Kit:Tamiya 1/48 P-51D Mustang.





Checkers anyone?? 78 F.G.

48199

P-51's Part I




Aircraft 1 - P-51D 44-63209 'Sherman was Right!', flown by Lt. Frank Oyley, 84th FS, 78th FG. Natural metal finish, standard silver painted wings. Black rudder and antenna mast. Olive Drab antiguage panel. Spinner divided half-Black and half-White. Greyed out fuselage insignias. Shrouded exhausts.

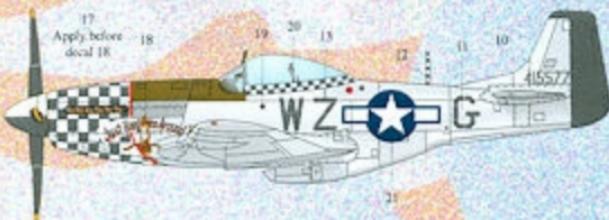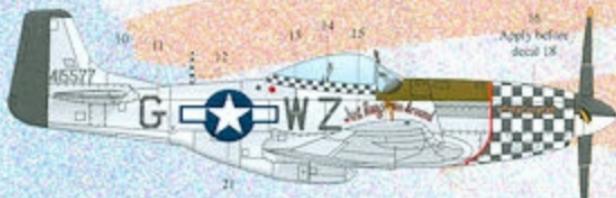

Aircraft 2 - P-51D 44-15577 'Just Hangin' Around', flown by Lt. John Murphy, 84th FS, 78th FG.. Natural metal finish, standard silver painted wings. Black rudder. Olive Drab antiguage panel. Spinner divided half-Black and half-White. Wrap decal 17 around antenna mast and trim when dry.

Copyright © 02/2005

Stencil instructions

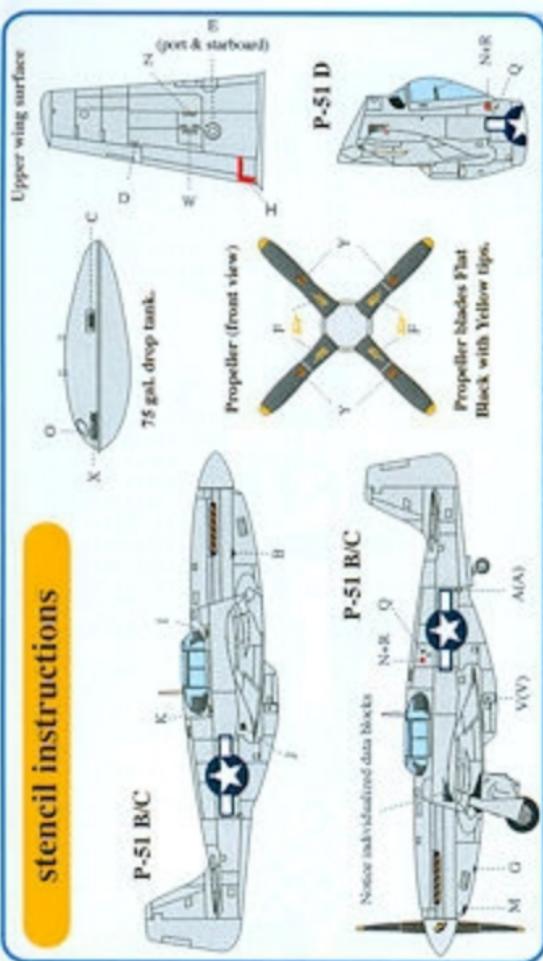

WHITE ALUMINUM OLIVE DRAB BLACK

22 22

Catch us on the net!
www.ExcaliburProductions.com

Recommended Kits:
Tamiya 1/48 P-51D Mustang.

References:
Photos provided by Norris Graser.
Aces & Wingmen II
Morris, 1989.
American Eagles, Classic colors,
2003; Freeman.
Mighty Eight in Color, 1992 Freeman.

AIRES
Aires offers super-detailing accessories for this and many other subjects in their range. Check our website at www.Aeromaster.com for this and many other wonderful products.
Available To You Now!

Decaling: Apply decals only to a glossy surface.

1. With a sharp scissors or knife, carefully cut item to be used, being careful of not cutting off the clear film around it or that belonging to an adjacent item.
2. Submerge in clean tap water for over 10 seconds and lay over an absorbent paper towel. Decal will slide freely in about 20 seconds. Do not leave decal on water bowl over ten seconds, or adhesive quality will suffer.
3. With a clean brush, apply a setting solution to the area where the decal will finally lay. (Micro, Super or Aero Set will do). With a clean pointed brush slide the decal on to the final area. Allow the setting solution to dry for about 3-5 minutes.
4. With another clean brush, apply a solvent solution over the decal (Micro, Super or Aero Sol will do). Do this if possible in one stroke since your decal will soften up and wrinkle immediately. This is an important step in the process, whatever you do DO NOT TOUCH THE DECAL, after this process until it is totally dry, preferably overnight.
5. When thoroughly dry, rinse your model with tap water and mild soap to wash of excess glue.
6. Finish your model with the desired final coat (gloss, flat, or semi-gloss).