


CAF VU33 T-33 SPECIAL

DECAL SET # 72.14 1/72 SCALE
48.14 1/48 SCALE

**Leading
Edge** MODELS

*Limited Edition Model Decal
(Short Production Runs)*

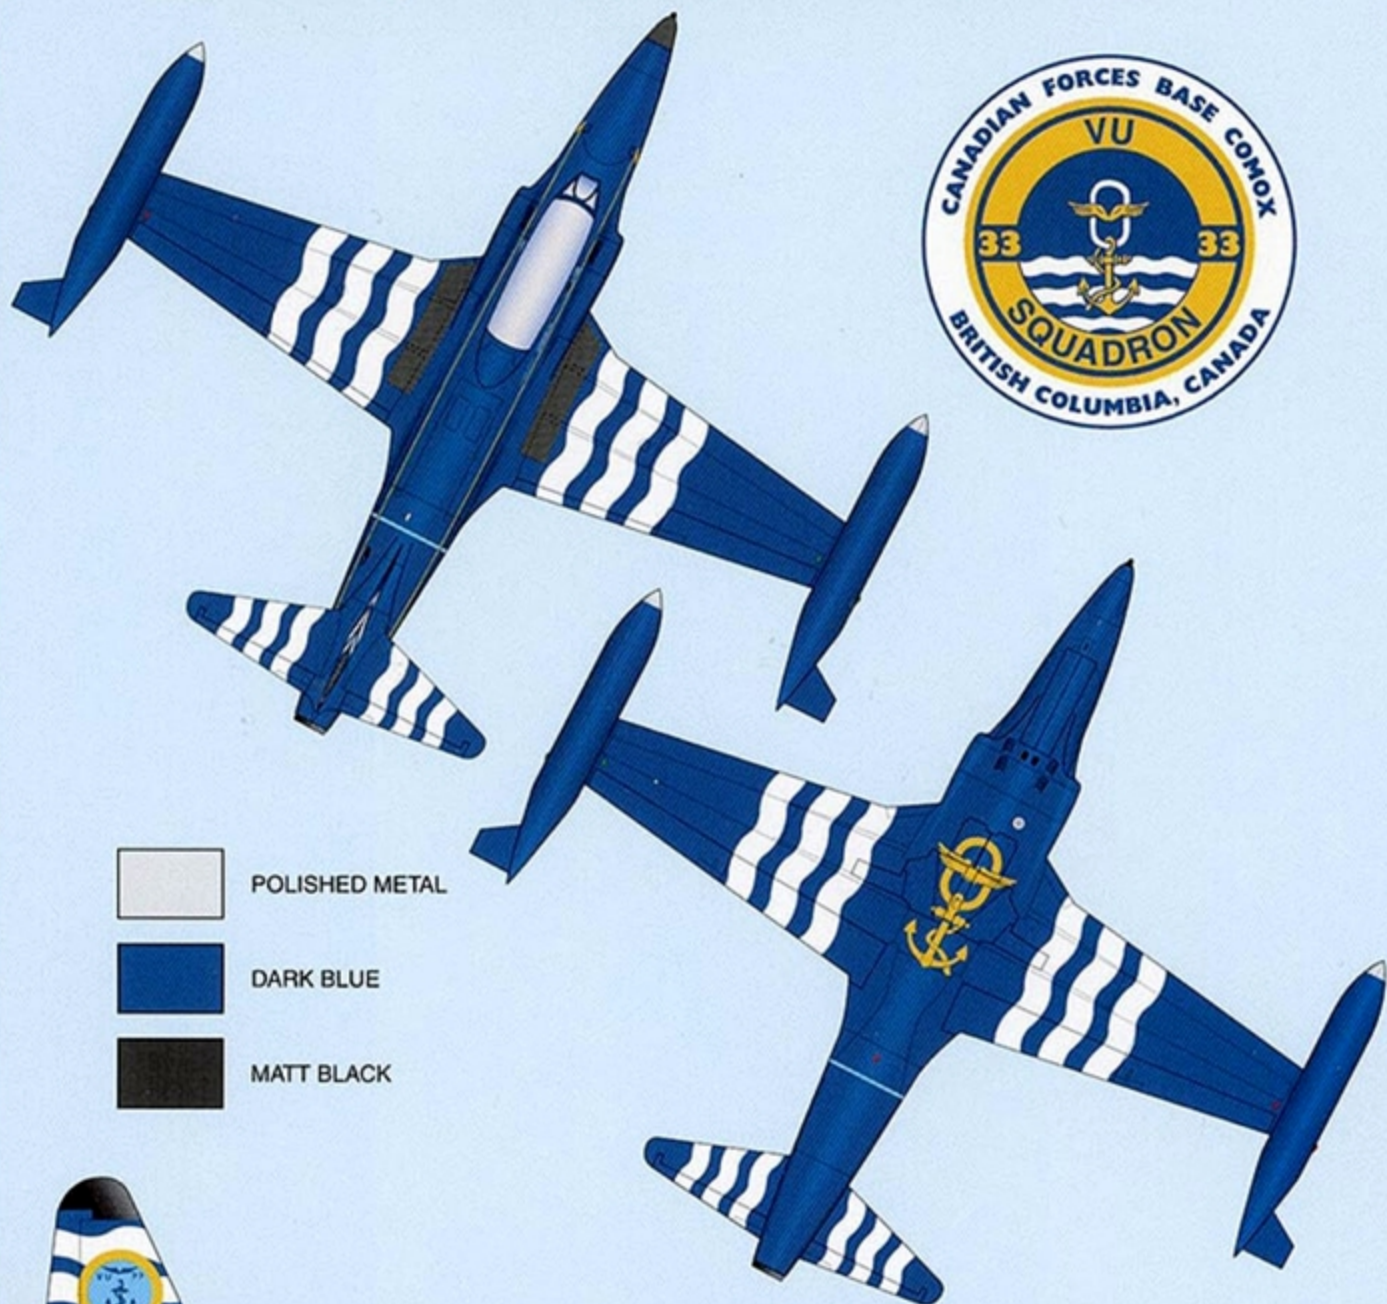


CAF VU33 T-33 SPECIAL SCHEME

DECAL SET #72.14 1/72 SCALE
#48.14 1/48 SCALE

Leading Edge
models


Decal Placement Instructions

COCKPIT
Black interior, gray instrument panel,
black seat, green seat cushions,
red head rest,
Inside of canopy framing; black.

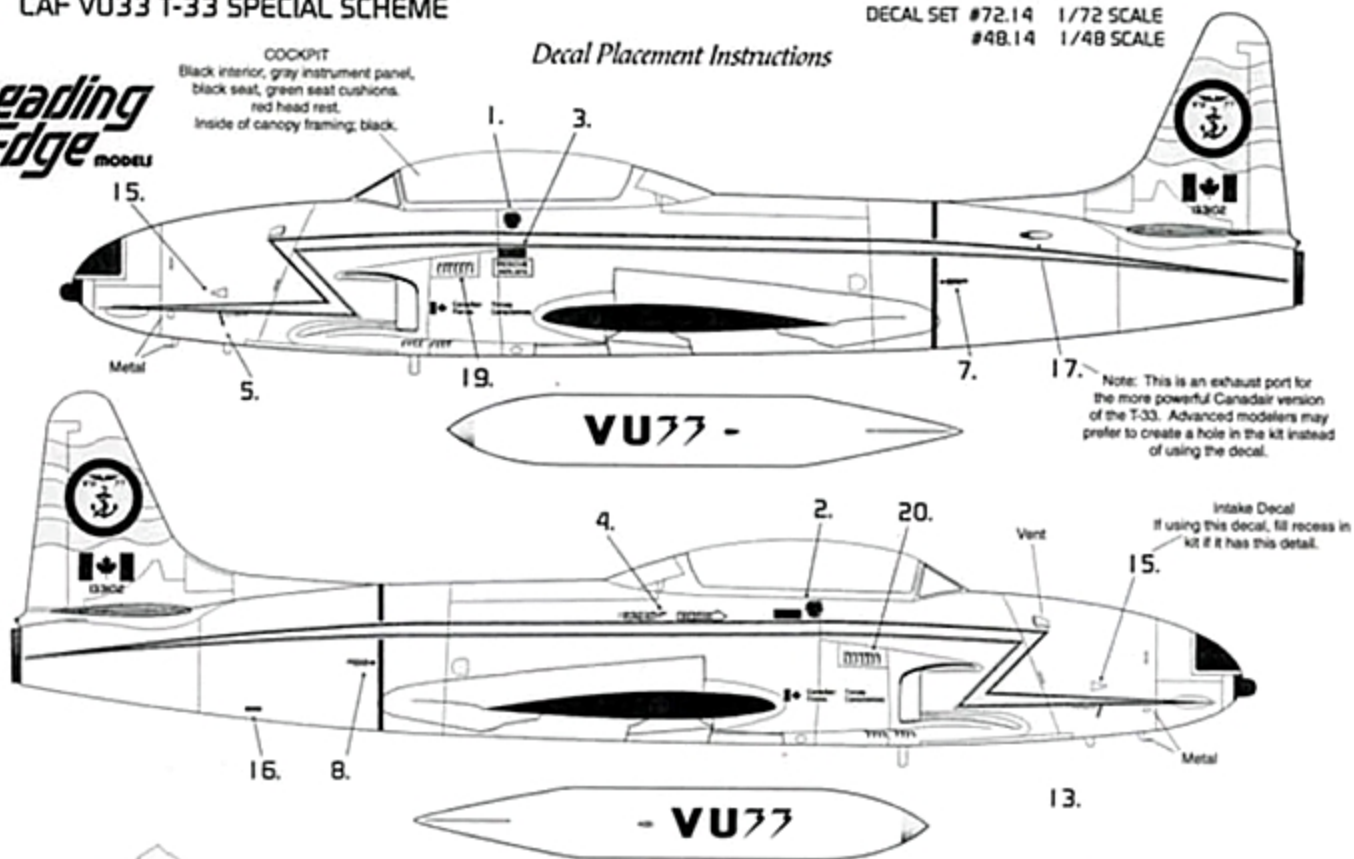

Note: This is an exhaust port for the more powerful Canadair version of the T-33. Advanced modelers may prefer to create a hole in the kit instead of using the decal.

Intake Decal
If using this decal, fill recess in kit if it has this detail.

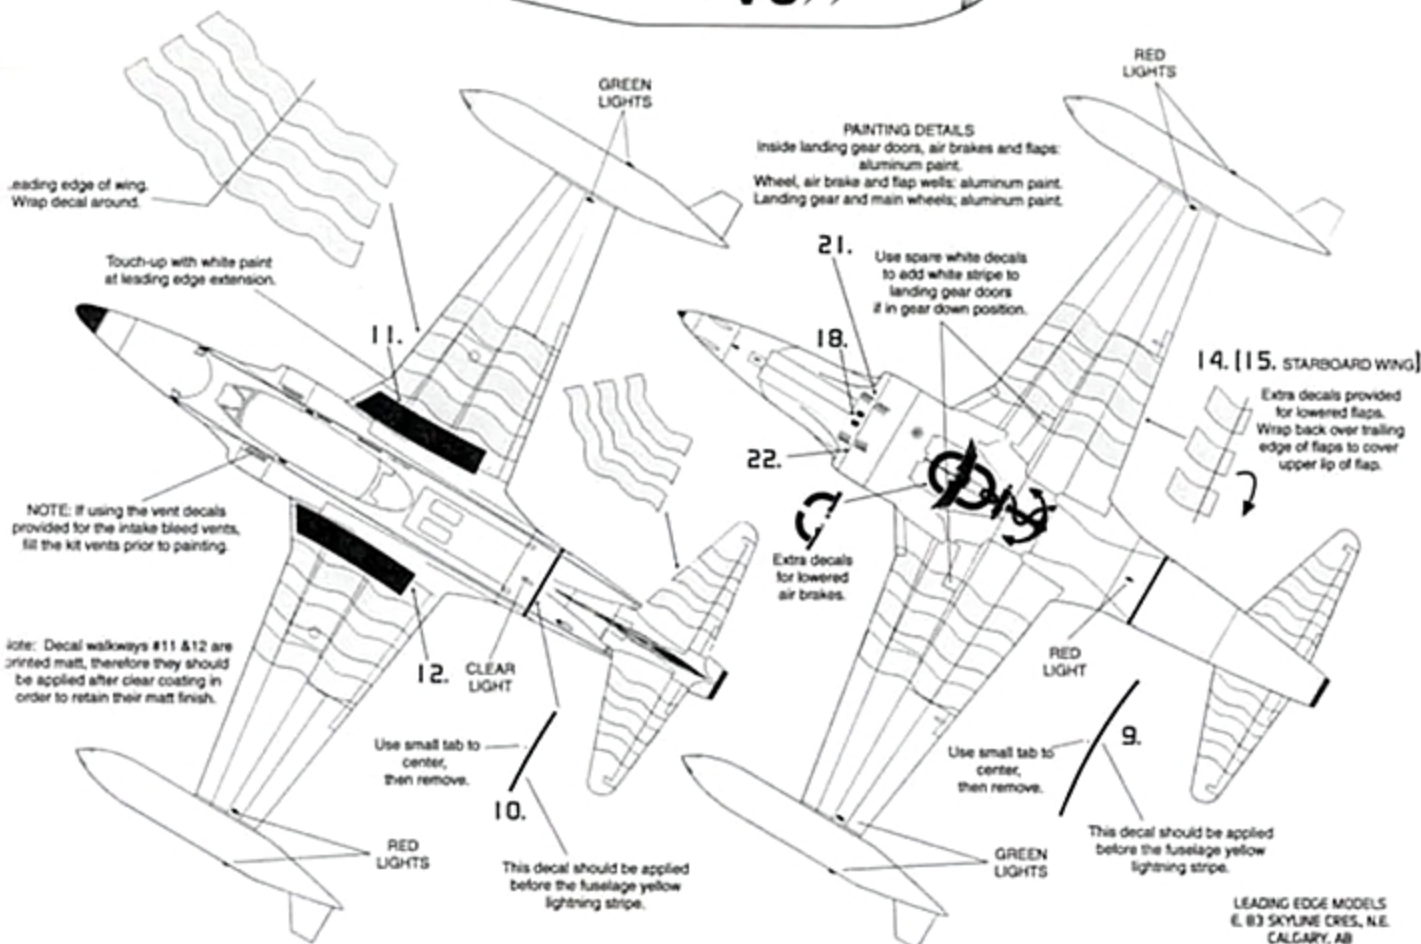

PAINTING DETAILS
Inside landing gear doors, air brakes and flaps:
aluminum paint.
Wheel, air brake and flap wells: aluminum paint.
Landing gear and main wheels: aluminum paint.

21. Use spare white decals to add white stripe to landing gear doors if in gear down position.

Extra decals for lowered air brakes.

Extra decals provided for lowered flaps. Wrap back over trailing edge of flaps to cover upper lip of flap.

NOTE: If using the vent decals provided for the intake bleed vents, fill the kit vents prior to painting.

Note: Decal walkways #11 & 12 are printed matt, therefore they should be applied after clear coating in order to retain their matt finish.

Use small tab to center, then remove.

Use small tab to center, then remove.

This decal should be applied before the fuselage yellow lightning stripe.

This decal should be applied before the fuselage yellow lightning stripe.

LEADING EDGE MODELS
E. 83 SKYLINE CRES. N.E.
CALGARY, AB
T2K 5X2
CANADA