

LIMITED EDITION!

CED48205

EA-6B

Prowlers Part 1



Recommended kit:
Monogram EA-6B


**Cutting
Edge**

®

P.O. Box 3956
Merrifield, VA 22116
USA

MODELWORKS www.meteorprod.com


Prowlers Part 1

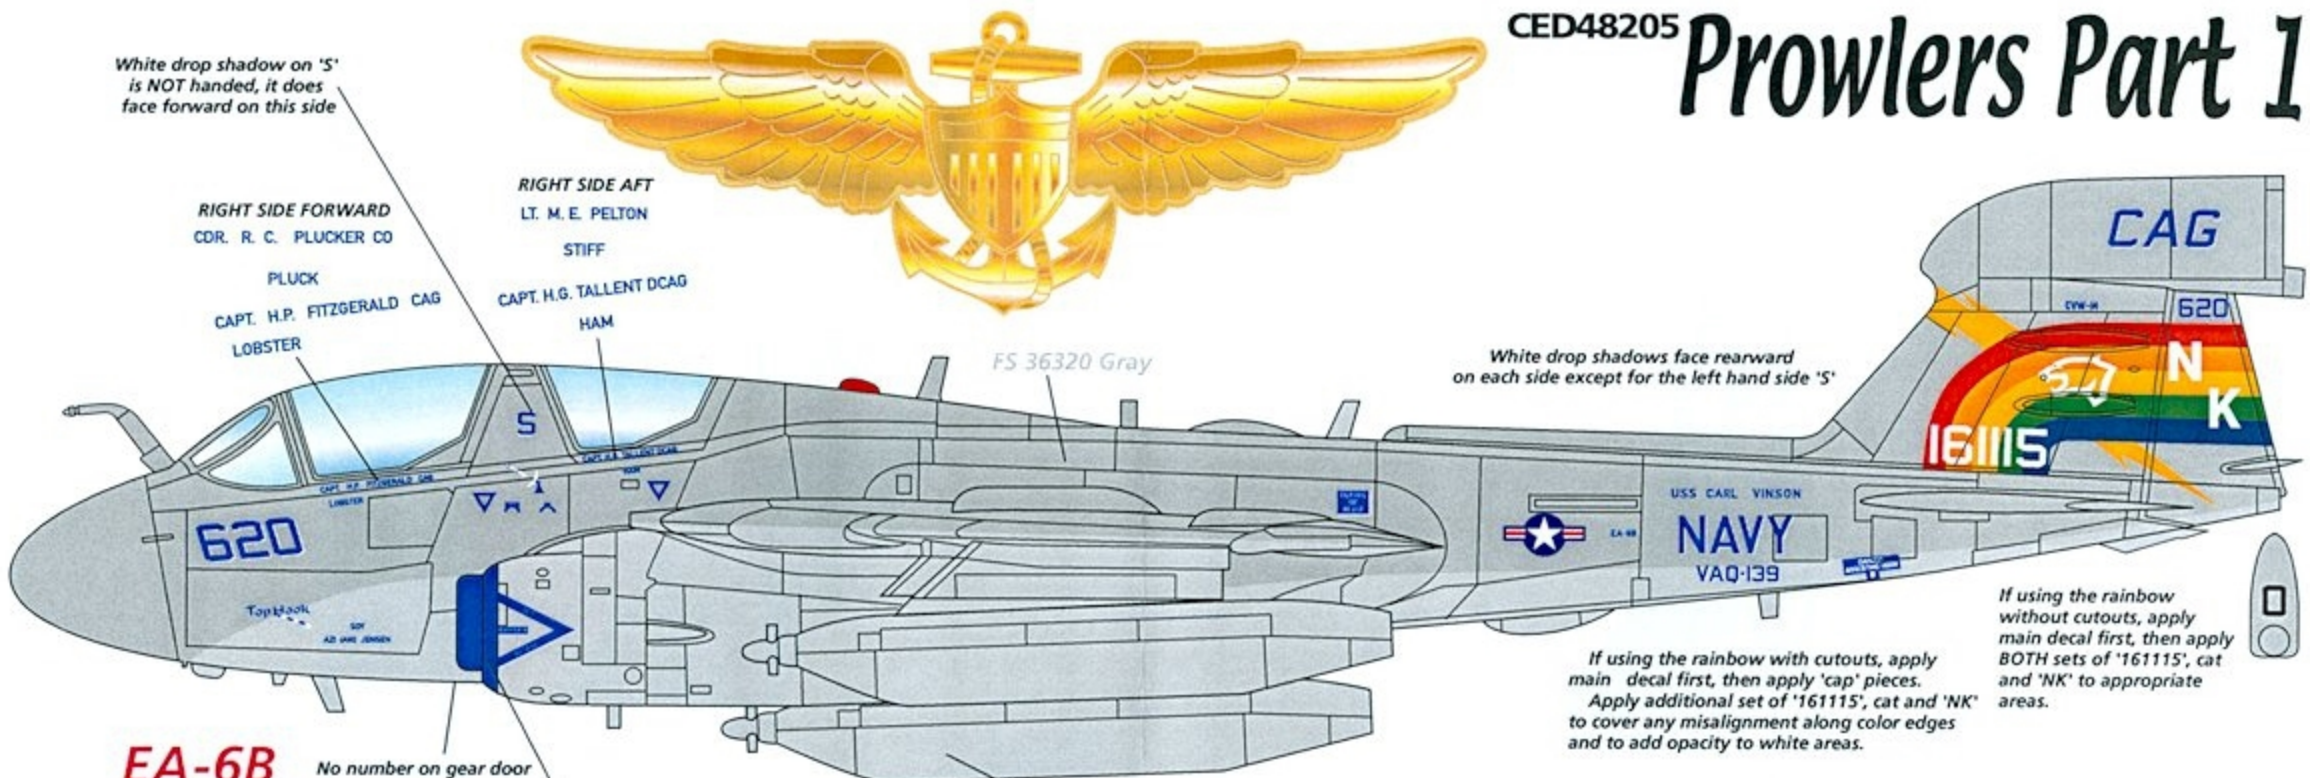

EA-6B No number on gear door
Capt. H.P. Fitzgerald CAG
Bu No 161115
VAQ-139
CVW-14
USS CARL VINSON

The intakes were concealed with blue covers, but we believe they were trimmed in the same blue at the rest of the aircraft


FS 36375 Gray

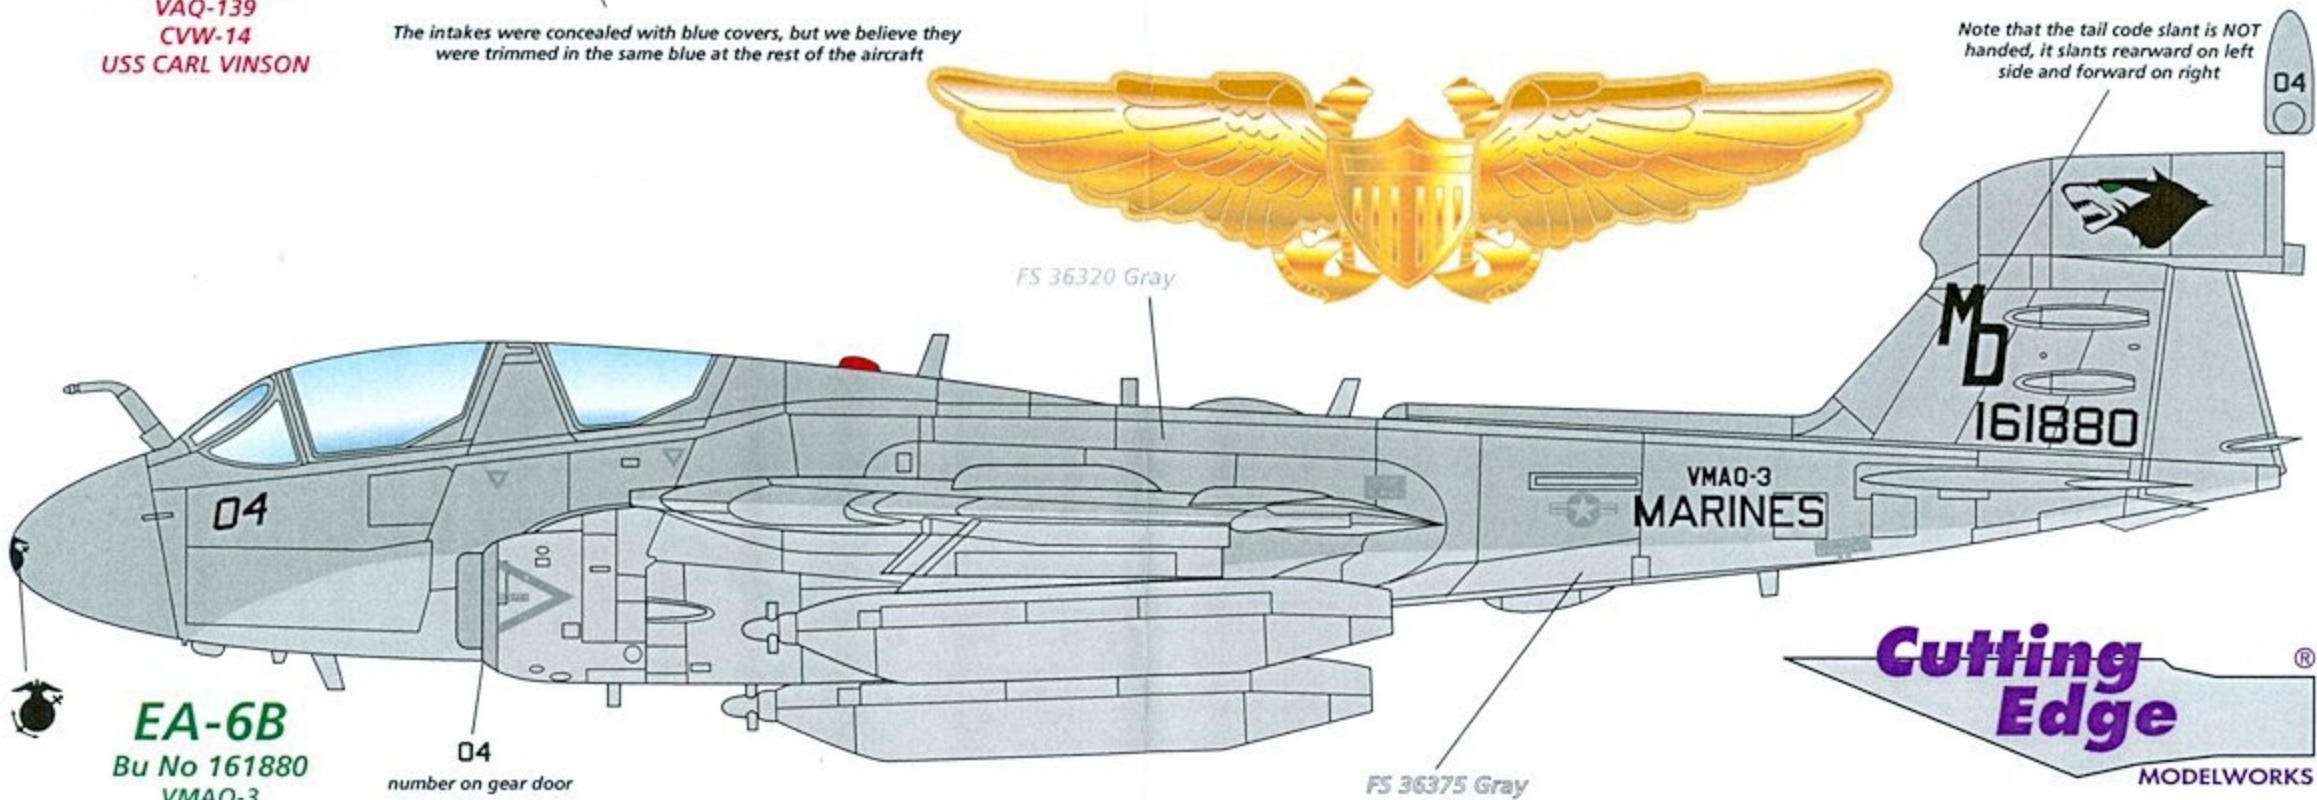

EA-6B
Bu No 161880
VMAQ-3

04
 number on gear door

FS 36375 Gray

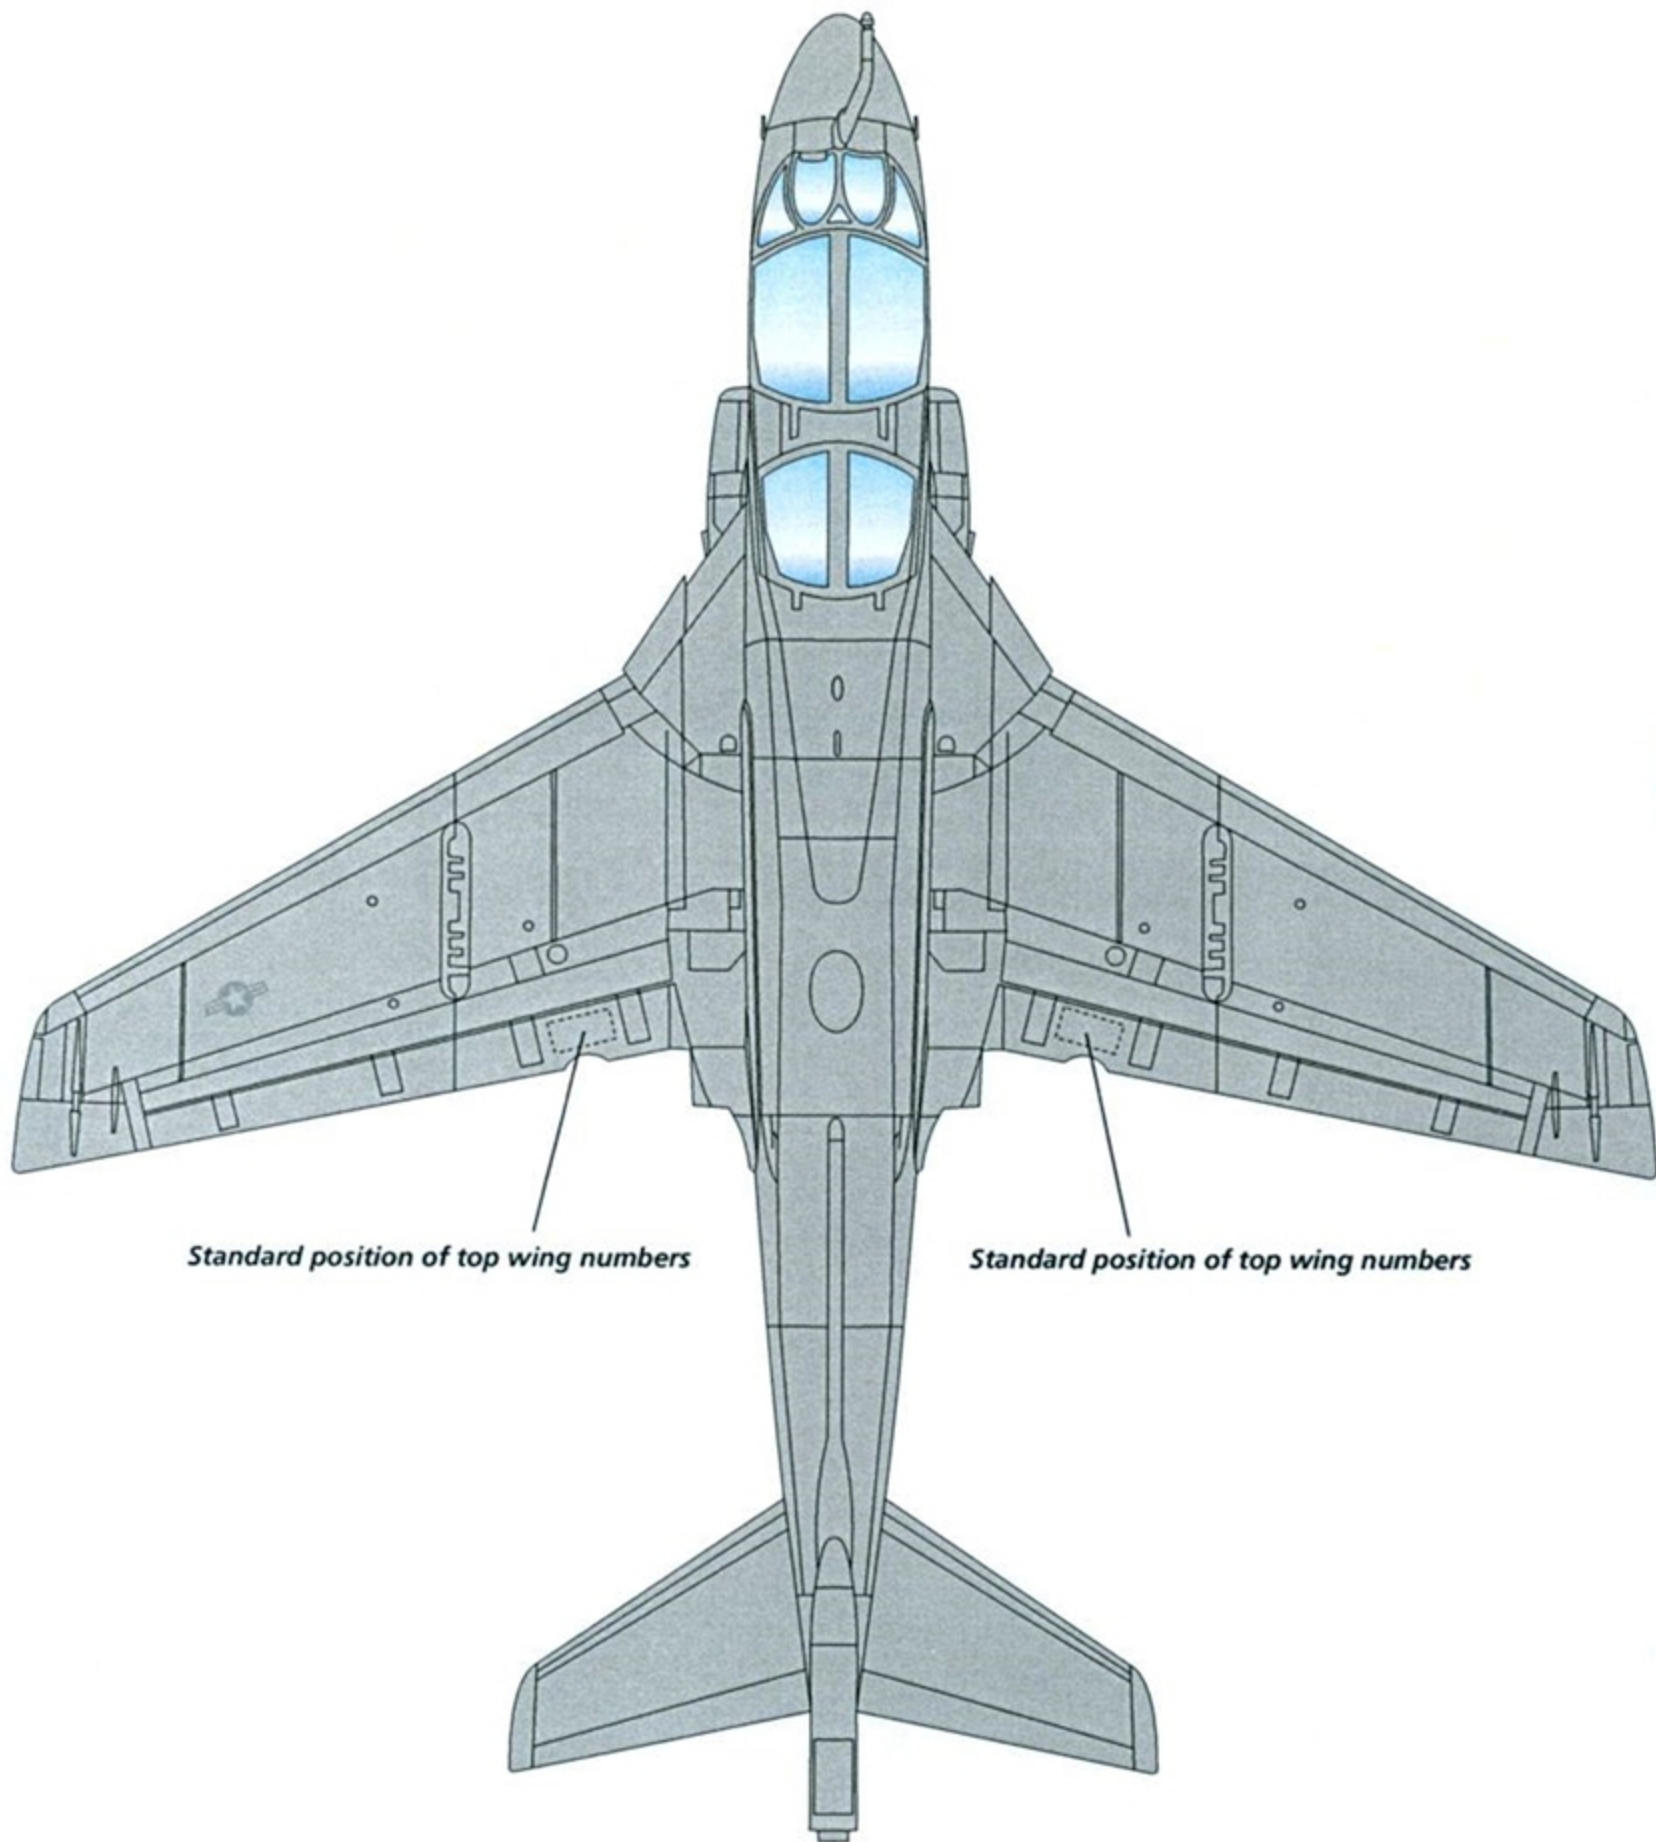

Standard position of top wing numbers

Standard position of top wing numbers

...available from

Meteor

Productions
Inc.

P.O. Box 3956, Merrifield, VA 22116 USA

☎ 703/971-0500 FAX 703/971-8111

www.meteorprod.com

Write, call, or visit our home page to order our 120+ page catalog of decals, kits, conversions, tools, books, magazines, etc., and we'll send it to you right away!

© Cutting Edge Modelworks, 2002

16115

- Note that the white drop shadows are to the rear on each side EXCEPT for the 'S' which is forward on the left hand side.
- We have supplied two versions of the rainbow. One has cutouts that match the kit (which is inaccurate in the length of these pieces) and full, uncut versions should you decide to sand them off and make your own from scratch. If using the latter apply BOTH sets of white markings to ensure proper opacity. If using the version with the cutouts and the alignment is slightly off resulting in jagged white art, just apply one of the extra pieces over it to smooth things out.

Applying the Decals

You probably already know all this stuff, so feel free to use your regular process; however, if you're new to aftermarket decals, here goes:

- Generally, use the Microscale Finishing System. We don't recommend extremely strong decal solvents such as Solvaset.
- Your model must have a smooth, glossy surface, as decals won't adhere well to matte surfaces. Use gloss paints or your favorite clear gloss overspray over matte or semigloss paint.
- Cut each subject out without trimming off the slight excess film (this helps the decal film disappear when dry).
- Put the decal in warm water that has a drop or two of liquid dishwashing soap or photo-flo for 10 seconds.
- When the decal will slide off the backing paper without forcing it, apply it to the proper position on your model. Slide the backing paper out from underneath.
- Gently blot off excess water and smooth out bubbles under the decal surface. If you wish, carefully brush on a mild decal softener such as Micro-Sol.
- When all decals are completely dry, gently wash off all excess decal adhesive.
- Finally, overcoat your model with a good quality gloss coat, followed by your choice of matte or eggshell clear topcoat.

FS 595 Color Cross Reference

- FS 6320 Xtracolor X135, ModelMaster 1741, Gunze Sangyo H307, Mr Color 307, Polly-S 837, Pro Modeler 88-0036, Floquil 303133
FS 6375 Pro Modeler 88-0034, Polly Scale 505304

Bibliography

Original photos.

Special thanks to Capt Dana "Smudge" Potts, USN, and Bryan Wilburn!!