

LIMITED EDITION!

CED48285

FW 190D-9

Dazzling Doras



I./EKG(J)



Stab/JG 6



7./JG 26



7./JG 26

Recommended kit:
Tamiya Fw 190D

**Cutting
Edge**

MODELWORKS

7401 Fullerton Rd, Suite H
Springfield, VA 22153
USA

www.meteorprod.com


Dazzling Doras

CE48285

This stencil could be red or black
No antenna pulley-wire attached as with blown hood D-9s



Fw 190 D-9
W.Nr. 211115, I/EKG(I)
Pilsen, May 1945



All aircraft have the early 5-piece gun cowl.

Fw 190 D-9
W.Nr. 211929, Stab/JG 6
Reichenberg, May 1945



Fw 190 D-9
W.Nr. 210xxx, 7/JG 26
Nordhorn-Klausheide, Feb. 1945

No antenna pulley-wire attached as with blown hood D-9s

This stencil could be red or black



No DF loop


Fw 190 D-9
W.Nr. 210222, 7/JG 26
Schleswig, May 1945

No antenna pulley-wire attached as with blown hood D-9s




**Cutting
Edge**

MODELWORKS

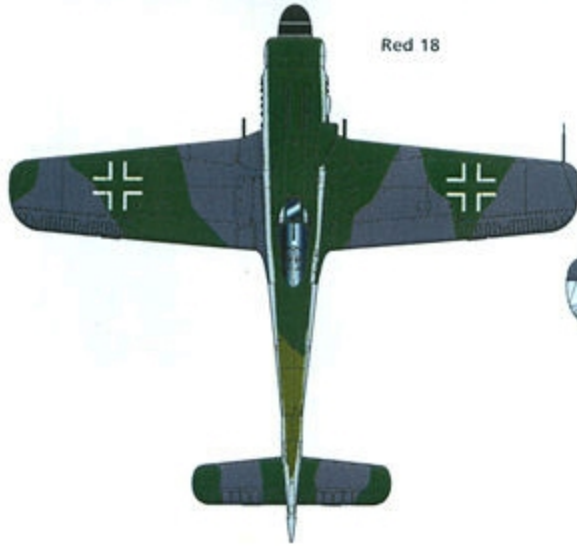

Red 18

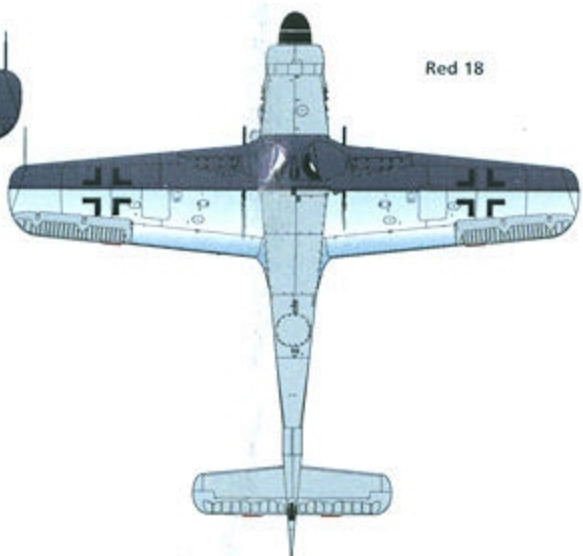


Red 18

Black +-



Brown 2 (also use pattern for Brown 9)

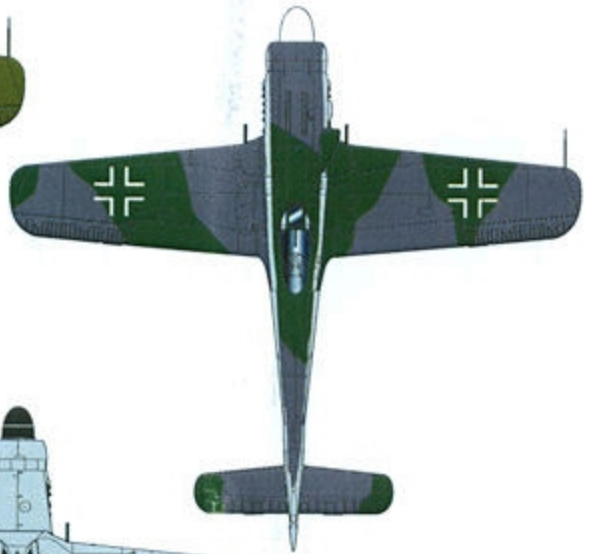

Standard bottom markings placement
(use for +-, Brown 9 & Brown 2)

...available from



7401 Fullerton Rd, Suite H, Springfield, VA 22153 USA
703/440-8720 FAX 703/440-8724
www.meteorprod.com

Write, call, or visit our home page to see
and order our entire line of decals, kits,
conversions, tools, books, magazines,
etc.!



All aircraft

- All four aircraft feature the early, 5-piece gun cowl. Later Doras had a simplified 3-piece cowling.
- All aircraft with the early flat canopy also have no antenna pulleys. The antenna wire on these aircraft attaches in the same way as a blown canopy.

Red 18

- The fuselage stripe on this aircraft might have been white.

Brown 2

- Note the overspray/fading of the left side fuselage cross.
- The spinner is very unusual in being painted half black, half white.

Applying the Decals

You probably already know all this stuff, so feel free to use your regular process; however, if you're new to aftermarket decals, here goes:

- Generally, use the Microscale Finishing System. We don't recommend extremely strong decal solvents such as Solvaset.
- Your model must have a smooth, glossy surface, as decals won't adhere well to matte surfaces. Use gloss paints or your favorite clear gloss overspray over matte or semigloss paint.
- Cut each subject out without trimming off the slight excess film (this helps the decal film disappear when dry).
- Put the decal in warm water that has a drop or two of liquid dishwashing soap or photo-flo for 10 seconds.
- When the decal will slide off the backing paper without forcing it, apply it to the proper position on your model. Slide the backing paper out from underneath.
- Gently blot off excess water and smooth out bubbles under the decal surface. If you wish, carefully brush on a mild decal softener such as Micro-Sol.
- When all decals are completely dry, gently wash off all excess decal adhesive.
- Finally, overcoat your model with a good quality gloss coat, followed by your choice of matte or eggshell clear topcoat.

FS 595 Color Cross Reference

| | |
|--------|--|
| RLM 02 | Xtracolor X201, Floquil 303271, Polly Scale 505075 |
| RLM 04 | Xtracolor X213, Floquil 303269, Polly Scale 505017 |
| RLM 70 | Xtracolor X204, Floquil 303241, Polly Scale 505055, Pro Modeler 88-0043RLM 75 Xtracolor X207, Polly Scale 505060, Floquil 303249, Gunze Sangyo H069/H057 |
| RLM 76 | Xtracolor X208/138, Polly Scale 505061, Floquil 303251, Pro Modeler 88-0042, Gunze Sangyo H062, Modelmaster 1731, Tamiya XF66 |
| RLM 81 | Xtracolor X210, Floquil 303263, Polly Scale 505070 |
| RLM 82 | Xtracolor X211, Floquil 303265, Polly Scale 505071 |
| RLM 83 | Xtracolor X212, Floquil 303267, Polly Scale 505072 |

Bibliography

Special thanks to W. Baldwin for loan of reference materials
Focke-Wulf Fw 190D Part 1. Copyright 2005, JAPO Publications.