

# F-16C NIGHT FALCON

# F-16C '夜隼' 夜间战斗攻击机

## ASSEMBLY INSTRUCTION







穴あけしてください。  
FILE HOLE  
SCHLESSEN  
BOUCHER LE TROU  
FODD PRENO  
把孔磨平



ボールを入れてください。  
INSERT BALLAST  
BALLAST ZUGEBEN  
A LESTER  
ACQUINCIARE ZAVORRA  
放入重砵物

- Ballast is not included.
- Ballast ist nicht im Bausatz enthalten.
- Le lestage n'est pas inclu.
- Zavorra non inclusa.
- El lastre no esta incluido.
- 不包括重砵物

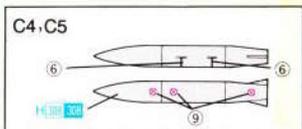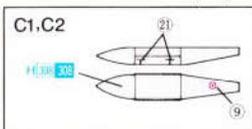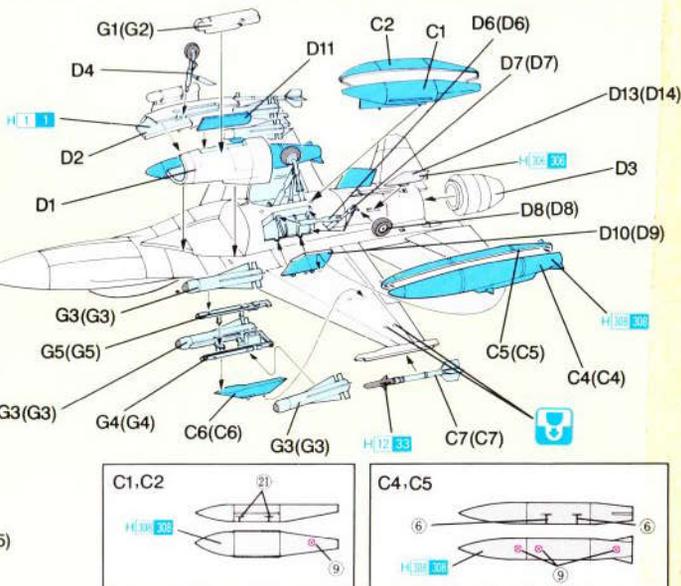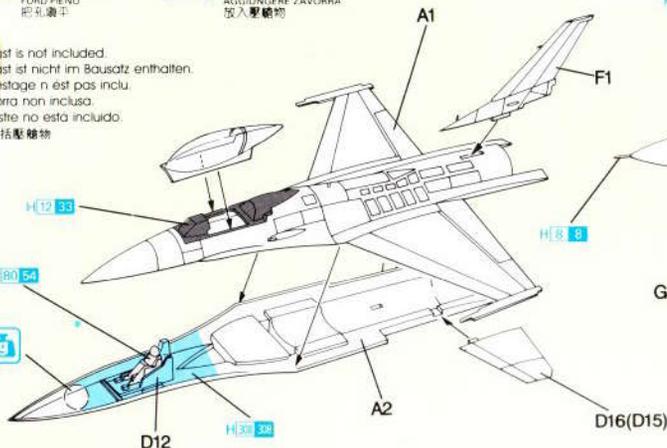

## MARKING AND PAINTING

### ■ Correct Method for Applying Decals

- ① Clean model surface with wet cloth.
- ② Cut each design out of decal sheet and dip them in warm water for 20 seconds.
- ③ Check with finger tip if design is loose on base paper. If so, place it on proper position on model and slide off base paper leaving design on model.
- ④ Move design to exact position with wet finger tip, and push out excess water and air bubbles under decal with soft cotton cloth.
- ⑤ When decals get dry, wipe off with wet cloth excess glue left around decals.

### ■ 貼上水印標貼的正確方法：

將各標貼從紙上切出，放入溫水中20秒，再放到模型表面正確位置上，將底紙移去，用柔軟的布輕壓，確保效果完美。

HIT GUNZE SANGYO AQUEOUS HOBBY COLOR ■ GUNZE SANGYO MR COLOR

H1 1	WHITE
H8 8	SILVER
H12 33	FLAT BLACK
H18 28	STEEL
H76 61	BURNT IRON

H80 54	KHAKI GREEN
H30 30	DARK GRAY FS36118
H30 30	LIGHT GRAY FS36270
H30 30	GRAY FS36320
H30 30	LIGHT GRAY FS36375

