
HORIZON CONVERSIONS

KIT # 0003

## 200 GAL. FERRYTANK FOR P-47 THUNDERBOLT

Cut tank from sheet using an exacto saw.
HORIZON CONVERSIONS are about 1/8 inch higher,
to give you plenty of room to work with.
After cutting and sanding both halves, put one
halve on spare sheet of plastic and outline
it with a pencil, cut with scissors but leave it
about 1/16 inch larger and glue it between the two halves to get the
seam around center of the tank.tank should be .625 inches high after
assembly.

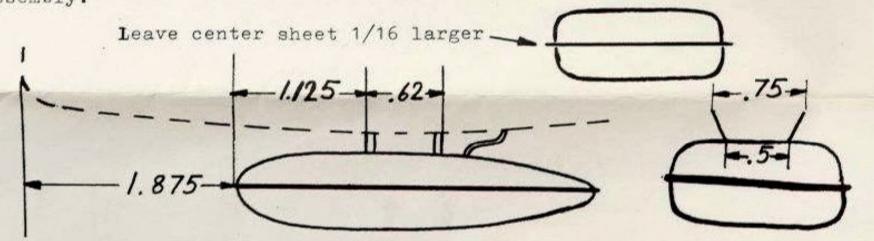

Tank shackles are .31 inches long.
Tank can be atached to P-47D wingpylons as well.