

1/72 nd Scale

Kit. V0511

The Commonwealth Aircraft Corporation Wirraway Is one of Australian aviation's most significant aircraft. It was a licence built version of the North American NA 16 and, at the outbreak of War in the Pacific, the only combat aircraft in production in Australia.

Wirraways served
Australia right through
WW II and Post War till
1959 in Air Force, Navy
and Civil guise. This kit
includes decals for all
three areas plus a rare
American Wartime
scheme.

ASSEMBLY GUIDE

Read this before you begin assembly.

- Wash all parts in soapy water to remove mould release agent.

- Saw parts from their sprues and clean up with a modelling knife. We strongly recommend the modeller use a knife rather than a file to trim away excess sprue endings.


- Some small parts (e.g. radio aerials, pitot tube) must be provided from the spares box.

- Two canopies are provided in case of accidents during assembly.

- Use epoxy glue whenever joining plastic to pewter parts.

- The key to success with this and all VENTURA kits is careful parts preparation before cementing, rather than using quantities of filler afterwards!

1

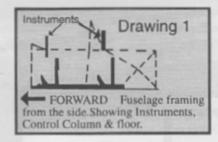


Cockpit. The Wirraway's cockpit was very similar to an early Texan / Harvard and Squadron Signals "In Action" No. 94 has two good reference photographs.

The Wirraways cockpit was rather "busy" and Drawings 2-4 are provided as a jig to build the internal fuselage tubular structure. This tubing was painted silver as were most other interior areas. Instrument panels were black and should be mounted as per the drawings Mount the front seat to the roll over structure and position the rear seat on a pedestal made from sprue. A white metal rear gun is provided, however this would have only rarely been carried by any of these peace time aircraft.


Drawing 2

FORWARD
Fuselage framing
from above

2

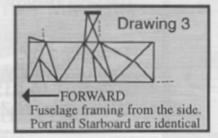


Fuselage. Cement rudder pedestal floor boards and control columns to a fore/aft rod which runs under the floor panels (refer to Drawing 1). Thin down the cockpit walls, particularly around the sills.



Colour Schemes

Australian Post War Trainer Colours

Wirraway 681 was from the last batch of machines built. It was fitted with the so called "dive bomber" wing. This had provision for an increased bomb load and dive brakes.






Colour scheme is Australia's post War trainer scheme of silver overall, black antiglare panel and yellow fuselage band. No yellow wing bands were carried during the period represented by this decal.

A20-681 on 4/12/58 at Point Cook wearing rounded style codes. The picture shows a line up of 20 Wirraways(one for every year of service) prior to a fly past over Melbourne on their last day of service with the RAAF

Below


A20-681 with "square" codes.







The Royal Australian Navy was provided with 17 Wirraways including A20-469 a CAC 9. It was taken on charge in August 1952 and struck off in 1957. Colour scheme is silver with dark blue upper fuselage decking. Our references show 469 with silver wheel hubs and silver paint over sprayed onto it's tyres!



Above The CAC 16 "dive bomber" brakes.

Produced by:-Ventura Hobby Products, P.O. Box 10-213 Wellington, N.Z. Agricultural Spraying Aircraft

In the 1950's and 60's the Super Spread Company used two CAC 16 Wirraways as topdressing aircraft, VH SSF ex A20-692 (as per this decal) and VH-SSG ex A20-696. Colour scheme was silver overall with black anti-glare panel. Propeller was all black with yellow tips.

Super Spread equipped each aircraft with P-51 Mustang 45 gallon drop tanks modified to dispense sprays through nozzles which passed through the wing and over it's trailing edge


VH-SSG had an identical colour scheme except for the lack of white in it's tail registration strip.












Spray Nozzles

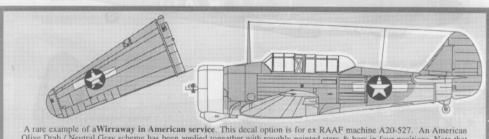


A rare example of aWirraway in American service. This decal option is for ex RAAF machine A20-527. An American Olive Drab / Neutral Gray scheme has been applied togeather with roughly painted stars-&-bars in four positions. Note that the engine cowling is white.






Ventura Also Available. Ventura's unique 1/32nd scale decals.





Two options. V3254:- New Zealand Mustangs. Two options. V3255:- Australian Mustangs. Two options. V3256:- American PR mustangs. Two options. V3257:- Israeli Mustangs. Two options.,

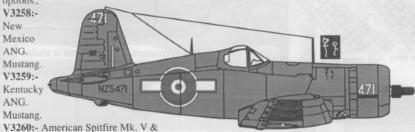

Russian PR Mk. IV. V3261:- American PR Mosquitos. Three options. V3262:- "High



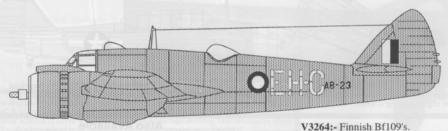



Three options. V3266:- New Zealand Corsair V3267:- Captured American Bf109F 79th, FG.